




## OUTDOOR LED LIGHT BALL



[www.elflogic.com](http://www.elflogic.com)

## PARTS LIST

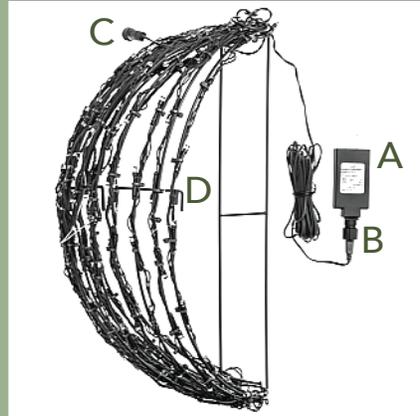

- A - Power adapter
- B - Male adapter
- C - Female adapter
- D - Swinging connector arm



[www.elflogic.com](http://www.elflogic.com)

## INSTRUCTIONS

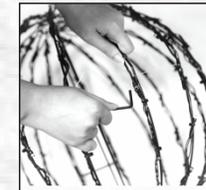


Diagram 1

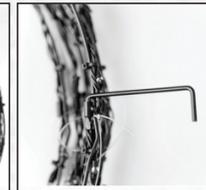


Diagram 2



Diagram 3

### Assemble Ball

- STEP 1** Take opposite sides of ball and pull toward each other (Diagram 1).
- STEP 2** Take the swinging arm (Part D) from one side and lock it into place on the opposite side in the small tube (Diagram 2 & 3).
- STEP 3** Repeat this step on the opposite side of ball.
- STEP 4** Plug in power source (Part A).
- STEP 5** (optional if you have a model with a timer feature). If your model has a timer feature then the lights will turn on for 6. hrs and turn off for 18 hrs. once plugged into an outlet.



### Storing Ball

To store your LED Ball: Unlock the arms (Part D) and fold the orb in half like the photo shows.

# IMPORTANT SAFETY INSTRUCTIONS



Welcome to Elf Logic®

## INNOVATIVE HOLIDAY PRODUCTS

### WHEN USING ELECTRICAL PRODUCTS, BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING:

1. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
2. This is a seasonal use product and is not intended for permanent installation or use.
3. Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
4. Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
5. Do not let lights rest on the supply cord or on any wire.
6. Unplug the product when leaving the house, when retiring for the night, or if left unattended.
7. A CAUTION - This is an electric product – not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
8. Do not use this product for other than its intended use.
9. Do not hang ornaments or other objects from cord, wire, or light string.
10. Do not close doors or windows on the product or extension cords, as this may damage the wire installation.

11. Do not cover the product with cloth, paper or any material not part of the product when in use.
12. This product has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless plug can be fully inserted. Do not alter or replace the plug.
13. Always unplug this product before installing or replacing lights.
14. Read and follow all instructions that are on the product or provided with the product.
15. Save these instructions.

### USE AND CARE INSTRUCTIONS

Before using or reusing, inspect the product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the light holders or enclosures, loose connections, or exposed copper wire. When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires. When not in use, store neatly in a cool, dry location protected from sunlight.