




YOSE POWER CO.,LTD

Add: Changxing County, Zhejiang Province, China. E-mail:[service@yosepower.com](mailto:service@yosepower.com)

## Install the front wheel

1. Take out the rear motor wheel and the nuts.

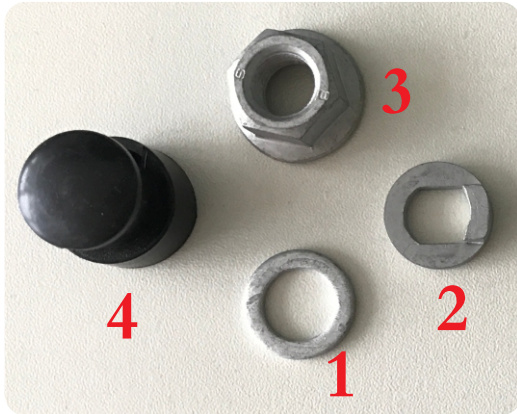

1 is shim 2 is washer (with part bulge)

3 is nut 4 is rubber cover


2. Front wheel installation. (Pay Attention: please use the screws from my motor to fasten the disc)

1). Place the washer (with part bulge), shim, and nut one by one into both sides of motor axle.





2).Put the front wheel on the front fork. Place the shim and washer between the motor and the fork,then use the wrench to tighten the nut.(the washer bulge need to lock the fork rabbet)

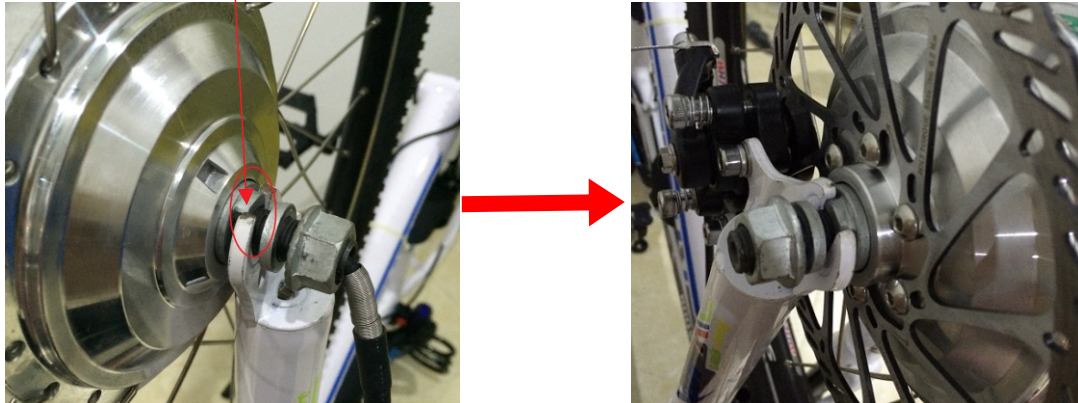

## Install Brakes, Throttle and LCD display

1.Take down the original grips and brake levers with tools.

