

# Audi A6

## Current Flow Diagram

**No. 14 / 1****Edition 09.2006**

### Electronic steering column lock

from model year 2005

#### Notes:

For information concerning

- ◆ Position of relays and fuses
- ◆ Multi-pin connections
- ◆ Control units and relays
- ◆ Earth connections

→ List of Fitting Locations!

For information concerning


- ◆ Fault Finding Programs

→ guided fault finding

## Audi A6

## Current Flow Diagram

No. 14 / 2

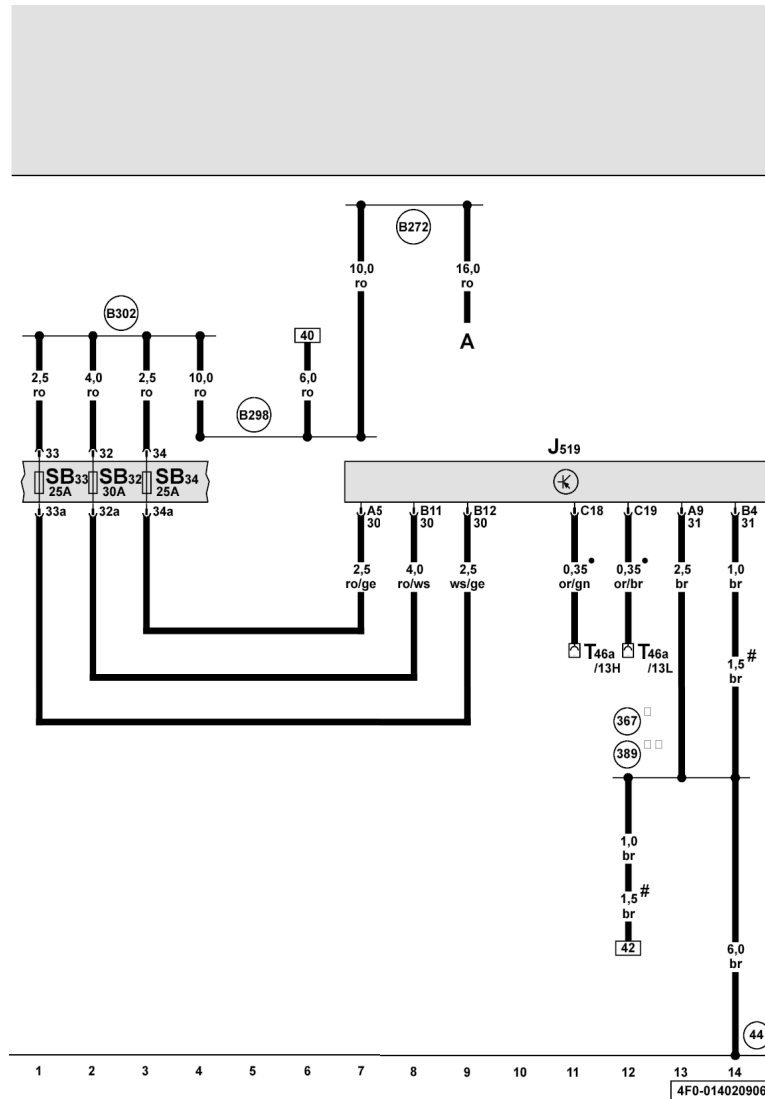

## Onboard power supply control unit, fuses

- A - Battery
- J519 - Onboard supply control unit
- SB32 - Fuse 32 on fuse holder B
- SB33 - Fuse 33 on fuse holder B
- SB34 - Fuse 34 on fuse holder B
- T46a - 46-pin connector, CAN separating connector left
- 44 - Earth point, lower part of left A-pillar
- 367 - Earth connection 2, in main wiring harness
- 389 - Earth connection 24, in main wiring harness
- B272 - Positive connection (30), in main wiring harness
- B298 - Positive connection 2 (30), in main wiring harness
- B302 - Positive connection 6 (30), in main wiring harness
- - CAN bus (data wire)
- \* - up to October 2005
- \*\* - from November 2005
- # - from model year 2007

 
ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = purple  
 ge = yellow  
 or = orange  
 rs = pink

1 2 3 4 5 6 7 8 9 10 11 12 13 14  
 4F0-014020906

Audi A6


Current Flow Diagram

No. 14 / 3



Onboard supply control unit, steering column adjustment motor, steering column adjustment sender

- G357 - Steering column vertical adjustment sender
- G358 - Steering column axial adjustment sender
- J519 - Onboard supply control unit
- T8b - 8-pin connector, black, behind steering column trim
- V123 - Steering column vertical adjustment motor
- V124 - Steering column axial adjustment motor
- B473 - Connection 9, in main wiring harness

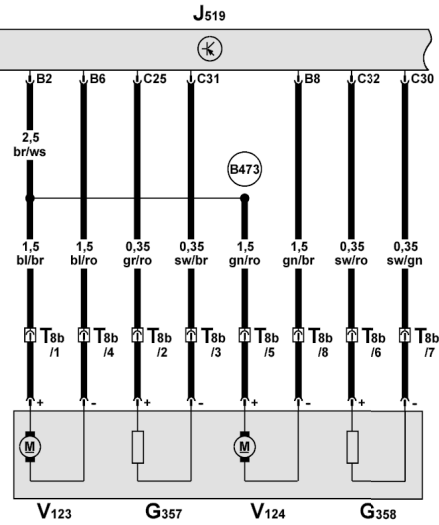


ws = white  
sw = black  
ro = red  
br = brown  
gn = green  
bl = blue  
gr = grey  
li = purple  
ge = yellow  
or = orange  
rs = pink

## Audi A6

## Current Flow Diagram

## No. 14 / 4

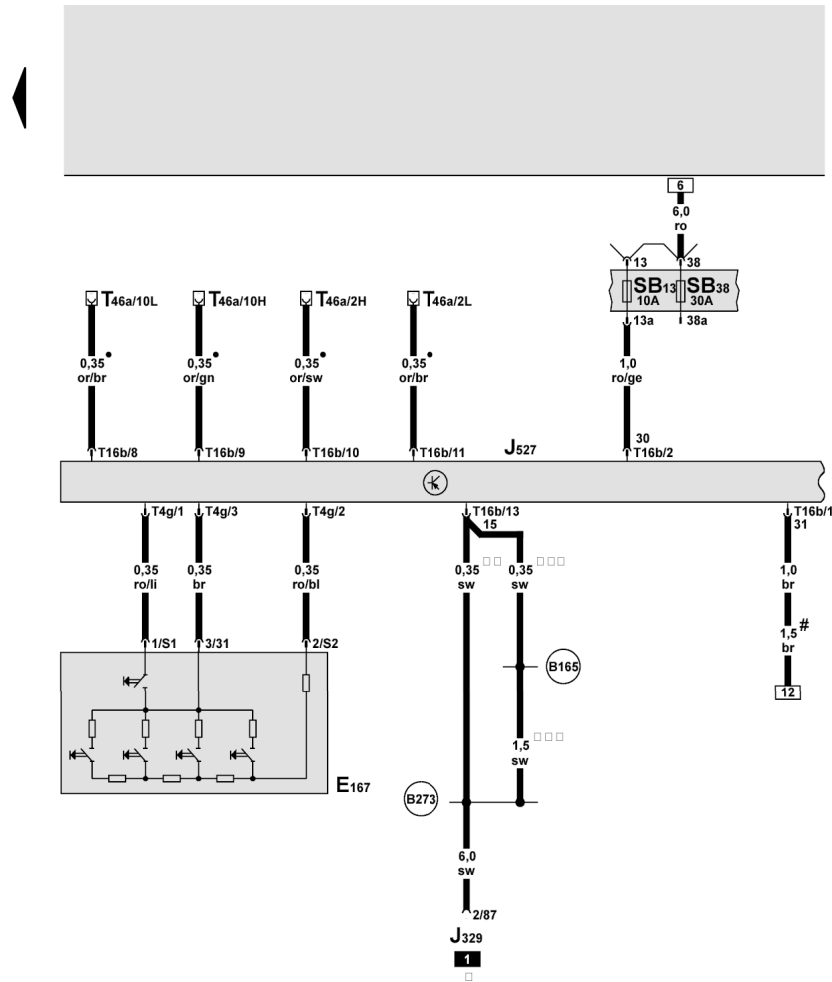

## Steering column electronics control unit, steering column adjustment switch

- E167 - Steering column adjustment switch
- J329 - Terminal 15 voltage supply relay
- J527 - Steering column electronics control unit
- SB13 - Fuse 13 on fuse holder
- SB38 - Fuse 38 on fuse holder
- T4g - 4-pin connector, black, behind steering column switch trim
- T16b - 16-pin connector, behind steering column switch trim
- T46a - 46-pin connector, CAN separating connector left
- B165 - Positive connection 2 (15), in interior wiring harness
- B273 - Positive connection (15), in main wiring harness

- - CAN bus (data wire)
- \* - 9-point relay carrier, behind driver storage compartment
- \*\* - up to October 2005
- \*\*\* - from November 2005
- # - from model year 2007

ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = purple  
 ge = yellow  
 or = orange  
 rs = pink