

CONTROL: TIMING BELT

OBLIGATED : Follow the regulations for safety and cleanliness.

1. Tools

Tools	Reference	Description
[0109-6]  Image: E5AB29ET	[0109-6]	Check template for the width of the timing belt

2. Checking the timing belt

2.1. Engine with indirect injection

Remove the engine oil filler cap.

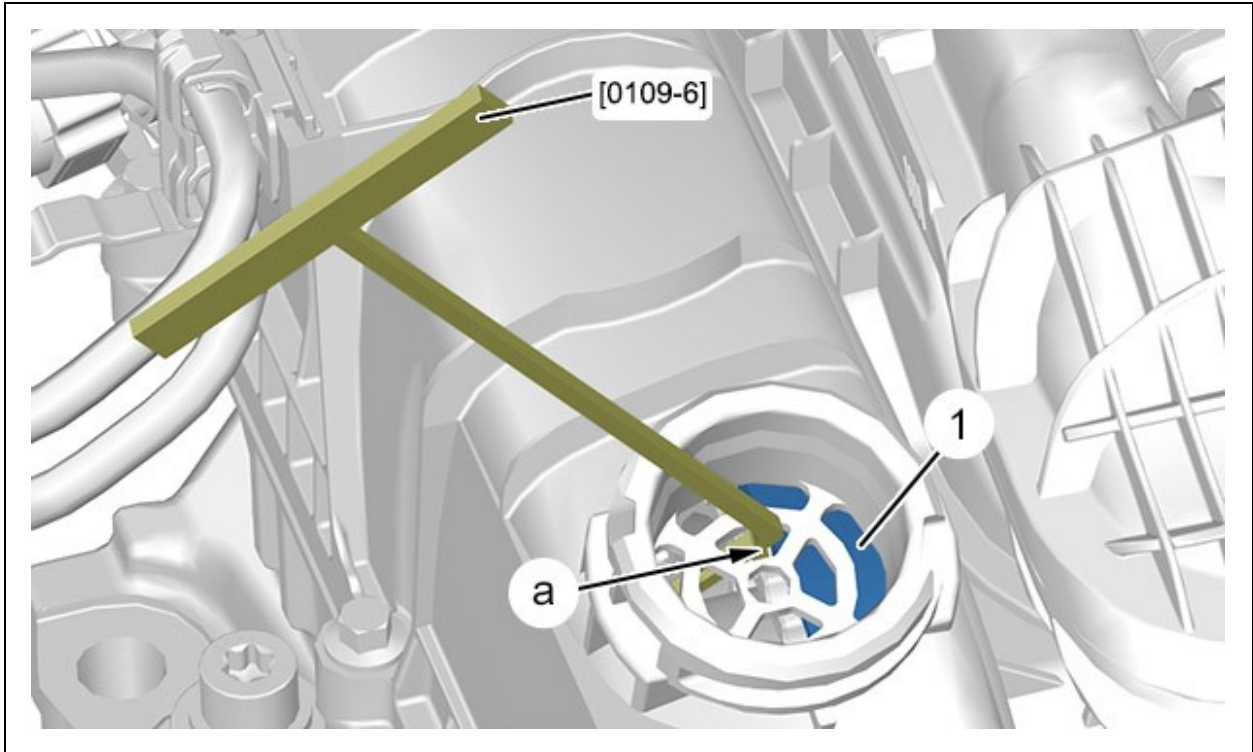


Image: B1ED0IDD

Place the timing belt width check gauge [0109-6] (at "a").
Turn the timing belt width check gauge [0109-6] so that it is above the timing belt (1).

2.2. Direct injection engine

Remove the engine oil filler cap.


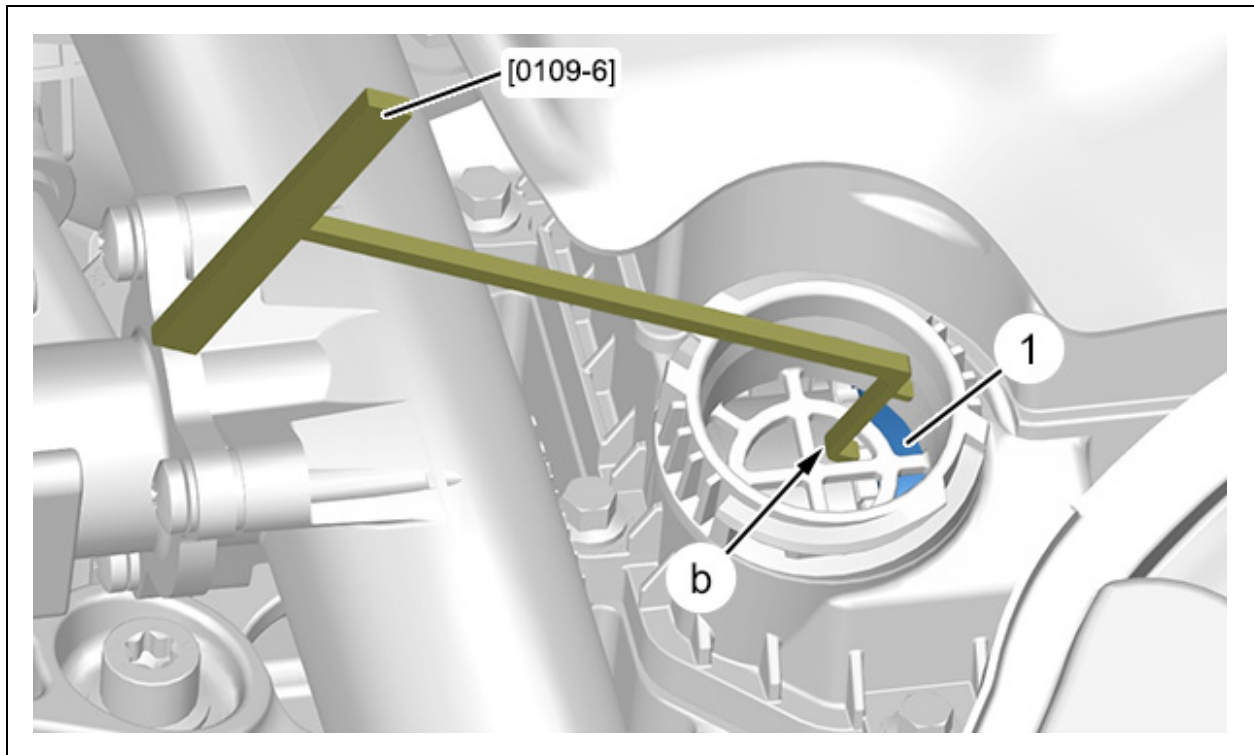



Image: B1ED0IFD

Place the timing belt width check gauge [0109-6] (at "b").
Turn the timing belt width check gauge [0109-6] so that it is above the timing belt (1).

2.3. General operations

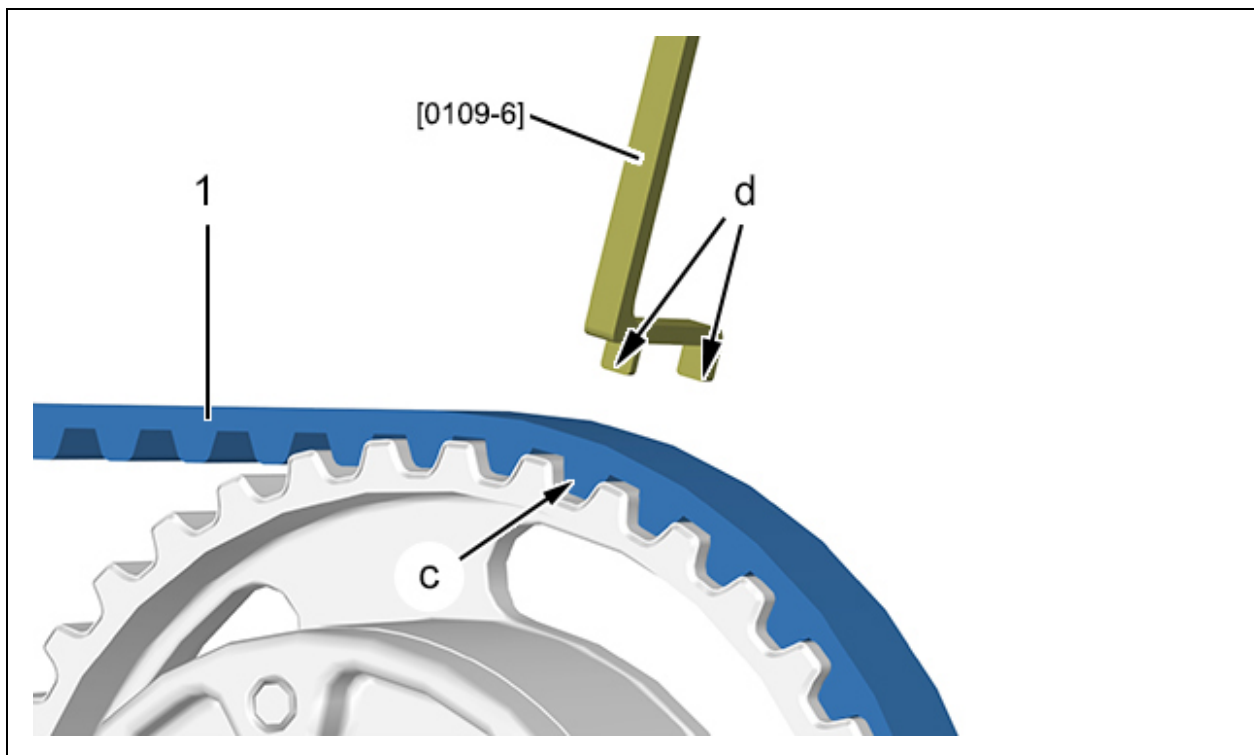

The cams (at "d") of the timing belt width check gauge must be placed on a tooth of the timing belt (1) (at "c").

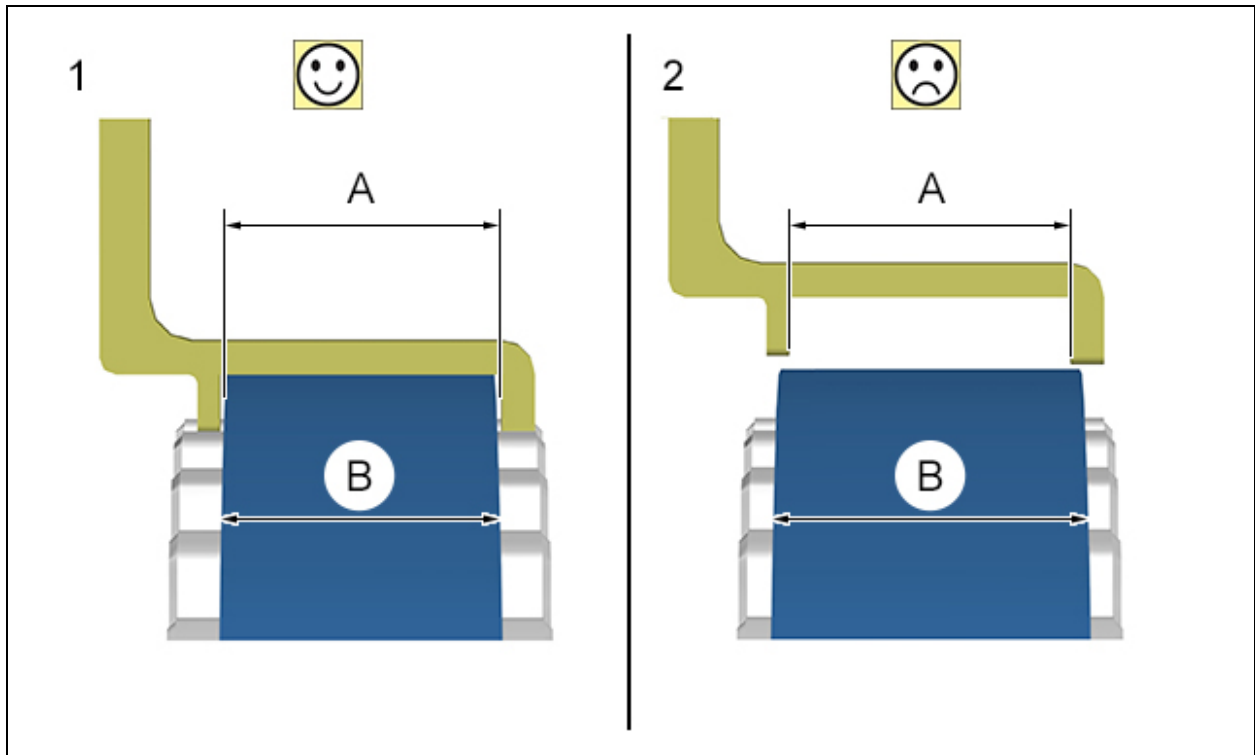

1st case: The width "A" of the tool [0109-6] must be greater than or equal to the width "B" of the timing belt; The timing belt is OK: Remove the tool [0109-6]; Replace the engine oil filler cap. 2nd case: The width "A" of the tool [0109-6] is smaller than the width "B" of the timing belt; The timing belt is not OK:

- Engine with indirect injection: **Replace the timing belt**
- Direct injection engine: **Replace the timing belt**

