How to Change Oil in Toro and Honda Lawn Mower?



The lawn mower needs to be taken care of just as you take care of your used vehicle on a regular basis. And oil changing is best for those caring. You know regular oil changes will simultaneously increase the efficiency and durability of a lawn mower.

If you frequently use your <u>Toro</u> and Honda lawn mower at a higher temperature, it is recommended to change the oil after a few day's intervals.

The Process To Change Oil In Toro And Honda Lawn Mower:

When you are using the lawn mower regularly, it is advisable to change the oil after 20-50 hours. It may take approximately 15-20 minutes to change the oil.

Before changing the engine oil, collect the user manual of the lawn mower that you used. Carefully go through the user manual to avoid any kind of unforeseen accident.

Materials required:

- 1. Engine oil
- 2. Oil pan
- Screwdriver
- 4. Air compressor or clean towel
- Hand gloves

Steps to follow:

Step 1: Get the lawn mower ready for an oil change.

- Turn the engine on and heat it well. This will increase the flow of oil and make it easier to remove the oil.
- Use an air compressor or a clean towel to wipe well around the oil insert area.

Take an oil pan to collect the oils that are already in the mower oil tank.

Place the oil pan just below the oil drain pipe.



Remove the lid mounted on the mouth of the oil drain pipe.

Step 2: Pour out the old oils.

- Tilt the lawn mower a little to the side so that all the oils can get out of the
- tank. Keep the lawn mower in this state for a while.
- As long as the drops of oil fall into the oil pan, leave it in that position.
- **Step 3:** Change the oil filter.

filter. However, some new types of lawn mowers have oil filters.

Not all lawn mowers have an oil

It is also good to change the oil filter when changing the engine oil. If you don't have an oil filter in your lawn mower, you can skip this step.



to-change-oil-in-toro-and-honda--