



N5001

X3500

E7300

X7302

E2000

X8005

X2200

E6500

N6510

N6500

N3502

N1500

N8600

N1100

N1600

X4100

RESET SW B

RESET SW A

X4000

CARD DETECT SW A

CARD DETECT SW B

N1000


N8000

E8000

N4920

A  
B  
C  
D  
E  
F  
G  
H

1 2 3 4 5 6 7 8 9 10 11

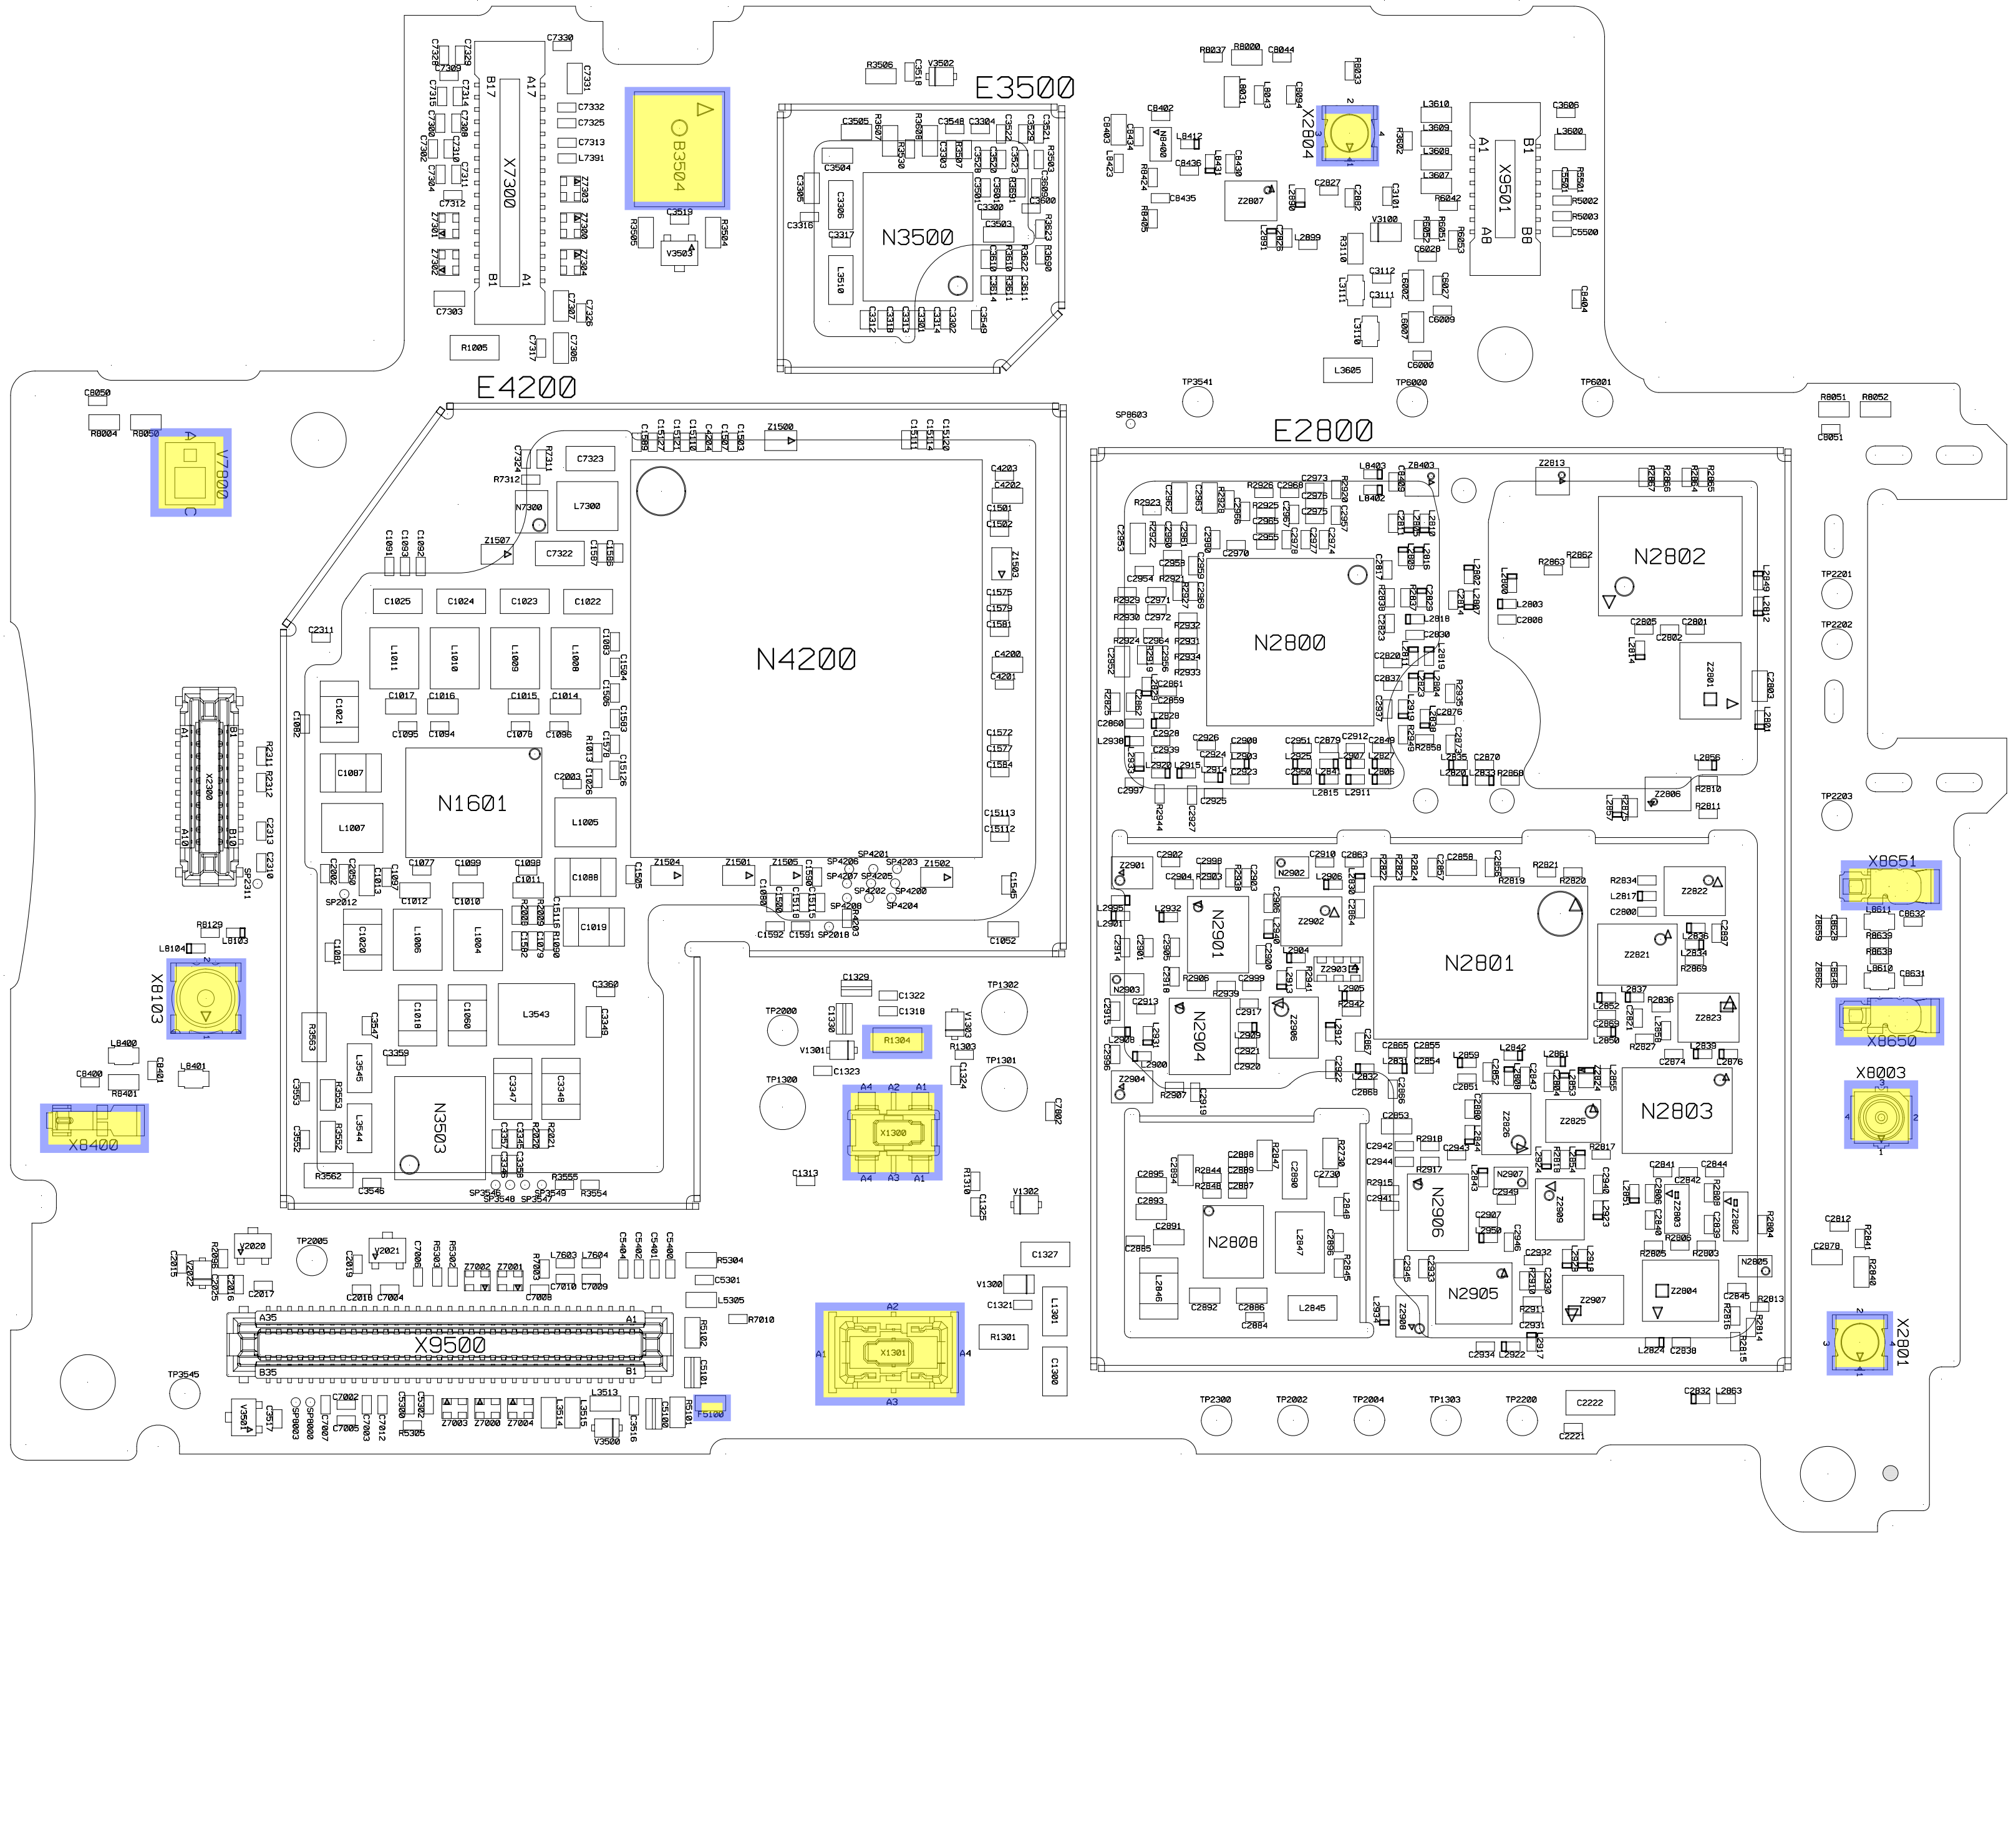

A  
B  
C  
D  
E  
F  
G  
H

1 2 3 4 5 6 7 8 9 10 11

1 2 3 4 5 6 7 8 9 10 11