


Printout


27. juli 2016 13:14

82-0840 Wiring diagram of power windows (except USA)

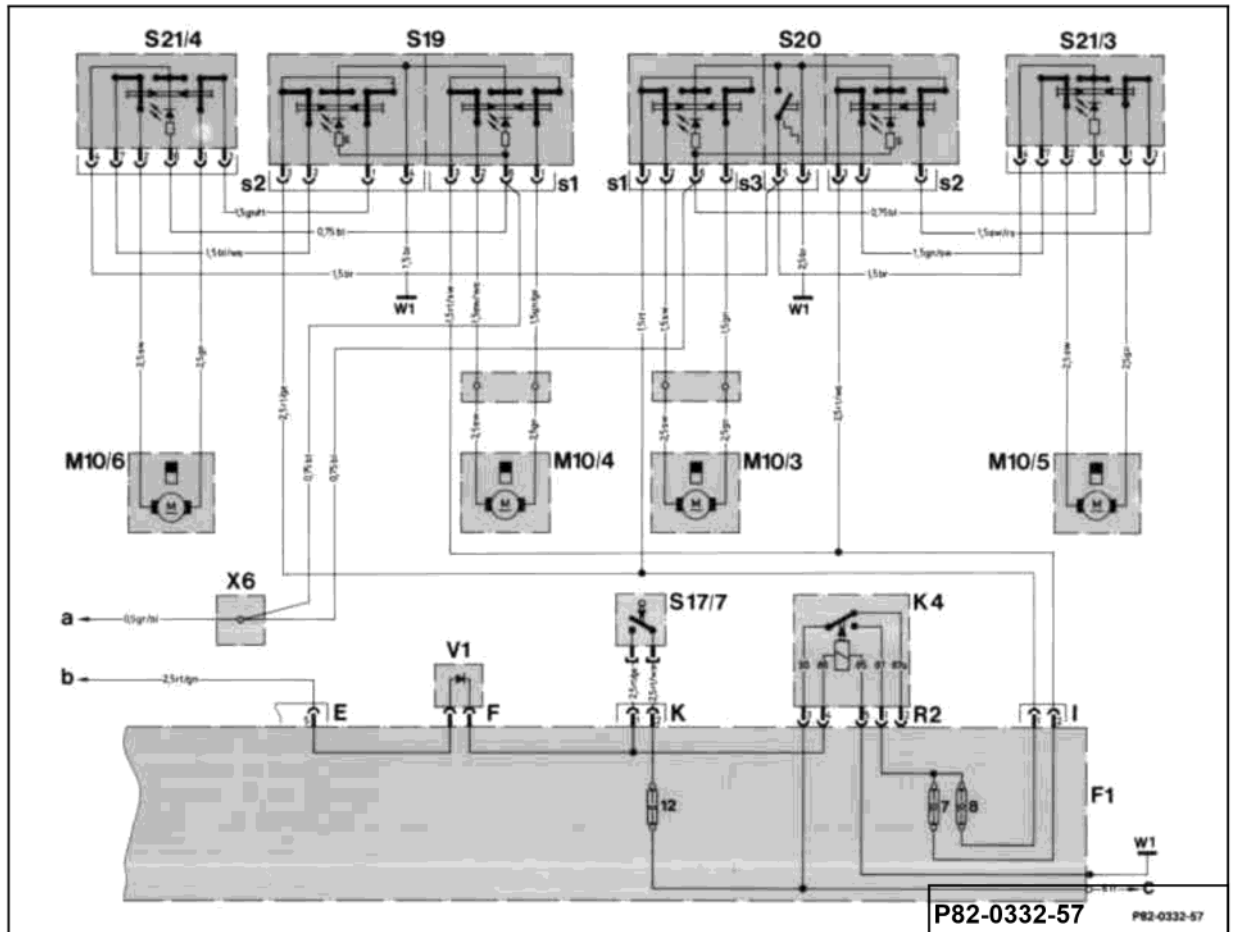

4-door models (except USA)

F1	Electrical centre	V1	Comfort control diode
K4	Power windows relay	W1	Main ground (behind instrument cluster)
M10/3	Front left power window motor	X6	Terminal block terminal 58d, 1-pin
M10/4	Front right power window motor	E	8-pin connector, wiring harness to ignition starter switch S2/1
M10/5	Rear left power window motor	I	2-pin connector, wiring harness to power window switch group S19 and S20
M10/6	Rear right power window motor	K	2-pin connector, wiring harness to left door contact switch, comfort control S17/7
S19	Right power window switch group	a	To instrument illumination rheostat A1r1
S1s1	Front right window switch	b	To ignition starter switch S2/1
S1s2	Rear right window switch	c	To terminal block X7 engine
S20	Left power window switch group		
S20s1	Front left window switch		
S20s2	Rear left window switch		
S20s3	Rear power windows safety switch		
S21/3	Rear left window switch		
S21/4	Rear right window switch		

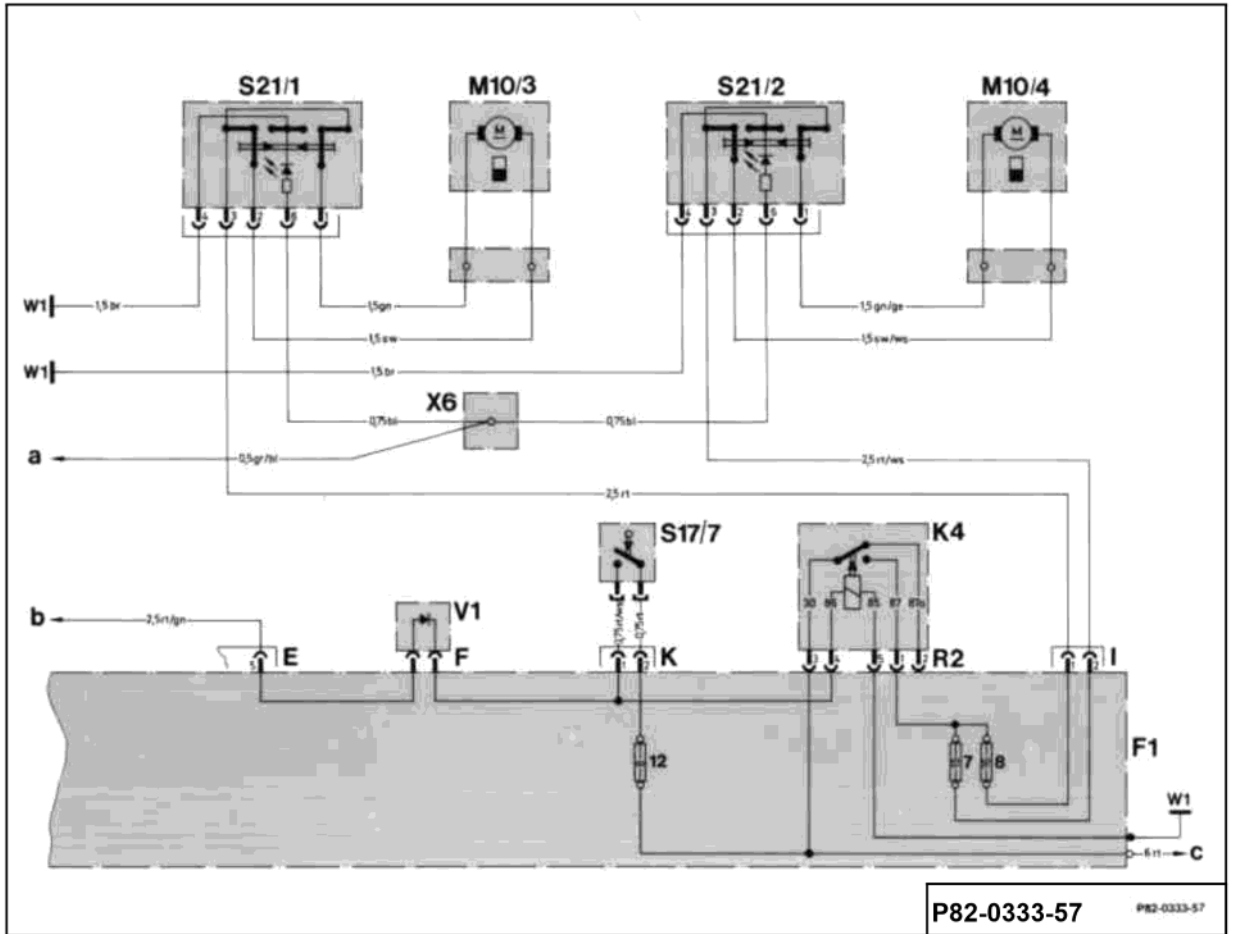

2-door models (except USA)

F1	Electrical centre	E	8-pin connector, wiring harness to ignition starter switch S2/1
K4	Power windows relay	I	2-pin connector, wiring harness to power window switch S21
M10/3	Front left power window motor	K	2-pin connector, wiring harness to left door contact switch, comfort control S17/7
M10/4	Front right power window motor	a	To instrument lighting rheostat A1r1
S21/1	Front left window switch	b	To ignition starter switch S2/1
S21/2	Front right window switch	c	To terminal block X7 engine
V1	Comfort control diode		
W1	Main ground (behind instrument cluster)		
X6	Terminal block, terminal 58d, 1-pin		