


Operation no. of job texts and work units, standard texts and flat rates:  
83-6630

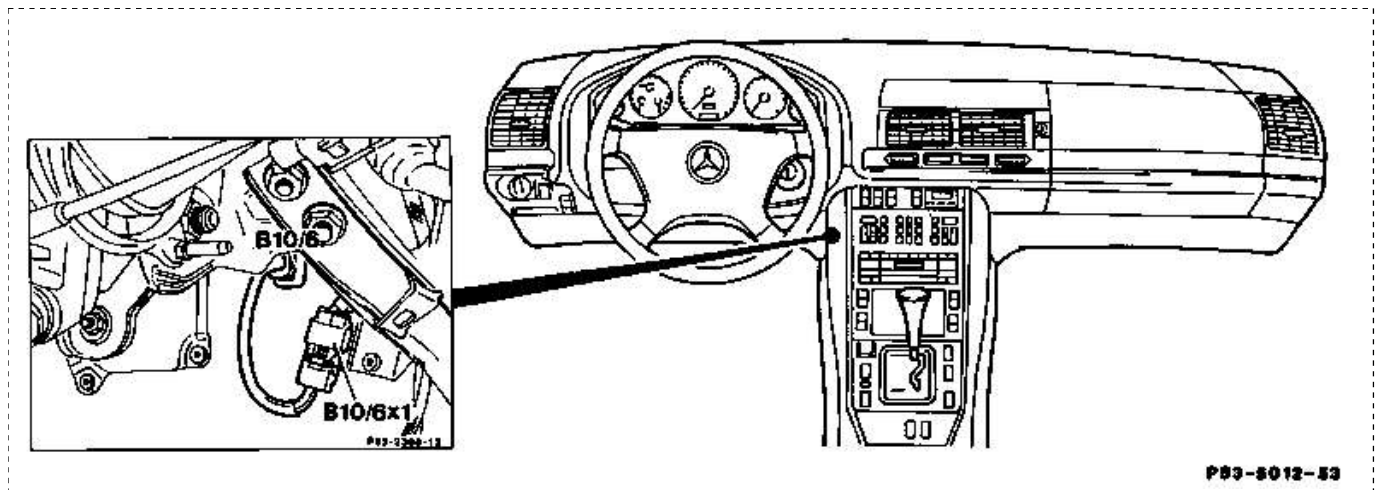

Lower section of covering under left side of dashboard.....

2-pole connector (B10/6x1).....

Evaporator temperature sensor (B10/6).....

Temperature sensor.....

Install.....

Remove (68-150).

Disconnect.

Pull out.

Check and renew if necessary.

In the reverse sequence.



Erase fault memory in the control unit  
(Diagnosis manual - air conditioning).

### Test data

Sensor temperature in °C	Resistance in kΩ
0	8.1-9.9
+ 5	6.3-7.7
+ 10	5.0-6.0
+ 15	4.0-4.6
+ 20	3.1-3.9
+ 25	2.4-3.0
+ 30	1.9-2.3
+ 35	1.6-2.0
+ 40	1.4-1.6
+ 45	1.1-1.3

### Commercially available

Multimeter

e. g. Sun, DMM-5