


Gear selector lever knob, Spaceball


Installation instruction: 30664543

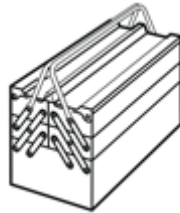



INTRODUCTION

- Read through all of the instructions before starting installation.
- Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.
- Ensure that all tools stated in the instructions are available before starting installation.
- Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.
- In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.

Gear selector lever knob,
Spaceball

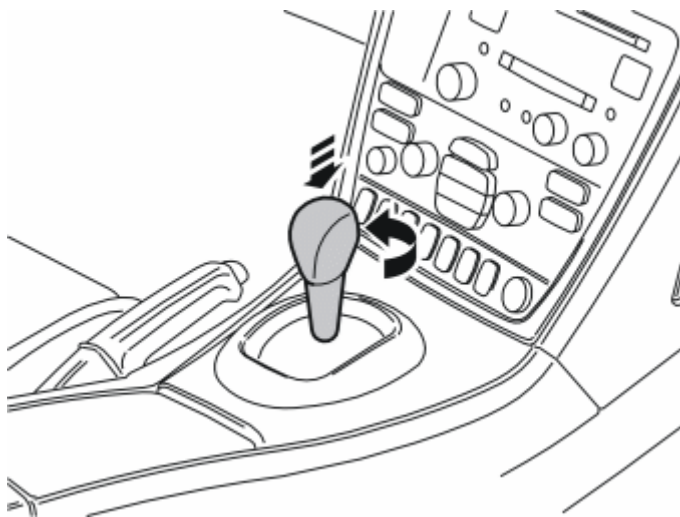

- Press the gear selector lever knob down and twist a $\frac{1}{4}$ turn to the left.

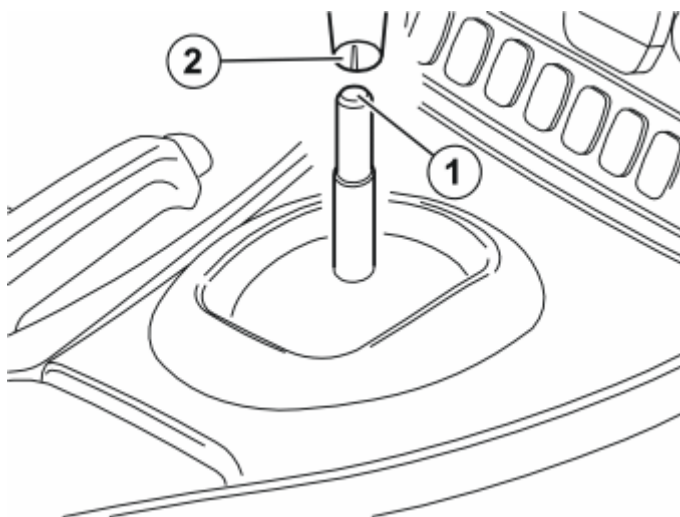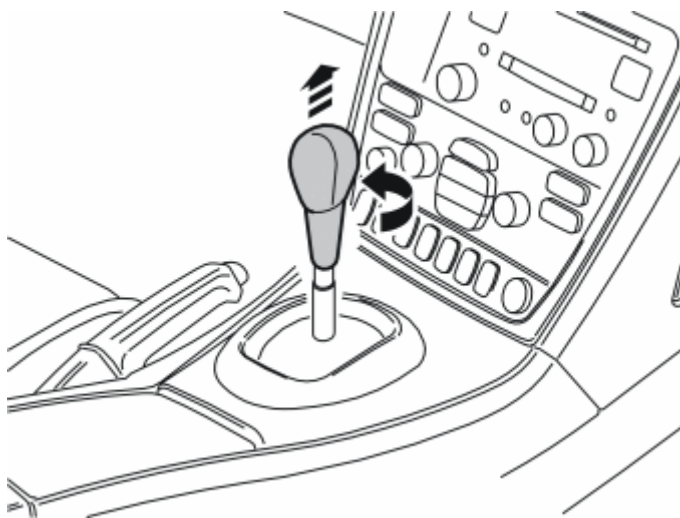

Illustrations A and B

- Pull the gear selector lever knob off the gear selector lever. It may be necessary to twist and turn the gear selector lever

knob slightly to
remove it.

Hint:

Once the gear selector lever knob has been turned 45°, push it forwards and pull from the lug (1) on the gear selector lever. The lug (1) on the gear selector lever can only be inserted diagonally through the hole in the lower section (2) of the gear selector lever knob.

- Install the new gear selector lever knob on the gear selector lever. Once turned a ¼turn to the left, press down and twist straight forward
- Pull the gear selector lever knob to check that it is secure.


Top panel gear selector assembly, replacing

Note! As the illustrations in this service information are used for different model years and / or models, some variation may occur. However, the essential information is always correct.


Removal

Removing gear selector lever knob

Press down gear selector lever knob. At the same time turn a quarter of a turn to the left. Pull the gear selector lever knob straight up.

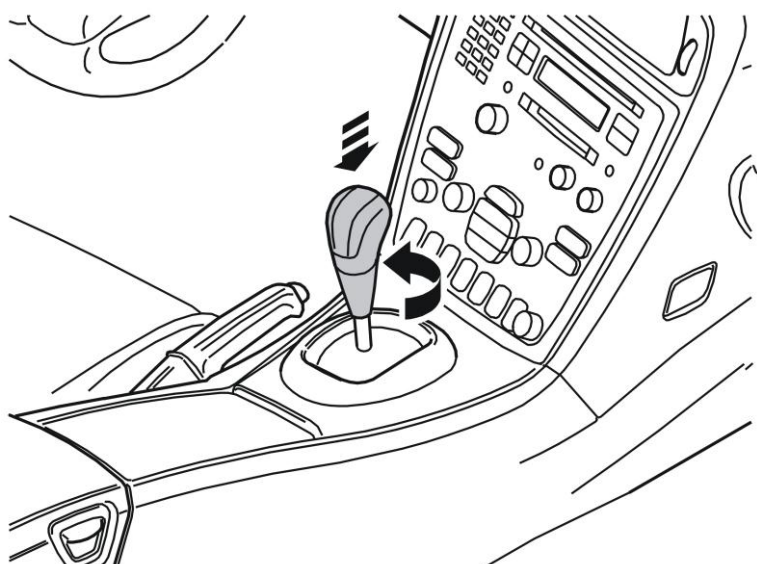

Removing the top panel

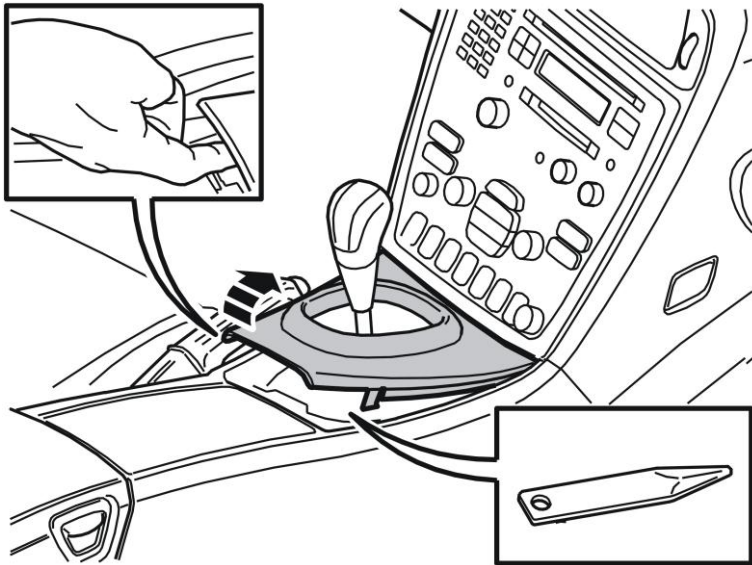


Lift up the panel at the rear edge.
Then carefully detach the front
edge.

Removing the space ball from the center console

**Note! See where the mountings
are in the center console.**


Press the rear catch and lift the
spaceball up slightly. Twist the
spaceball out of its mountings.
Move the gear selector lever to 5th
gear.

Carefully lift the **spaceball** out of
the center console and over the
gear selector lever. Remove the
spaceball.

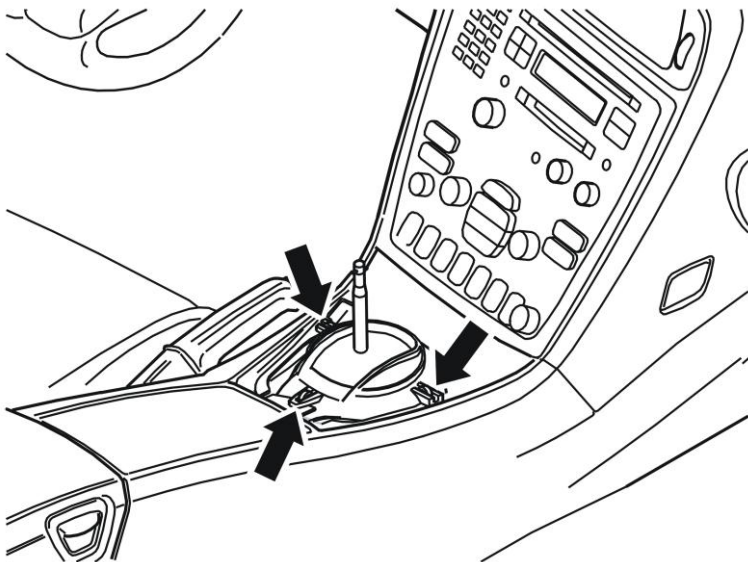

Installation


Installing the **spaceball** in the
center console

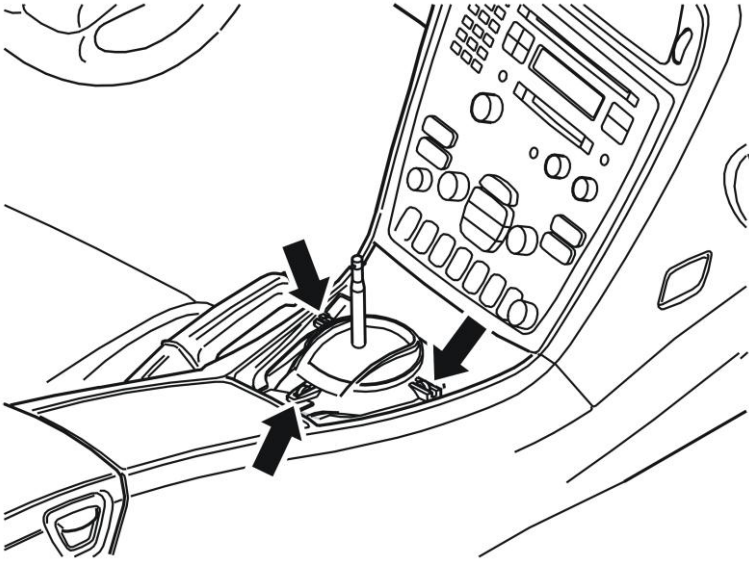


Install the **spaceball** over the gear selector lever.
Move the **spaceball** carefully into the center console. Move the gear selector lever to 5th gear.
Install the **spaceball** in the front mountings first and lock them using the rear mounting.

Installing the top panel

Install the top panel on the center console.

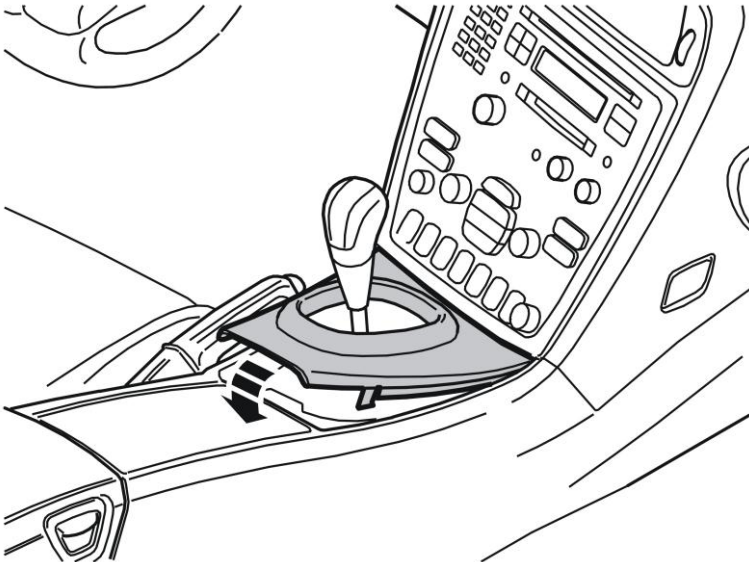

Installing gear selector knob

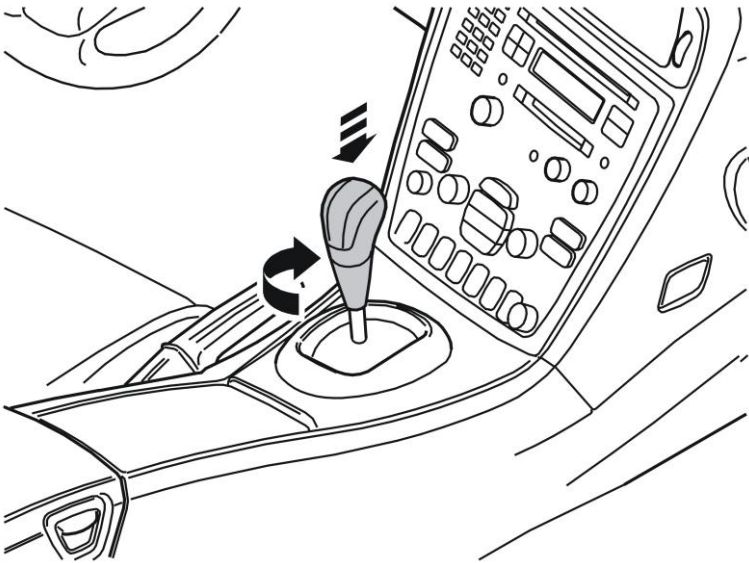

Install the gear selector lever knob on the gear selector lever. Press the gear selector lever knob down. At the same time turn a quarter turn to the right.

Check the gear selector lever position in the space ball. It should be in the middle of the space ball. If the gear selector lever is not in the correct position, check the transmission cable. See [Gearbox cable, adjusting](#) .