




OUTDOOR LED LIGHT BALL

WITH BATTERY TIMER



www.elflogic.com

PARTS LIST

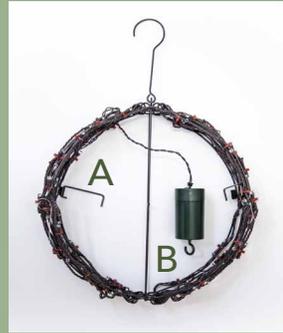

- A - Swinging connector arm
- B - Battery operated timer

TIMER INSTRUCTIONS



The timer system is designed to light up for 6 hours and turn off for 18 hours.

- a. If you would like to use the timer, press the button at the top of the battery timer. The ball will light up and stay on for 6 hours and turn off for 18 hours, repeating the process.
- b. If you wish to simply turn on the ball, press the button twice.
- c. If you want to turn off the light ball, press the button three times.



www.elflogic.com

INSTRUCTIONS

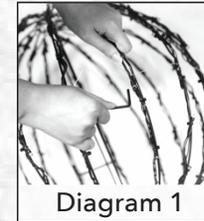


Diagram 1



Diagram 2



Diagram 3

Assemble Ball

- STEP 1** Take opposite sides of ball and pull toward each other (Diagram 1).
- STEP 2** Take the swinging arm (Part A) from one side and lock it into place on the opposite side in the small tube (Diagram 2 & 3).
- STEP 3** Insert (3) AAA batteries into the battery timer. The timer system is designed to light up for 6 hours and turn off for 18 hours. Batteries not included.
- STEP 4** Repeat Step 2 on the opposite side of the ball to close ball and make a sphere. Make sure battery timer is inside of sphere, and if possible, hang the timer to top of inside of sphere with hook provided.



Storing Ball

To store your LED Ball: Unlock the arms (Part A) and fold the orb in half like the photo shows.

IMPORTANT SAFETY INSTRUCTIONS



Welcome to Elf Logic®

INNOVATIVE HOLIDAY PRODUCTS

WHEN USING ELECTRICAL PRODUCTS, BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING:

1. This is a seasonal use product and is not intended for permanent installation or use.
2. Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
3. Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
4. Do not let lights rest on any supply cord or electrical cords.
5. CAUTION - This is an electric product – not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
6. Do not use this product for other than its intended use.
7. Do not hang ornaments or other objects from cord, wire, or light string.
8. Do not cover the product with cloth, paper or any material not part of the product when in use.
9. Read and follow all instructions that are on the product or provided with the product.
10. Save these instructions.

USE AND CARE INSTRUCTIONS

Before using or reusing, inspect the product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the light holders or enclosures, loose connections, or exposed copper wire. When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires. When not in use, store neatly in a cool, dry location protected from sunlight.

Requires (3) AAA Batteries - BATTERIES NOT INCLUDED.