

- 65 Selector lever
- 95 Release button



N27.60-2074-06

If it is not possible to engage a drive position from selector lever position "P" due to a mechanical or electrical/electronic fault, the selector lever position "P" lock can be released using the shift lock override function.

To do this, the selector lever edging must be raised and the release button (95) under it pressed using a suitable tool. The selector lever position "P" lock is released via a bolt in the lock solenoid valve. The selector lever (65) can be shifted out of selector lever position "P" when operated simultaneously.

	R/P lock, location / task / design / function		GF27.60-S-5103S
	Parking lock, location / task / design / function		GF27.10-S-5100S