

Erica Synths Black Wavetable VCO

Wave banks guide / Cheat Sheet

Program	LEDs	Name	CV Input (hold bank button)	
0	○○○○	Classic Waves	LED 1 blinks	FM CV
1	○○○●	Saw/Square Octaves	LED 2 blinks	Bank Surf
2	○○●○	FM	LED 3 blinks	Bitcrush CV
3	○○●●	Megawaves	LED 4 blinks	VCA
4	○●○○	Wobble		
5	○●●○	Station		
6	○●●○	Formant		
7	○●●●	Drastically different		
8	●○○○	Mega FM		
9	●○○●	Organ		
10	●○●○	Spectral		
11	●○●●	Acid		
12	●●○○	Grit		
13	●●●○	Electricity		
14	●●●○	FM Bells		
15	●●●●	Digital		



WAVETABLES:

0000: 01: Basic Classic (Sine, Pulse, Saw, etc)
000x: 02: Saw + Square Octaves (good for arpeggio-like sweeps)
00x0: 03: Classic FM
00xx: 04: Megawatts (classic wavetables)
0x00: 05: Vowel (voice like timbres)
0x0x: 06: Station (Wavestation waves)
0xx0: 07: Formant
0xxx: 08: Drastic (wildly different wave shapes)
x000: 09: Mega FM (more harmonics than classic FM)
x00x: 10: Organ
x0x0: 11: Spectral
x0xx: 12: Acid (303 style)
xx00: 13: Grit (Fast changing slopes)
xx0x: 14: Electricity
xxx0: 15: FM Bells
xxxx: 16: Digital

CV CONTROL:

Hold BANK for two seconds to assign CV Control. Bank LEDs flash. Press BANK button to cycle between selections: After 5 sec, unit returns to normal operation.

x000: CN IN is FM
0x00: CV IN is BANK SURF (Bank Button disabled)
00x0: CV IN is BITCRUSH
000x: CV IN is VCA