

URC-A6 Remote Control Owner's Manual



Congratulations!

Congratulations on purchasing Universal Remote Control's URC-A6 Pre-Programmed and Learning remote control. You now have the power to control your entire home entertainment system with one easy-to-use remote. The URC-A6 can be used with thousands of audio/video components because of the extensive library of codes that have already been programmed into the remote. So... get ready to sit back, relax, and simplify your home entertainment experience.

This Owner's Manual is designed to assist you in programming your URC-A6 remote to work with your components by guiding you through an easy step-by-step process. Everything you need to know about programming the URC-A6 is contained in this Manual.

URC-A6 Owner's Manual © 2009 Universal Remote Control, Inc.

This document is protected by the copyright laws of the United States and internationally by the Berne Convention. No part of this manual may be reproduced in any form without the express written consent of Universal Remote Control, Inc. Although reasonable care has been taken to assure the accuracy of the information herein contained, Universal Remote Control, Inc. is not responsible for operational, technical or editorial errors or omissions.

The specifications and information in this manual may be subject to change without notice. MacroPower and SimpleSound are trademarks of Universal Remote Control, Inc. Entertainment Made Simple is a registered trademark of Universal Remote Control, Inc. All other brand or product names are trademarks or registered trademarks of their respective owners.



500 Mamaroneck Avenue, Harrison, NY 10528
Phone: (914) 835-4484 Fax: (914) 835-4532

Table of Contents

Getting Started - Overview

- Control up to 6 Components4
- Component Buttons4
- Battery Installation4
- Low Battery Warning5
- Couch Mode5

Keypad Layout & Button Functions6

Programming URC-A6 Using Pre-Programmed Codes7

- Quick Set-Up Method7
- Three-Digit Code Entry Method9
- Auto-Search Method11

Programming URC-A6 Using the Learning Method13

Special Advanced Features15

- Programming Automated Activities15
- MacroPower Total System On/Off15
- Programming Multi-Commands to Macro Buttons17
- "My Favorites" – Favorite Channels18
- More Favorite Channels19
- SimpleSound™ Total System Volume Control20
- Channel Control "Punch Through"22
- Transport Control "Punch Through"23
- OSD (On-Screen Display) Control "Punch Through"24
- Input Switching Macros25

Erasing Commands-Overview26

- Erasing a Single Learned Command26
- Erasing All Learned Commands from One Component27
- Erasing MacroPower & Other Macro Commands28
- Erasing SimpleSound & Other "Punch Through" Commands29
- Factory Reset30

Finding a Component's Set-Up Code Number31

Pre-Programmed Code Tables32

- CABLE/SAT33
- TV34-35
- DVD/DVR/VCR36
- AUDIO37
- AUX38
- LIGHTS39

FAQs40

Warranty42

Specifications42

Information To The User44

Warnings44

Getting Started - Overview


Control up to 6 Components

The URC-A6 remote control is designed to control up to six different Audio/Video components and operate virtually all brands of AUDIO, TV, DVD/DVR/VCR, CBL/SAT, LIGHTS and AUX(Game, Music server, etc.) components.

Component Buttons


Once you have programmed the URC-A6 for all of your components, all you need to do is press a component button and all the buttons on the URC-A6 will work with that component. For example, when you press the TV component button, all the buttons on your URC-A6 will operate your TV. If you press the DVD component button, all the buttons on the URC-A6 will operate your DVD.

Each time you press any of the buttons on the remote, the LED light in the component button will light up to indicate which component you are controlling.

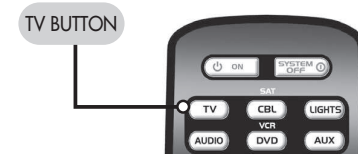

Battery Installation

Press the tab and remove the cover of the battery compartment located in the back of your remote. Insert the two AAA batteries (included in the package) making sure to match the positive (+) and negative (-) symbols as shown in the diagram. Place the cover back over the battery compartment.

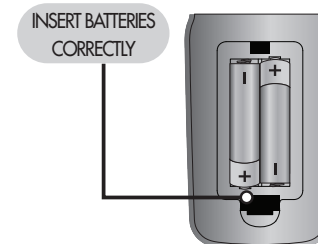


Low Battery Warning

When the batteries are low and need to be replaced the component LED will quickly blink three times when you press the Power [ON] button.

Couch Mode

The URC-A6 is designed to automatically turn itself off if a button is pressed for more than 30 seconds. This prevents battery power from being depleted should the remote accidentally slip between the couch cushions.

Keypad Layout & Button Functions

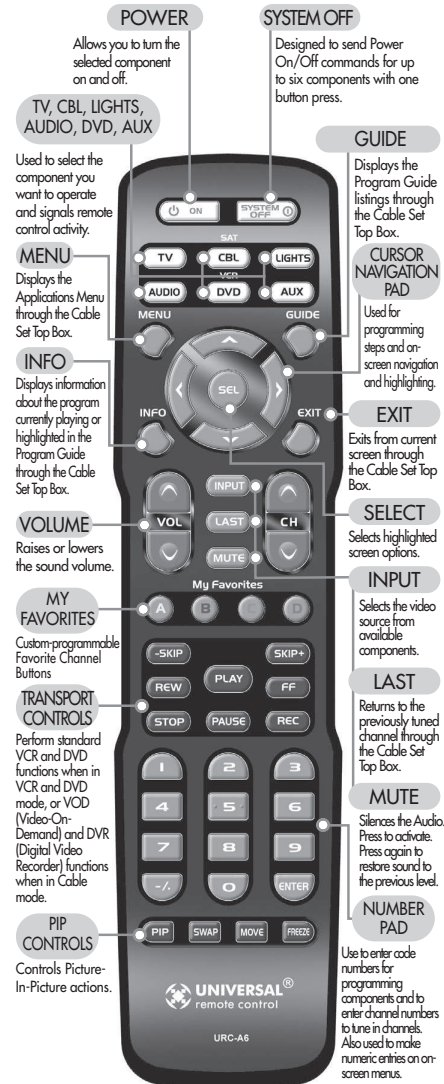

Programming URC-A6 using Pre-Programmed Codes

There are three different ways you can program your URC-A6 using the component brand codes that are pre-programmed into the remote. One of these will work for you!

- Quick Set-Up Method
- Three-Digit Code Entry Method
- Auto-Search Method

TRY THIS FIRST!

Quick Set-Up Method

STEP 1: Manually or using your old remote, turn on the component you want to program—for example, to program your TV, turn on your TV set.

STEP 2: Point the URC-A6 toward the component that you want to program (in this case the TV set) and press and hold the component button (in this case the TV button). **While holding down the component button**, begin to press the numeric assigned to your brand in the Quick Set-up Code Table (See Page 8). The component should turn off as soon as the number key is pressed. (If it does not turn off, release the component button and use the Pre-Programmed 3-Digit code Method or Scanning Method.)

STEP 3: Release the component button to save the code. The component LED light will blink three times to confirm that the code has been stored.

Repeat the above three steps for other components.



Quick Set-up Code Tables

TV		AUX	
Quick Number	Manufacturer/Brand	Quick Number	Manufacturer/Brand
0	SANYO	0	BOSE
1	SONY	1	HP
2	SAMSUNG	2	ONKYO
3	LG	3	APPLE / iPad
4	TOSHIBA	4	MICROSOFT / XBOX
5	PANASONIC	5	SONY / PS2
6	PHILIPS	6	LUTRON
7	HITACHI	7	X-10
8	SHARP	8	YAMAHA
9	VIZIO	9	ROKU

CBL/SAT	
Quick Number	Manufacturer/Brand
0	LG
1	SCIENTIFIC ATLANTA
2	MOTOROLA
3	DIRECTV
4	ECHOSTAR
5	MOXI
6	CABLEVISION
7	SAMSUNG
8	GE
9	JERROLD

LIGHTS	
Quick Number	Manufacturer/Brand
0	RAKO
1	LUTRON PERSONNA
2	LUTRON MAESTRO
3	LUTRON DUAL RANIA
4	COLORADO VNET
5	CYRON
6	X-10
7	RAKO
8	LEVITON
9	LIGHTOLIER CONTROLS

AUDIO	
Quick Number	Manufacturer/Brand
0	ROTEL
1	DENON
2	YAMAHA
3	MARANTZ
4	SONY
5	INTEGRA
6	HARMAN KARDON
7	PIONEER
8	BOSE
9	LEXICON

DVD/VCR	
Quick Number	Manufacturer/Brand
0	HITACHI
1	SONY
2	PHILIPS
3	SAMSUNG
4	PHILIPS MAGNAVOX
5	PANASONIC
6	LG
7	JVC
8	DENON
9	PIONEER

PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE

PLEASE CONTACT OUR TECHNICAL SUPPORT CENTER IF YOU NEED ASSISTANCE, E-MAIL techsupport@UniversalRemote.com or dial 1-800-901-0800 (9:00AM-6:00PM EST)

If QUICK SET-UP DID NOT WORK, TRY THIS NEXT:

Three-Digit Code Set-Up Method


STEP 1: Find the 3-digit code numbers assigned to your brand from the lists in the back of this manual. The codes are listed by component category (i.e., TV, VCR, DVD, etc.), then by brand name. For instance, if you would like to locate a code for a Sony television, first locate the TV category and then look for the Sony brand.

STEP 2: Once you have located the 3-digit codes for each of the components that you wish to operate with your URC-A6, write them ALL down on a piece of paper. It's important that you write down all the codes listed for your brand because only one code is going to work with your component.

STEP 3: Manually or using your old remote, turn on the component you want to program—for example, to program your TV turn on your TV set.

STEP 4: On the URC-A6, press the Component button that you want to program (in this case the button that says TV) and the SELECT [SEL] button at the same time. Hold down both buttons for 2 seconds until the TV Component LED light turns on. This signals that you are in programming mode.

IMPORTANT: You have 30 seconds to perform the next step while you are in programming mode. If you do not press a button within 30 seconds, the component LED light will turn off. The remote will exit the programming mode and you will have to start over.

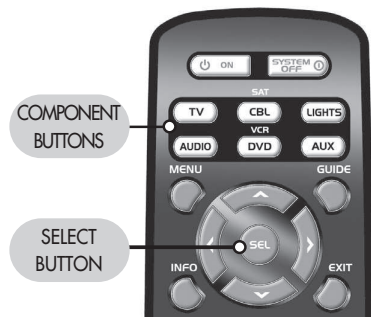

STEP 5: Point the URC-A6 toward the component (in this example the TV) and punch in the first 3-digit code that you wrote down for that specific component. Use the Number buttons 0–9 on the remote to punch in the code. The TV LED light will blink each time a number is pressed.



If the 3-digit code number you just punched in is the correct number, the component you are trying to program will turn off. If it did not turn off, enter the next code number from your list until it does turn off.

STEP 6: Once you've entered the code number and the component has turned off, press the POWER button on the URC-A6 remote to turn the component back on.

Next test the VOLUME and CHANNEL buttons (or PLAY and STOP buttons for DVD and DVR) to make sure they all work. For example, perhaps your Sony TV turned off with code number 147, but the volume controls did not work properly. In this case, try the next code number listed for that component. Repeat Step 5 using the next code number until you find a perfect match.

STEP 7: Once you've entered a correct code you must save it. Press the component button you just programmed (in this case TV) one more time to save the code number. The component LED light will blink three times to confirm that the code was successfully stored. Now when you press the TV component button, all of the buttons will work with your TV.

Program the remaining components by repeating steps 3 through 7.

IMPORTANT: If you have tried all the set-up codes in the list and the component still did not turn off after Step 5, either the Auto-Search Method (page 11) or the Learning Method (page 13) will help you program.

If the Three Digit Code did not work, try this next:


Auto-Search Method

The Auto-Search Method is a way you can scan through all of the codes in the table to find the right code for your component.

STEP 1: Manually or using your old remote, turn on the component you want to program—for example, to program your TV, turn on your TV set.

STEP 2: On the URC-A6, press the Component button that you want to program (in this case the button that says TV) and the SELECT [SEL] button at the same time. Hold down both buttons for 2 seconds until the TV Component button light turns on. This signals that you are in programming mode.

IMPORTANT: You have 30 seconds to perform the next step while you are in programming mode. If you do not press a button within 30 seconds, the component LED light will turn off. The remote will exit the programming mode and you will have to start over.

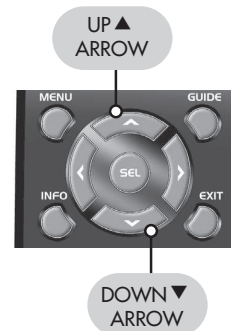

STEP 3: Point the URC-A6 remote control toward the component and press the UP ▲ arrow (or DOWN ▼ arrow) button once. Each time the UP or DOWN arrow button is pressed, the code will count up (or down) one code number and send a Power OFF signal. When the correct code is sent out, the component will turn off.

STEP 4: Once you have found the right code number and the component has turned off, press the POWER button on the URC-A6 remote to turn the component back on.

Next test the VOLUME and CHANNEL buttons (or PLAY and STOP buttons for DVD and DVR) to make sure they all work. If any of the buttons do not work properly, you need to find a new code. Continue pressing the UP (or DOWN) arrow button until you find a new code that turns off the component and makes the VOLUME or PLAY buttons respond correctly.

STEP 5: Once you have found the right code, you must save it. Press the component button you just programmed (in this case TV) one more time to save the code number. The component LED light will blink three times to confirm that the code was successfully stored. Now when you press the TV component button, all of the buttons will work with your TV.

NOTE: Use this method for those components you cannot program with either the Quick Set-Up or 3-digit Code Entry Methods.

IMPORTANT: If you cannot find the right code after 5 minutes of trying the Auto-Search Method, try the Learning Method (page 13).

PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE

PLEASE CONTACT OUR TECHNICAL SUPPORT CENTER

IF YOU NEED ASSISTANCE, E-MAIL
techsupport@UniversalRemote.com

or dial 1-800-901-0800
(9:00AM-6:00PM EST)

If Auto Search did not work, try this:

Programming URC-A6 using the Learning Method

STEP 1: Line up the URC-A6 to the remote control you want to 'learn' from, head-to-head as shown below. Make sure the heads are one to two inches apart.



STEP 2: On the URC-A6, press the Component button that you want to program (in this case the button that says TV) and the ENTER [ENT] button at the same time. Hold down both buttons for 2 seconds until the TV Component button light turns on. This signals that you are in programming mode.

IMPORTANT: You have 30 seconds to perform the next step while you are in programming mode. If you do not press a button within 30 seconds, the component LED light will turn off. The remote will exit the programming mode and you will have to start over.

STEP 3: Press any button on the URC-A6 that you want to teach a command to. For example, if you want to teach the MUTE button on the URC-A6 the TV Mute command from the other remote, first press the MUTE button on the URC-A6 and the TV component button LED light will blink once indicating that the URC-A6 is ready to learn the command.

STEP 4: Press and hold the MUTE button on the other remote until the component button LED on the URC-A6 blinks twice. Now you can continue learning all other buttons from your old remote by pressing the next button on the URC-A6 and repeating this step.

Note: The component LED will blink five times if there was an error in the learning process. In this case, please repeat Steps 3 and 4.

STEP 5: Once the URC-A6 has learned all the buttons in the selected component mode, press and hold the Component button and ENTER [ENT] buttons at the same time to save the learned functions. The component LED light will blink three times to confirm the programming. Now test all the buttons to make sure they learned correctly.

Repeat Steps 1-5 to program any other component modes.

If the Learning Method does not work, here are a few suggestions:

- If you have a Plasma TV, move to another room.
- Avoid programming under fluorescent light or direct sunlight.
- Put new batteries in the old remote.
- Gradually vary the distance between the two remote controls.
- Tap the button on your old remote instead of pressing and holding it during the learning process.

Here are some additional facts regarding the Learning process:

- Learned functions override any existing pre-programmed functions on the remote control.
- Learned functions are automatically erased when a new function is learned on the same button.
- Learned functions are retained even after a different set-up code number is programmed into the remote control.
- To return to an original pre-programmed function, a learned function must be erased.

**PLEASE DO NOT RETURN
THIS PRODUCT TO THE STORE**

**PLEASE CONTACT OUR TECHNICAL
SUPPORT CENTER**

**IF YOU NEED ASSISTANCE, E-MAIL
techsupport@UniversalRemote.com
or dial 1-800-901-0800
(9:00AM-6:00PM EST)**

Special Advanced Features


Programming Automated Activities

The URC-A6 has six Macro buttons (POWER, SYSTEM OFF, A, B, C, D) that are designed to store up to 20 commands in each button. Pressing any one of the Macro buttons, or Automated activity, will send out the series of commands that are stored in that particular button.

MacroPower™ Total System On/Off


MacroPower makes several devices work together by pressing one button. Imagine the convenience of turning on your TV, your DVD player and your Surround Sound receiver by pressing a single button on your URC-A6. What could normally take three remotes and three button pushes, the URC-A6 can accomplish with the press of one button. We call that MacroPower. Any of the Power On or the System Off buttons can be programmed for MacroPower control. To set it up, follow these easy steps:

STEP 1: To program MacroPower commands for the Power ON button, press the POWER button and the MUTE button at the same time for 2 seconds until one of the component button LED lights turns on.

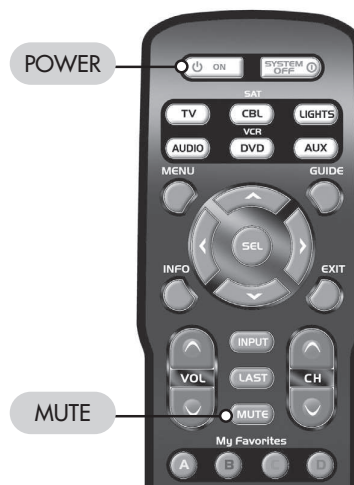

IMPORTANT: You have 30 seconds to perform the next step while you are in programming mode. If you do not press a button within 30 seconds, the component LED light will turn off. The remote will exit the programming mode and you will have to start over.

STEP 2: Press the component button you want to turn on and then the POWER button; repeat for all other components in the order you want them to turn on. The component LED lights will blink once each time you press the POWER button.

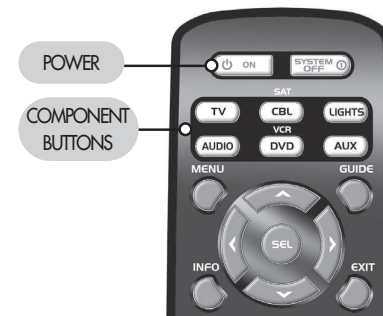

STEP 3: Once you've entered all the Power On commands, press the CHANNEL UP ▲ button to save your MacroPower commands. The component LED lights will blink three times to confirm that the programming has been successfully saved.



SUGGESTION: Most of the components have the same signal to turn the power On and Off. You may want to program MacroPower only in the POWER button and save the System Off button to turn components On or Off individually.

Note: If you want to program MacroPower for the SYSTEM OFF button, repeat the same steps used for Power ON programming.

Notes regarding programming

multi-commands to Macro buttons:

- You can program up to 20 commands on each Macro button.
- You can program delays in between commands by pressing the PAUSE button. Each press adds a one-half second delay.
- Also, if you add the delay time as the first step of Macro commands, the remote will not send the Macro unless the button is held for two seconds. (This is the Press & Hold Function).
- You can also program macro commands in 'layers' by pressing the STOP button in between commands. (For example, if you press CBL, 009, STOP, 035, STOP, 365, STOP and the CH+ button in Step 2) the remote will send out 009 at the first press of the 'A' button, and then send out 035 at the second press, etc.
- You cannot program the CH+ or PAUSE buttons as macro commands.

Programming "My Favorites" - Favorite Channel Buttons

In Cable mode, the A, B, C, D buttons are also designed to serve as dedicated Favorite Channel buttons. Each button will access one of your favorite channels with just one button press. Here's how to program Favorite Channels:

STEP 1: Press the CBL button to select the Cable mode.

STEP 2: Press the 'A', 'B', 'C' or 'D' button and the MUTE button at the same time for 2 seconds until the CBL component LED turns on.

IMPORTANT: You have 30 seconds to perform the next step while you are in programming mode. If you do not press a button within 30 seconds, the component LED light will turn off. The remote will exit the programming mode and you will have to start over.



STEP 3: Using the Number Pad, punch in the Channel number of the Favorite Channel that you want to store in the Macro button. The Cable component LED light will blink once for each button pressed.

STEP 4: Press the CHANNEL UP button to store the commands entered. The CBL component LED will blink three times to confirm the programming.



More Favorite Channels

You can also use the 'A, B, C and D' buttons to program favorite channels. Each button can program up to 5 favorite channels (or a total of 20 button presses), but you're not limited to using these buttons for only that. You can record any series of button presses into a macro. This is great switching video or audio sources. Here is an example of how to program a macro on the "A" button with three favorite channels. We'll use "25, 50, and 75."

STEP 1: Press the device you are getting channel control from. Ex. Cable.

STEP 2: Press and hold the "A" button and "Mute" button at the same time until a device button lights up.

STEP 3: Press "2".

STEP 4: Press "5".

STEP 5: Press "Select".

STEP 6: Press "Stop".

STEP 7: Press "5".

STEP 8: Press "0".

STEP 9: Press "Select".

STEP 10: Press "Stop".

STEP 11: Press "7".

STEP 12: Press "5".

STEP 13: Press "Select".

STEP 14: Press "Stop".

STEP 15: Press "Channel Up" to save macro.

Note: Pressing the "Select" button just assures the quickest response from the Cable box. Pressing "Stop" allows you to program several favorite channels on one button. Now, the first press of the "A" button will change the channel to "25." The second, to "50" and the third, to "75." Then the sequence starts all over again.

SimpleSound™ Total System Volume Control


SimpleSound is one of the most exciting features of the URC-A6. It gives you total volume control over ALL the components in your system, even those that do not have built-in volume control, such as TIVO, DVD and VCR. SimpleSound saves you the hassle and inconvenience of constantly switching between component modes just to control volume.

First you should identify which device in your system will be used to deliver sound. In a basic system, the sound may come from your TV speaker. In a more advanced system, the sound may come from your audio components (such as a Surround Sound Receiver or Home Theatre system).

Now, let's set-up SimpleSound. Here's how:

STEP 1: Press and hold the button that corresponds to the Component you want to add volume control to (such as a DVD or DVR) and the SELECT (SEL) button at the same time for about three seconds until the component LED light turns on.

IMPORTANT: You have 30 seconds to perform the next step while you are in programming mode. If you do not press a button within 30 seconds, the component LED light will turn off. The remote will exit the programming mode and you will have to start over.

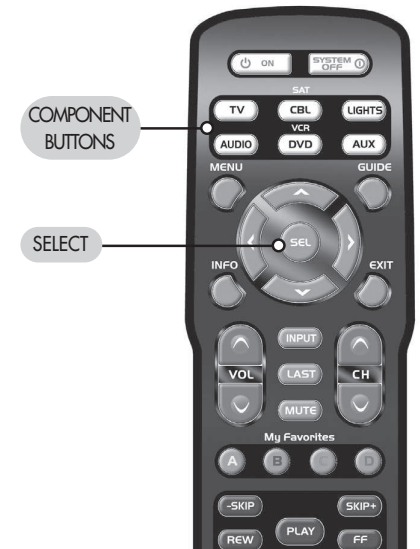

**PLEASE DO NOT RETURN
THIS PRODUCT TO THE STORE**

**PLEASE CONTACT OUR TECHNICAL
SUPPORT CENTER
IF YOU NEED ASSISTANCE, E-MAIL
techsupport@UniversalRemote.com
or dial 1-800-901-0800
(9:00AM-6:00PM EST)**

STEP 2: Press the VOLUME UP button and then press either the TV or AUDIO component button that you want to use for volume. The Component LED light will blink three times to confirm that it is saved. This sets up three buttons (Volume Up, Volume Down and MUTE) as a group for that component.



Repeat Steps 1-2 for all other components.

Note: SimpleSound is what's technically referred to as a "Punch Through" feature and is not limited to volume control. It can also be applied to other groups of buttons. If you find yourself switching to a particular component mode frequently to access a particular control, consider using "Punch Through".


Channel Control "Punch Through"

This "Punch Through" enables you to program the URC-A6 so that either the Cable or TV Channel Controls (CHANNEL UP, DOWN, LAST, CHANNEL NUMBERS 0-9, +10 and ENTER) will also operate in other component modes on the remote control.

STEP 1: Press and hold the component button you want to add channel control to, such as DVD or DVR, and the SELECT [SEL] button at the same time for two seconds until the Component LED light turns on.

IMPORTANT: You have 30 seconds to perform the next step while you are in programming mode. If you do not press a button within 30 seconds, the component LED light will turn off. The remote will exit the programming mode and you will have to start over.

STEP 2: Press the CHANNEL UP button. The component LED light will blink once.

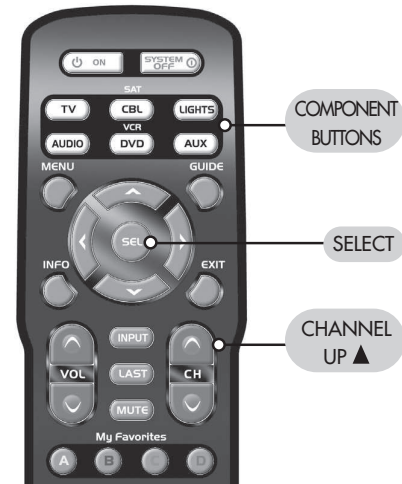

STEP 3: Press either the TV or CBL button that you want to use as the source of channel control. The component LED will blink three times to confirm it is saved.


Transport Control "Punch Through"

This "Punch Through" enables you to program the URC-A6 so that DVD or DVR Transport Controls (PLAY, STOP, FF, REW, PAUSE, SKIP and RECORD) will also operate in other component modes on the remote control.

STEP 1: Press and hold the component button you want to add Transport Control to, such as CBL or TV, and the SELECT [SEL] button at the same time for two seconds until the Component LED light turns on.

IMPORTANT: You have 30 seconds to perform the next step while you are in programming mode. If you do not press a button within 30 seconds, the component LED light will turn off. The remote will exit the programming mode and you will have to start over.

STEP 2: Press the PLAY button. The component LED light will blink once.

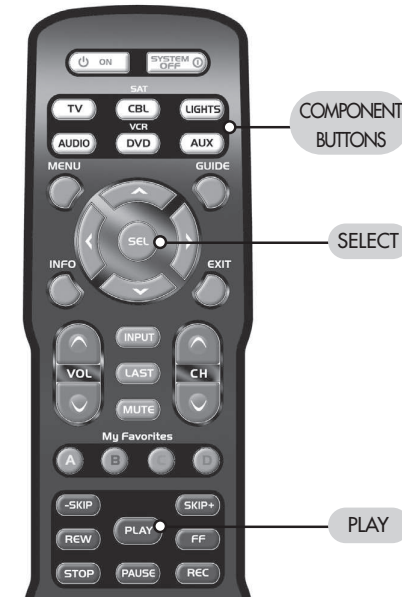

STEP 3: Press either the DVD or DVR button that you want to use as the source of Transport Control. The component LED will blink three times to confirm it is saved.


OSD (On-Screen Display) Control "Punch Through"

This "Punch Through" enables you to program the URC-A6 so that CBL or DVD OSD Controls (MENU, GUIDE, INFO, EXIT, SEL and 4 Cursor Controls) will also operate in other component modes on the remote control.

STEP 1: Press and hold the component button you want to add OSD Control to, such as TV or DVD, and the SELECT [SEL] button at the same time for two seconds until the Component LED light turns on.

IMPORTANT: You have 30 seconds to perform the next step while you are in programming mode. If you do not press a button within 30 seconds, the component LED light will turn off. The remote will exit the programming mode and you will have to start over.

STEP 2: Press the MENU button. The component LED will blink once.

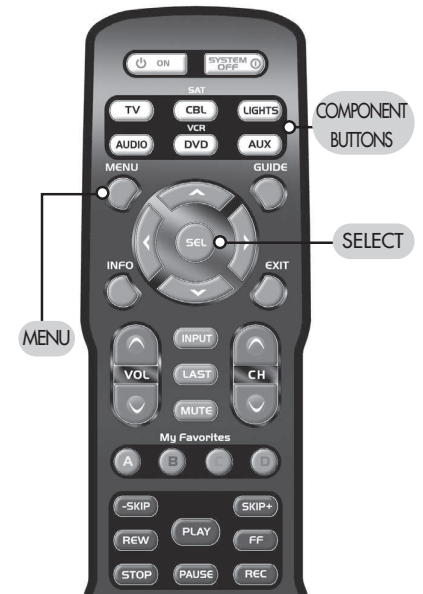

STEP 3: Press either the CBL or DVD button that you want to use as the source of OSD Control. The component LED will blink three times to confirm it is saved.

Input Switching Macros

These macros can be difficult and will vary depending on your specific setup. Because most TVs have a "Toggle" input feature, there's no way to jump to a specific video source discretely. "Toggle" means that you have one button on your remote that cycles through all available video sources (inputs) on your TV.

With a Toggle input feature, you will need to set a starting point (default input). Since you are most likely watching Cable TV most of the time, you might want to set that input at the starting point. So you'll be programming your macros assuming that you are always on the Cable input. Now, what you'll have to do is figure out how many presses of the input button it will take to get to the desired video source, then how many presses it will take to get back to the starting point. This way, you can use the "B" button to switch to the "DVD" input, then back to the "Cable input" and maybe the "C" button to switch to the "VCR" input, then back to the "Cable" input.

Below is an example of a macro on the "B" button that switches video sources on your TV to the "DVD" input. Let's say that it takes 2 presses of the input button to get to the "DVD" input (from the starting point) and 3 presses of the input button to get back to the "Cable" input.

STEP 1: Press and hold the "B" button and "Mute" button at the same time until a device button lights up.

STEP 2: Press "TV".

STEP 3: Press "Input".

STEP 4: Press "Pause".

STEP 5: Press "Input".

STEP 6: Press "Stop".

STEP 7: Press "TV".

STEP 8: Press "Input".

STEP 9: Press "Pause".

STEP 10: Press "Input".

STEP 11: Press "Pause".

STEP 12: Press "Input".

STEP 13: Press "Stop".

STEP 14: Press "Channel Up" to save macro.

Pressing "Pause" in between input commands will add a small delay after each press of the input button. This will assure that all commands get sent properly. Much like in the previous example, pressing the "Stop" button allows you to start a new macro. So, the first press of the "B" button will change inputs to the "DVD" video source and the second press will change back to the starting point. It is important to always switch back to the default starting point. This way it sets up the next macro on another "Favorites" button to execute properly.


Erasing Commands -- Overview

You can erase a single learned command, all learned commands in each component mode, SimpleSound programming, MacroPower commands, or re-set the remote to original factory default settings.

Erasing a Single Learned Command from One Component

STEP 1: Press the component button where the learned command is stored and the ENTER buttons at the same time for two seconds until the component LED light turns on.

IMPORTANT: You have 30 seconds to perform the next step while you are in programming mode. If you do not press a button within 30 seconds, the component LED light will turn off. The remote will exit the programming mode and you will have to start over.

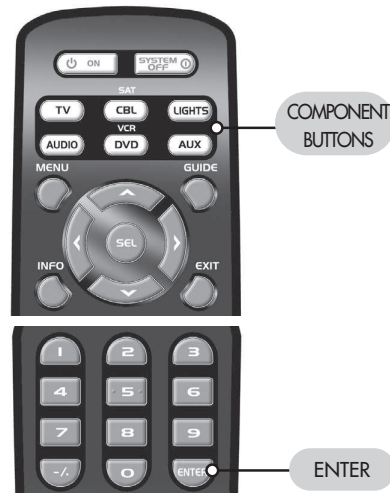

STEP 2: Press and hold the button you want to erase for two seconds. The component LED light will blink twice to confirm the erasure.

STEP 3: Repeat Step 2 to erase any other buttons in the selected component mode.

STEP 4: To exit Erase mode, press and hold both the component button and the ENTER (ENT) button at the same time until the component LED light blinks three times.


Erasing All Learned Commands from One Component

This function allows you to erase all the learned commands from one component. For example, if you want to erase all learned commands on the TV component button because you bought a new TV, the process is very simple.

STEP 1: Press the component button where all the learned commands are stored and the ENTER button at the same time for 2 seconds until the component LED turns on.

IMPORTANT: You have 30 seconds to perform the next step while you are in programming mode. If you do not press a button within 30 seconds, the component LED light will turn off. The remote will exit the programming mode and you will have to start over.

STEP 2: Press and hold both the component button you want to erase and the PAUSE button at the same time for two seconds, until the component LED light blinks twice to confirm the erasure.

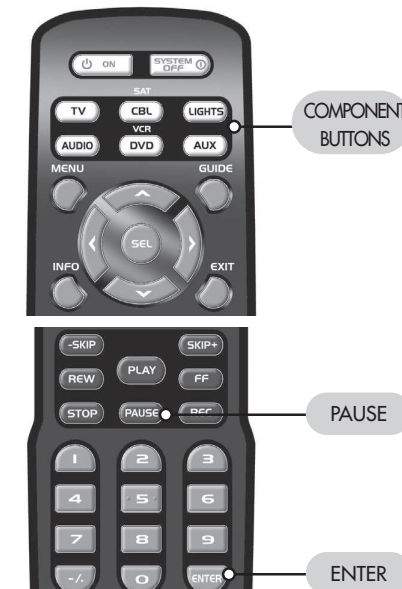


STEP 3: To exit Erase mode, press and hold both the component button and the ENTER (ENT) button at the same time until the component LED light blinks three times.

Erasing MacroPower & Other Macro Commands

STEP 1: To erase MacroPower commands on the POWER ON or SYSTEM OFF button, press and hold either the POWER ON or SYSTEM OFF button and the MUTE button simultaneously for two seconds until the current status component LED turns on.

IMPORTANT: If you don't proceed to the next step within 30 seconds, the LED will turn off and exit set-up mode and you will need to start over.

STEP 2: Press the CHANNEL UP button to erase and exit Erase mode. The component LED light will blink three times to confirm the erasure.

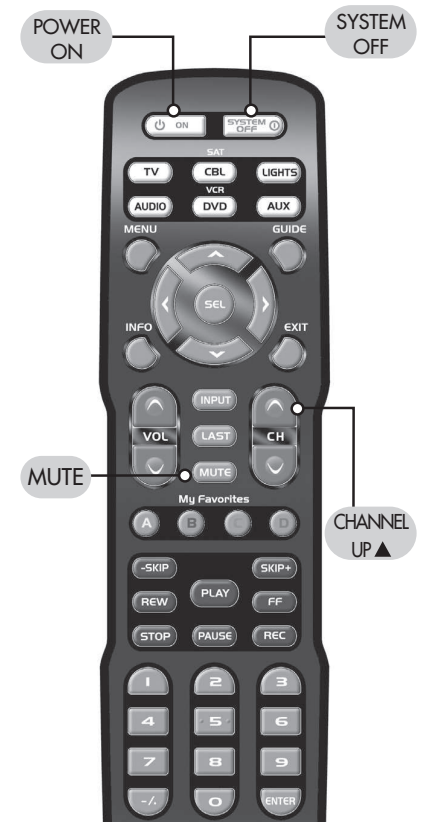


NOTE: To erase other Macros, simply press the appropriate button in Step 1 in combination with the MUTE button.

Erasing SimpleSound & Other "Punch Through" Commands

STEP 1: Press and hold the Component button you want to erase volume control from, such as DVD or VCR and the SELECT [SEL] button at the same time for two seconds until the Component LED light turns on.

STEP 2: Press the VOLUME UP button and the same component button from Step 1. The component LED light will blink three times to confirm the erasure.

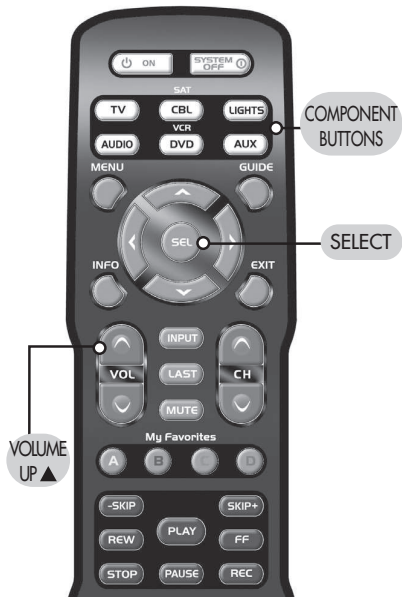

Repeat Steps 1-2 to erase SimpleSound commands from other components.

NOTE: To erase other "Punch Through" commands, simply press the following buttons in place of VOLUME UP in Step 2:

- For Channel Control, press: CHANNEL UP
- For Transport Control, press: PLAY
- For OSD Control, press: MENU

Factory Reset

You can reset your URC-A6 remote to the original factory default settings.

Press and hold both the TV and RECORD buttons for about five seconds until the LIGHTS component LED light blinks five times. All programming and set-up codes that you have entered into the remote will be erased and the URC-A6 will return to the original factory default settings.

Warning

This procedure will erase all programming and set-up codes that you have entered into the remote.




Finding a Component's Set-up Code Number

If you used the Auto-Search or Learning Methods to program a component, you may not know the code number you programmed. Here is a way for you to identify what that code number is, so you can make a note in the back of this Manual for future reference.

STEP 1: Press the component button you would like to verify and the SELECT [SEL] button at the same time for 2 seconds until the selected component LED light turns on.

IMPORTANT: You have 30 seconds to perform the next step while you are in programming mode. If you do not press a button within 30 seconds, the component LED light will turn off. The remote will exit the programming mode and you will have to start over.

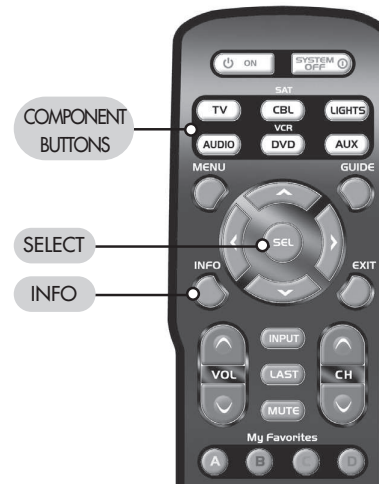

STEP 2: Press the INFO button and count the number of times the Component LED light blinks. This number indicates the first digit of the code. Next it will pause for about one second and begin blinking again to indicate the number of the second digit. Then once again it will pause, then blink, to indicate the number of the third digit.

Example: One blink, pause, eight blinks, pause, three blinks indicates code number 183.

Note that ten (10) blinks represent the number 0.

Pre-Programmed Code Tables

The URC-A6 Pre-Programmed code library is classified by category (CABLE/SAT, TV, DVD, etc.). Within each category, the code numbers are listed in rows by brand (Sony, Panasonic, B & K, etc.). Some brands have more than one three-digit code. Circle the correct row and refer to it while you perform setup operations.

CABLE/SAT	Cable Set top boxes and satellite receivers	33
TV	TVs, Plasmas, Projectors and Monitors	34-35
DVD/DVR/VCR	DVD Players and Recorders VCRs, DVRs & Combo Units	36
AUDIO	Amps, Preamps and A/V Receivers	37
AUX	iPod, Media PC, Gaming System	38
LIGHTS	Lighting Controls	39

AUDIO

Brand	Code Numbers	Brand	Code Numbers
ADCOM	082 092 225 161 269 356	SHARP	094 175
AIWA	170 018 104 202 203 213 211 188	SHERWOOD	024 102 106 447
AKAI	189	SONY	002 018 247 248 166 101 184 218
ARCAM	141 077		271
B & K	096 097	SUNFIRE	344 345 066
BOSE	070 170 224 347 409 460	TEAC	005 019 049 040 212 217
BOSTON ACOUSTICS	447	TECHNICS	122 176 193 219 178 177 200 257
CARVER	006 028 201 214 226 185 077 284		262
DELPHI	515 556	TOSHIBA	060 087 198 278
DENON	001 109 215 230 234 330	XM SATELLITE RADIO	515 556
ELAN	290	YAMAHA	253 169 067 173 205 264 232 089
ESCIENT	451		274 644
FISHER	214 066	ZENITH	143 210
HARMAN KARDON	233 077 154 118 318		
HITACHI	020	SATELLITE Radios	
INTEGRA	275 017 046 108 080 209	DELPHI	515
JAMO	398	POLKAUDIO	515
JVC	163 191 114 279 291	SIRIUS	555
KENWOOD	066 145 192 005 280 374	XM SATELLITE RADIO	515
KLH	331		
LEXICON	120 235 236 237 357 360		
LINN	124 377		
MAGNAVOX	086 164 152 208		
MAGNUM DYNALAB	806		
MARANTZ	006 028 031 040 063 185 186 265 289 492		
MCINTOSH	238 286		
MITSUBISHI	242 204		
MYRIAD	077		
NAD	186 113		
NAKAMICHI	040 244 245 172 183 287		
NEC	176		
NILES	403		
ONKYO	275 017 046 108 080 209		
PANASONIC	032 195 219 177 292		
PARASOUND	129 130 132 261 294 295 333 334		
PHILIPS	249 250 063 805		
PIONEER	014 039 044 069 168 116 035 078 198 480 556		
POLKAUDIO	556		
RCA	010 048 117 156 067 288		
REALISTIC	019 095		
ROTEL	083 085		
SAMSUNG	016 804		
SANSUI	040 048 110 063 228		
SANYO	214		
SCOTT	019		

AUX

Brand	Code Numbers
iPod Controls	
APPLE / iPod	901 912
BOSE	909
DLO	418
GRIFFIN	471
KENSINGTON	906
TEN TECHNOLOGY	901
MEDIA PC Controls	
DELL	001
GATEWAY	001
HP	001
KEYSPAN	797
SONY	001
TOSHIBA	001
WINBOOK	001
GAMING SYSTEM Controls	
MICROSOFT / XBOX	908 607
SONY / PS2	914
DIGITAL TO ANALOG CONVERTER Controls	
ARTEC	586
CASTI	587
CHANNEL MASTER	685
CRAIG	588
DIGITAL STREAM	580
GRIDLINK	592
INET ACCESS	589
INSIGNIA	567
LASONIC	592
MAGNAVOX	584
RCA	585
SANSONIC	592
SUDDENLINK	579
TIVAX	589 590
ZENITH	567
ZINWELL	591 593
ANTENNA ROTATOR Controls	
CHANNEL MASTER	686

LIGHTS

Brand	Code Numbers
COLORADO VNET	
	311 312 313 314 315 316 317 318
CYRON	421
LEVTON	321
LIGHTOLIER CONTROLS	307
LITE-TOUCH	708 757
LUTRON	001 158 159 306 308 309 340 341
RAKO	301 302 303 304 305
WATT STOPPER	319 320
XANTECH	688 689
X-10	183 257

Frequently Asked Questions

If the batteries run out, will I lose my settings?

No. The URC-A6 stores all of your settings in non-volatile FLASH memory. You could remove the batteries for months, replace them at your convenience, and the URC-A6 would still remember your settings.

What is MacroPower?

MacroPower is a very useful way to make a lot of things happen with one button push. For example, in most home theaters, to watch television, the user must turn on the TV, then turn on the Cable Box or the Satellite Receiver, then turn on the Surround Sound system for sound. Instead of pressing all of those buttons one at a time, MacroPower enables you to turn on all of these components, in the sequence you want, with one button push. For more information on why and how you should program MacroPower commands, refer to page 18 in this Manual.

What if my remote control no longer works from a distance?

Replace the batteries with new Alkaline batteries.

Who can I contact for more answers?

The Universal Remote Control technical support and customer service staff are ready to answer any questions you might have.

E-Mail us at techsupport@universalremote.com

Visit our website www.universalremote.com

Call us at 1-800-901-0800

Monday - Friday, 9AM to 6PM (EST)

Specifications

Learning Capability

IR frequencies (15kHz to 100kHz)

Macro Capability

6 Macros of up to 20 steps each

IR Range (Line of Sight via Infrared) 30-50 feet, depending on the environment

Weight 6.9 oz. (with batteries)

Size 2 1/8" x 1 1/8" x 8 3/4"

Batteries Two AAA Alkaline batteries included

USA Limited Warranty Statement

Your Universal Remote Control, when delivered to you in new condition, is warranted against defects in materials or workmanship as follows: **UNIVERSAL REMOTE CONTROL, INC.** warrants this product against defects in material or workmanship for a period of one (1) year and as set forth below. Universal Remote Control will, at its sole option, repair the product using new or comparable rebuilt parts, or exchange the product for a comparable new or rebuilt product. **In the event of a defect, these are your exclusive remedies.**

This Limited Warranty covers only the hardware components packaged with the Product. It does not cover technical assistance for hardware or software usage and it does not cover any software products whether or not contained in the Product; any such software is provided "AS IS" unless expressly provided for in any enclosed software Limited Warranty.

To obtain warranty service, you must deliver the product, freight prepaid, in its original packaging or packaging affording adequate protection to Universal Remote Control at the address provided in the Owner's Manual.

It is your responsibility to backup any macro programming, artwork, software or other materials that may have been programmed into your unit. It is likely that such data, software, or other materials will be lost during service and Universal Remote Control will not be responsible for any such damage or loss. A dated purchase receipt, Bill of Sale, Installation Contract or other verifiable Proof of Purchase is required. For product support and other important information visit Universal Remote Control's website: <http://www.UniversalRemote.com> or call the Customer Service Center (914) 835-4484.

This Limited Warranty only covers product issues caused by defects in material or workmanship during ordinary consumer use. It does not cover product issues caused by any other reason, including but not limited to product issues due to commercial use, acts of God, third-party installation, misuse, limitations of technology, or modification of or to any part of the Universal Remote Control product. This Limited Warranty does not cover Universal Remote Control products sold as USED, AS IS, REFURBISHED, so-called "B STOCK" or consumables (such as batteries). This Limited Warranty is invalid if the factory-applied serial number has been altered or removed from the product. This Limited Warranty is valid only in the United States of America. **This Limited Warranty specifically excludes products sold by unauthorized resellers.**

LIMITATION OF REMEDIES UNIVERSAL REMOTE CONTROL SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY OR CONDITION ON THIS PRODUCT. IN NO EVENT SHALL UNIVERSAL REMOTE CONTROL BE LIABLE, WHETHER IN CONTRACT OR IN TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, ACCESSORY OR SOFTWARE, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, SOFTWARE OR APPLICATIONS OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS, ACCESSORIES OR SOFTWARE TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, THERE IS NO OTHER WARRANTY EXPRESSED OR IMPLIED. UNIVERSAL REMOTE CONTROL WILL NOT BE HELD RESPONSIBLE FOR STATEMENTS MADE BY OTHERS CONCERNING THE MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT. Some states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This Limited Warranty gives you specific legal rights and you may have other rights which vary from state to state or jurisdiction to jurisdiction.

REV020708

Information To The User

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Note : The manufacturer is not responsible for any Radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

**PLEASE DO NOT RETURN
THIS PRODUCT TO THE STORE**

PLEASE CONTACT OUR TECHNICAL
SUPPORT CENTER

IF YOU NEED ASSISTANCE, E-MAIL
techsupport@UniversalRemote.com
or dial 1-800-901-0800
(9:00AM-6:00PM EST)



500 Mamaroneck Avenue, Harrison, NY 10528
Phone: (914) 835-4484 Fax: (914) 835-4532