



BASIC TRANSMITTER PROGRAMMING:

IT'S EASY, JUST FOLLOW THE STEPS WITH THE TDS TECHNICIAN. REMEMBER, IF YOU EXCEED 15 SECONDS WHEN DOING A STEP, THE RECEIVER WILL TERMINATE THE PROGRAM MODE AND YOU WILL HAVE TO START OVER AGAIN FROM THE BEGINNING.

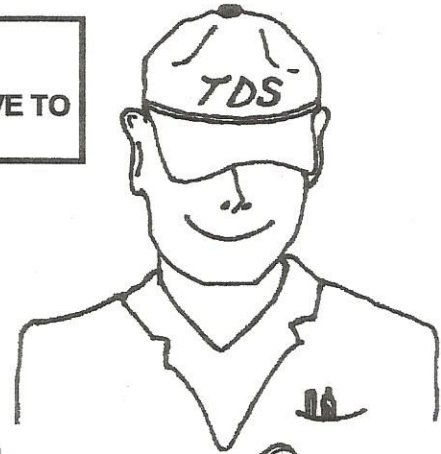

NOTE: HAVE ALL THE TRANSMITTERS YOU INTEND TO PROGRAM TO THE VEHICLE WHEN YOU BEGIN THE FOLLOWING STEPS. YOU MAY PROGRAM UP TO (4) TRANSMITTERS TO A VEHICLE.

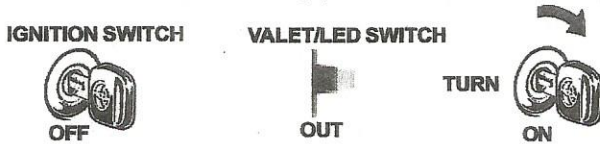

STEP 1 = 1 chirp

CHANNEL 1 ARM / DISARM + PANIC:

STEP 2 = 1 chirp **PERFORM SAME PROCEDURE FOR ALL TRANSMITTERS UP TO (4)**
press & hold red button

STEP 3 = 2 chirps + 2 flashes

CHANNEL 2 DISARM + ALL DOORS:

STEP 4 = 1 chirp **PERFORM SAME PROCEDURE FOR ALL TRANSMITTERS UP TO (4)**
press & hold black button

STEP 5 = 3 chirps + 3 flashes

CHANNEL 3 (FUTURE OPTION) PROCEED TO STEP 6:

STEP 6 = 4 chirps + 4 flashes

CHANNEL 4 HEADLIGHTS (30 SECONDS):

STEP 7 = 1 chirp **PERFORM SAME PROCEDURE FOR ALL TRANSMITTERS UP TO (4)**
press & hold green button

STEP 8 = 1 long chirp **PROGRAMMING IS COMPLETE**

NOTE: SHOULD THE VEHICLE FAIL TO RESPOND TO A SINGLE BUTTON WHEN PRESSED, YOU MAY HAVE PRESSED THE WRONG BUTTON WHEN PROGRAMMING. IF THIS IS THE CASE, CLEAR THE TRANSMITTER CODES FROM MEMORY AND REPROGRAM THE TRANSMITTERS CORRECTLY.