



## Dual Hard Drive Docking Station with USB 3.0

**Model Number: AHD-06**

### **INSTRUCTION MANUAL**

**After Sales Support**

**Telephone:** 1300 886 649  
**Email:** [info@tempoaustralia.com.au](mailto:info@tempoaustralia.com.au)



N13275

# Contents

Warranty Details	3
Welcome	4
General Safety Instructions	5
Product Overview	7
Getting Started	8
Instructions	9
Repair and Refurbished Goods or Parts Notice	11



**BAUHN**<sup>®</sup>  
EFFORTLESS TECHNOLOGY

## Dual Hard Drive Docking Station with USB 3.0

# Warranty Details

---

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion, solely at our option with no charge for parts and labour. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and to compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



---

#### After Sales Support

Telephone: 1300 886 649  
Email: [info@tempoaustralia.com.au](mailto:info@tempoaustralia.com.au)

# Welcome

Congratulations on choosing to buy a BAUHN® product.

All products brought to you by BAUHN® are manufactured to the highest standards of performance and safety and, as part of our philosophy of customer service and satisfaction, are backed by our comprehensive 1 Year Warranty. We hope you will enjoy using your purchase for many years to come.

# General Safety Instructions

Read this manual thoroughly before use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to.

Keep the manual in a safe place for future reference, along with the completed warranty card, purchase receipt and carton. Note the product serial number on this manual, so you always have it ready at hand. If applicable, pass these instructions on to the next owner of the appliance.

Always follow basic safety precautions and accident prevention measures when using an electrical appliance, including the following:

## Electrical safety and cord handling

- **Voltage:** Make sure your outlet voltage and circuit frequency correspond to the voltage stated on the appliance rating label and your outlet socket is earthed.
- **Do not immerse:** Never immerse the device in water or other liquid.
- **Water:** Avoid contact with water spray, dripping water and other liquids. Never operate the device near water. Do not place any objects filled with liquids such as a vase or glass with water near the device.
- **Damage:** In case of damage, do not disassemble, repair or modify the unit yourself. Contact our after sales support line for advice on repair or replacement, or refer servicing to qualified personnel only.
- **Repair:** Do not open the housing of the power adaptor, it contains no serviceable parts. By opening the housing you endanger your life through risk of electric shock.
- **Lightning storms:** Before stormy weather, when there is the danger of lightning, disconnect the device from the power supply.
- **Disconnection**
  - (a) The On/Off switch at the back of the cradle does not fully disconnect the device from the mains power supply. Furthermore, the device consumes electricity in standby mode. In order to completely disconnect the device from the mains, unplug the power adaptor from the wall outlet. For this reason, always position the cradle in a way that assures unobstructed access to the wall outlet so that the plug can be immediately pulled out in an emergency situation.
  - (b) To avoid the danger of fire if the device is not going to be used for a long while (for example, during holidays), always disconnect the device from the power socket.
  - (c) When disconnecting the power adaptor, always grip the plug, do not pull on the cord.


# General Safety Instructions (Cont.)

## Usage conditions and restrictions

- **Intended use:** This device is a consumer electronics device and may not be used outdoors or in tropical climates.
- **Handle with care:** Do not subject the device to excessive shocks and vibrations.
- **Operating environment:** Position the device on a stable, even surface.
- **DO NOT use the device in the following conditions:**
  - ☒ In an environment with high temperatures or high levels of humidity (such as in a bathroom). The operating temperature must be between 5°C and 40°C, and the maximum humidity below 90%.
  - ☒ Do not subject the device to sharp temperature changes.
  - ☒ In places that are excessively dusty or dirty.
  - ☒ Near direct heat sources such as heaters, direct sunlight or artificial lighting.
  - ☒ In the immediate vicinity of magnetic fields, such as loudspeakers.
  - ☒ Near open flames such as burning candles or near an open fireplace.
- **Maintenance**
  - (a) Servicing is required when this device has been dropped or damaged in any way, for example, when liquid has entered the product, when the product has been exposed to rain or moisture, or when it does not work normally. If you notice smoke, unusual noise or odour, power off the device immediately and do not use it.
  - (b) Contact our after sales support line to arrange inspection or repair. Never open the housing of the device, or the accessories, yourself.
- **Usage restriction:** This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety.
- **Children:** Supervise young children to ensure they do not play with the product. Children may not comprehend the presence of potential risks.

# Product Overview (Cont.)

## Front view

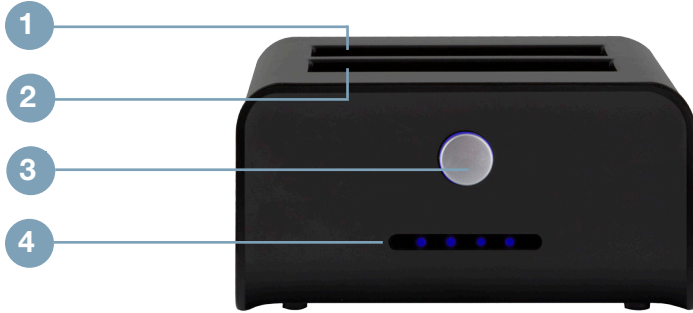

## Back view



- 1 Hard Drive Slot 2 (Target)
- 2 Hard Drive Slot 1 (Source)
- 3 One-Touch Clone Button
- 4 LED Lights 1 - 2 - 3 - 4
- 5 ON/OFF Switch
- 6 USB Port
- 7 Power Socket

## Accessories (not pictured)

- 1 x Power Adaptor
- 1 x Power Cable
- 1 x USB 3.0 Cable

### After Sales Support

Telephone: 1300 886 649  
Email: [info@tempoaustralia.com.au](mailto:info@tempoaustralia.com.au)

# Getting Started

## Features

- Supports 2.5" or 3.5" SATA HDDs up to 4TB capacity
- Plug & Play
- Hot swappable
- Back up data from computer or copy data between the two hard disks
- One-touch clone function
- USB 3.0 SuperSpeed and backward compatible with USB 2.0
- LED indicates working status
- Transfer rate: SATA II 1.5G/3Gbps

## What you need

- Computer with USB 2.0 or USB 3.0 input port
- Two (or one) SATA I/II hard drives

## PC Operating System requirements

Windows XP or above: No drivers are necessary. If the hard drive does not appear under 'My Computer', please check 'Disk Management' in your control panel to partition your hard drive (Start > Control Panel > Administrative Tools > Computer Management > Storage > Disk Management)



# Instructions

## Disk installation

- Connect the Dual Hard Drive Docking Station to a power outlet using the provided power adaptor.
- Connect the Dual Hard Drive Docking Station to the (powered) host computer using the provided USB 3.0 cable.
- Insert the 2.5" or 3.5" SATA/SATA II drive(s) into the slot, making sure that the SATA power and data connectors at the back of the drive are properly aligned with the corresponding connectors inside the docking station.
- Press the power switch on the rear panel of the Dual Hard Drive Docking Station. Once the hard drive has been inserted, the operating system will detect that it has been connected and automatically update the drivers for proper operation.

## Disk removal

- Follow the appropriate steps (dependent on the operating system) to disconnect removable storage. For example, in Windows OS click on the 'Safely Remove Hardware and Eject Media' icon located in the system tray. Select the device or drive from the options provided to disconnect.
- Turn off the power switch on the rear panel of the Dual Hard Drive Docking Station.
- Wait for 10 seconds until the disk stops spinning and pull out the hard drive.  
**WARNING:** Do not remove the hard drive(s) when the disk is reading or writing.

## Using the docking station with a PC

- Connect the power cable to the device and connect the USB cable to the device and the computer.
- Connect the hard drives to be used and power on the device. The hard drives will be shown in '(My) computer' and are usable as a normal hard drive.

## LED behaviour when connected to a PC

- **Power on:** LEDs 1 & 4 light up to indicate power on.
- **Read and write:** LEDs 2 & 3 flash to indicate disk activity.

## Hard drive cloning: using the device without a PC

- **Please note:** The source hard drive must be smaller or the same size as the target hard drive, otherwise the disk clone function will not work.
- When cloning, the drive partition of the source drive will overwrite the partition of the target drive. This will delete ALL data on the target drive and delete any and all partitions on it.

# Instructions (Cont.)

- **Please note:** If the source drive is smaller than the target drive, the partition size of the target drive will be the same as the one from the source drive. For example, if the source drive is 80GB and the target drive is 1TB, the cloning process will erase all partitions on the target drive and create one that is 80GB, this partition will contain all the data from the source drive. After the cloning process is complete it is possible to create a new partition on the target drive so that it is possible to use the remaining disk space on the 1TB hard drive.
- **To start the hard drive cloning procedure,** make sure the device is NOT connected to a PC or another device. Next press and hold the one-touch clone button at the front of the device until the hard drive starts working. During cloning, please pay attention to the LED lights at the front of the device.

## LED behaviour for cloning function

- LED 4 will light up when the cloning process reaches 25%.
- LEDs 4 & 3 will light up when the cloning process reaches 50%.
- LEDs 4, 3 & 2 will light up when the cloning process reaches 75%.
- LEDs 4, 3, 2 & 1 will light up when the cloning process reaches 100%.
- LEDs 1 – 2 – 3 – 4 – 3 – 2 – 1 light up alternately when cloning is in progress.



**BAUHN**<sup>®</sup>  
EFFORTLESS TECHNOLOGY

## Dual Hard Drive Docking Station with USB 3.0

# Repair and Refurbished Goods or Parts Notice

---

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost. **We recommend you save this data elsewhere prior to sending the product for repair.**

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

**Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.**

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 886 649 or write to us at:

Tempo (Aust) Pty Ltd ABN 70 106 100 252  
PO BOX 6056 Frenchs Forest, Sydney, Australia NSW 2086  
Tempo Help Desk: 1300 886 649 (Aust)  
(Operating Hours: Mon-Fri 08:30AM to 06:00PM EST)  
Email: [info@tempoaustralia.com.au](mailto:info@tempoaustralia.com.au)



---

#### After Sales Support

Telephone: 1300 886 649  
Email: [info@tempoaustralia.com.au](mailto:info@tempoaustralia.com.au)

**After Sales Support**

**Telephone:** 1300 886 649

**Email:** [info@tempoaustralia.com.au](mailto:info@tempoaustralia.com.au)