EAS00341
STARTER CLUTCH AND A.C. MAGNETO

Removing the starter clutch and A.C. magneto

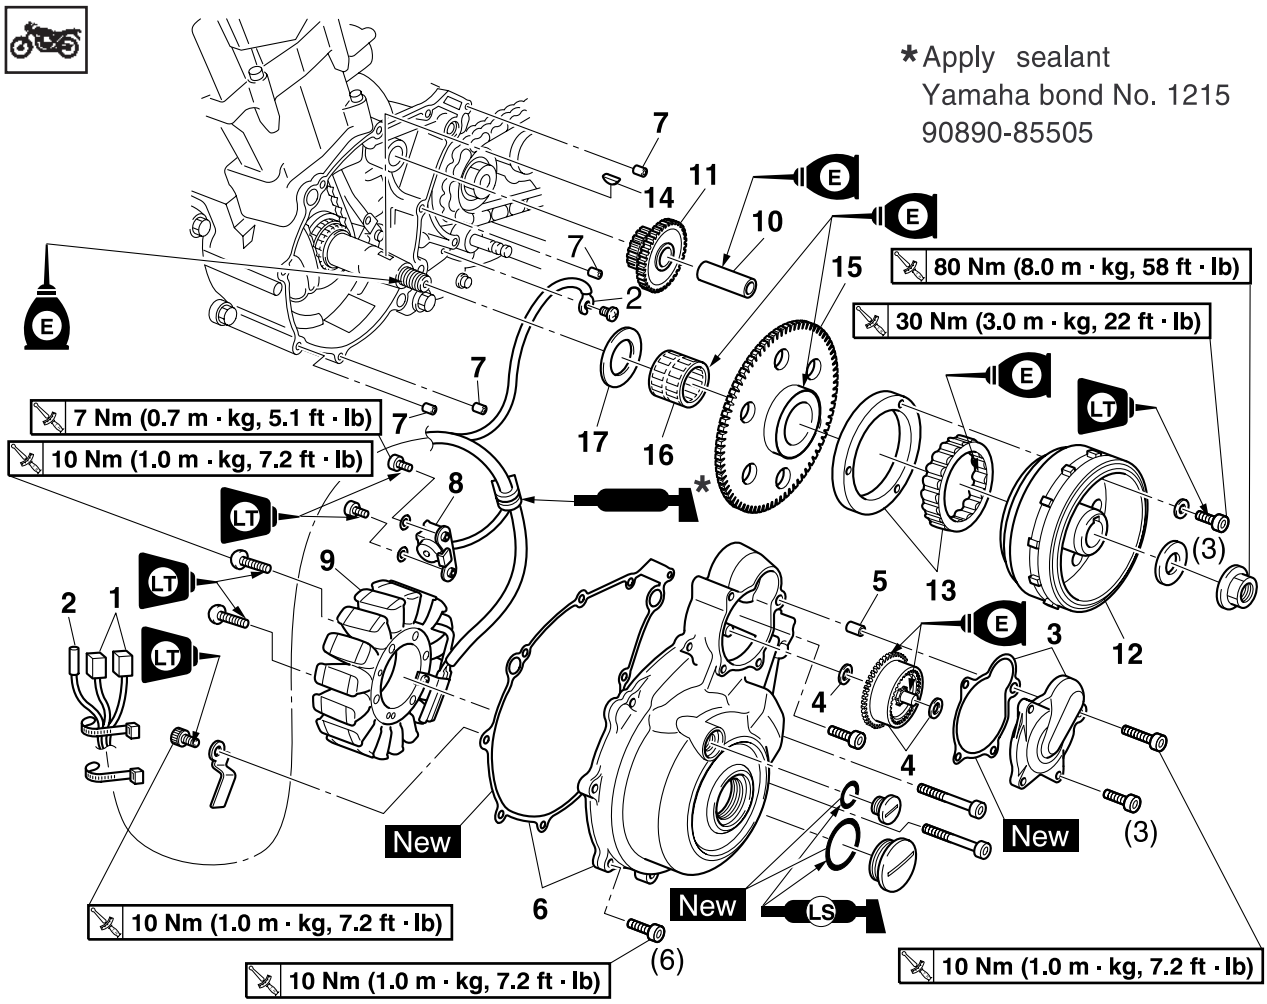

Order	Job/Parts to remove	Q'ty	Remarks
	Engine oil		Drain. Refer to "CHANGING THE ENGINE OIL" on page 3-10.
	Starter motor		Refer to "ELECTRIC STARTER" on page 5-57.
	Drive sprocket cover		Refer to "CHAIN DRIVE" on page 4-67.
	Shift pedal		
1	A.C. magneto coupler	2	Disconnect.
2	Neutral switch connector/lead	1/1	Disconnect.
3	Torque limiter cover/gasket	1/1	
4	Torque limiter/washer	1/2	
5	Dowel pin	1	
6	A.C. magneto cover/gasket	1/1	
7	Dowel pin	4	
8	Crankshaft position sensor	1	
9	Stator coil	1	
10	Starter clutch idle gear shaft	1	