



**WATER  
RESISTANT**




**MOULD  
RESISTANT**



**STRONGEST  
ON MARKET**



**EASY  
TO INSTALL**

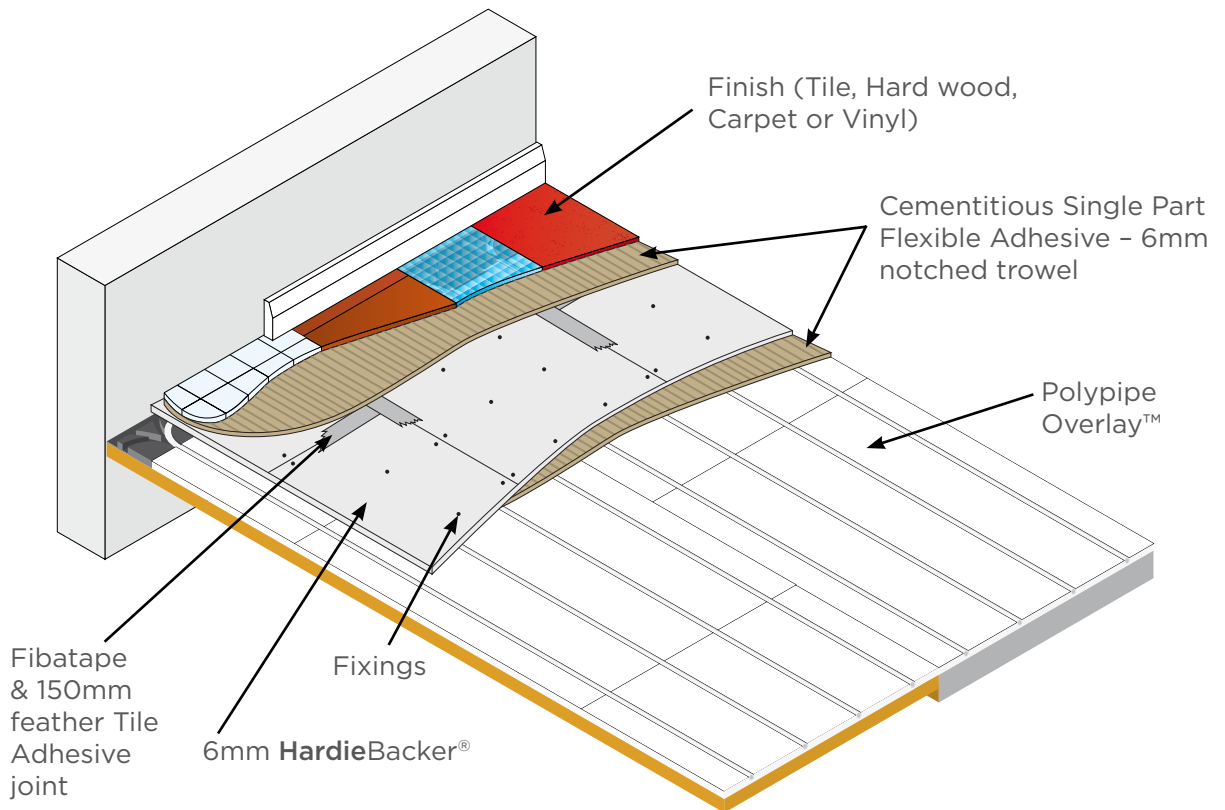

1. Score-and-snap boards to required sizes and make necessary cutouts.
2. Tiled Areas Only - Mix and apply a single part flexible adhesive in accordance with the adhesive manufacturer's instructions and spread evenly with a 6mm notched trowel.
3. Stagger all **HardieBacker®** Cement Backerboard joints in a broken bond or brick pattern. Do not align with subfloor joints. Never allow all four corners of boards to meet at one point.
4. Leave a 3mm gap between floor and wall edges, vanities, baths etc. and fill with a good quality bathroom sealant.
5. Fix with 15mm galvanized brads (such as Paslode brand) or **HardieBacker** screws.
6. Keep fixings between 15mm from board edges and 50mm from the board corners.
7. Insert fixings every 200mm and between pipe runs to hold the sheet flat against underlying pipe support board. Ensure to avoid underlying pipes.
8. Tiled Areas Only - Embed a 50mm alkaline resistant Fibatape across the HardieBacker joints and feather tile adhesive across the tape to leave a 150mm wide adhesive joint.

\*\*Suitable for Tile, Engineered Wood and Carpet, other floor finishes may require leveling.