

Renkin


INSTALLATION MANUAL YAMAHA MT-07 / FZ-07 2014+

INCLUDED IN KIT:

TAIL TIDY BRACKET
2 X INDICATOR SPACERS
3 X PLASTIC RIVETS

TOOLS REQUIRED:

4,5 AND 6MM ALLEN KEY
8MM SOCKET
PHILLIPS HEAD SCREWDRIVER

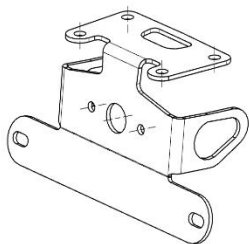


SECTION 1A: REMOVE OEM FENDER (2014-2017 MODEL)

IMPORTANT NOTE: If your bike is a 2018+ model, skip to section 1B / page 4


STEP 1: Remove pillion seat (keyhole on left side of body)

STEP 2: Remove riders seat

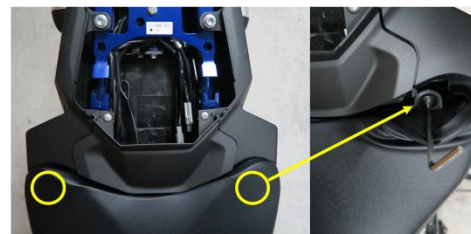


- 2 x 5mm allen bolt
- ⓘ Fold corner of seat padding to access bolt

STEP 3: Remove seat trim

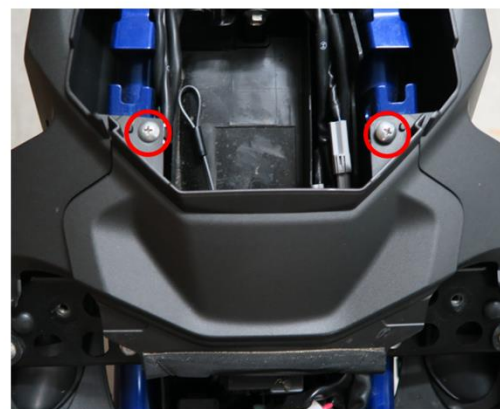

- 2 x Phillips head screw

STEP 4: Remove side cover fasteners

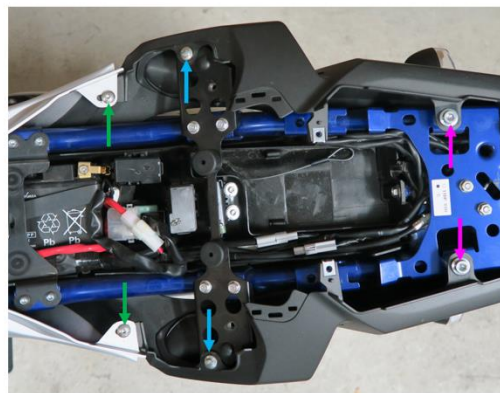

- 2 x 4mm Allen bolt
- 2 x 8mm Hex bolt
- 2 x 6mm Allen bolt

STEP5: Remove brake light trim




- 2 x Phillips head screw

STEP6: Remove plastic rivets




- 6 x Plastic rivets
- ❗ Push centre to release then pull down to remove

STEP7: Remove both side covers

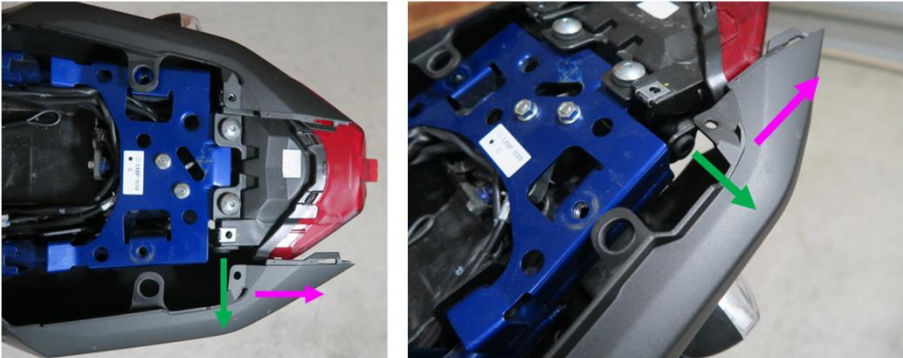

- Pull side cover outward to detach from rubber grommet
- Slide side cover rearward to remove from bike

STEP8: Unplug electrical connectors

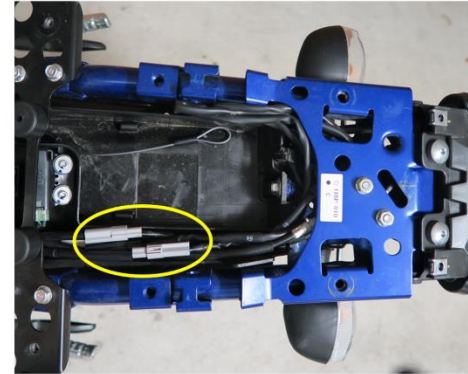

- 3 x Connectors for rear indicators and licence plate light

STEP9: Remove OEM fender



- 4 x 8mm Bolts
- ⚠ Set aside for later use

SECTION 1B: REMOVE OEM FENDER (2018+ MODEL)


STEP1: Remove pillion seat (keyhole on left side of body)

STEP2: Remove metal panel




● Pull reward and up to remove

STEP3: Remove front seat

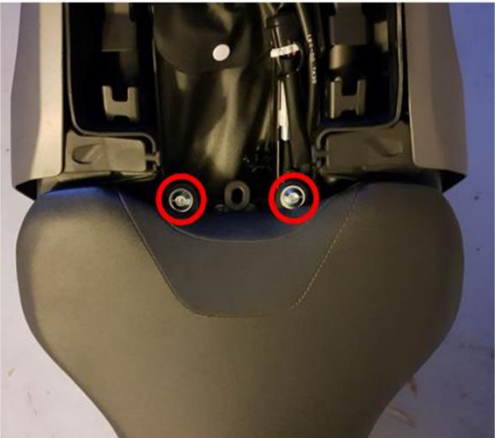


● 2 x 5mm allen bolt

STEP4: Remove side cover fasteners

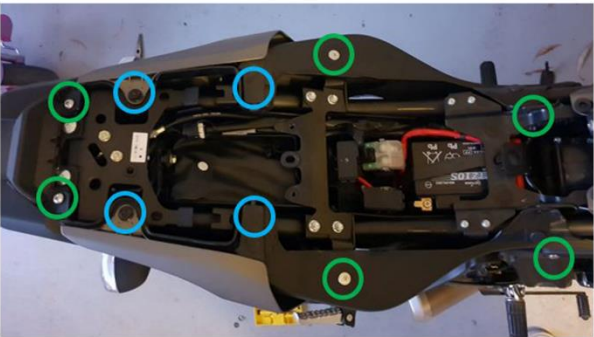



● 6 x 4mm Allen bolt
● 4 x 12mm Hex bolt

STEP5: Remove Under Tray Fasteners

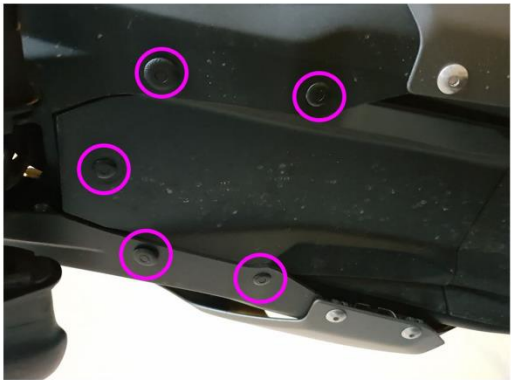

● 5 x Plastic Rivets
i Push centre to release

STEP6: Remove Side Covers

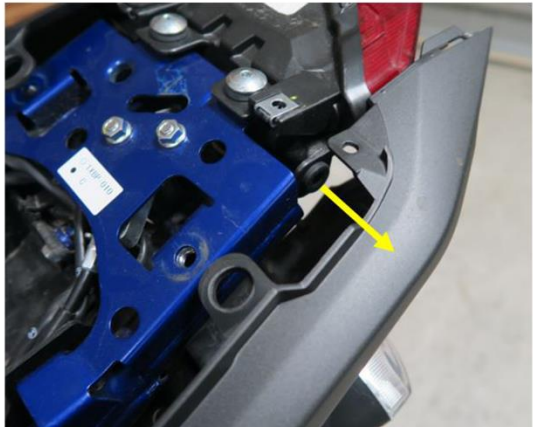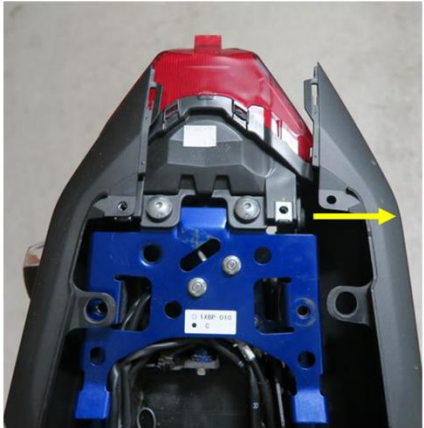

● Pull outward to release from rubber grommet. This will expose the OEM fender mounting bolts
i The 2014-17 model is pictured however the grommets are in a similar location

STEP7: Remove OEM Fender



● 4 x 8mm Bolts
△ Set asside for later use

SECTION 2: OEM FENDER DISASSEMBLY



- i** Completely disassemble entire OEM fender by removing all fasteners
- Set aside indicators and retaining clips for later use
- Set aside licence plate light, washers and nuts for later use

SECTION 3: RENKEN TAIL TIDY ASSEMBLY

STEP1: Fit licence plate light



- Use retained nuts and washers from Section 2

STEP2: Fit indicators



- Fit provided indicator spacers to indicators
- Fit indicators to tail tidy using hardware from Section 2

STEP3: Attach tail tidy to bike using 8mm bolts from Section 1 Step 9

STEP4: Fit licence plate to tail tidy


STEP5: Feed wiring back into bike and reconnect connectors

STEP6: Reinstall side panels and under tray

IMPORTANT NOTE:

When reinstalling the under tray, on some bikes the OEM plastic rivets may be difficult to fully engage. We have supplied additional plastic rivets in this kit to use for a more secure fit.

If the OEM plastic rivets provide a secure fit, disregard this note.

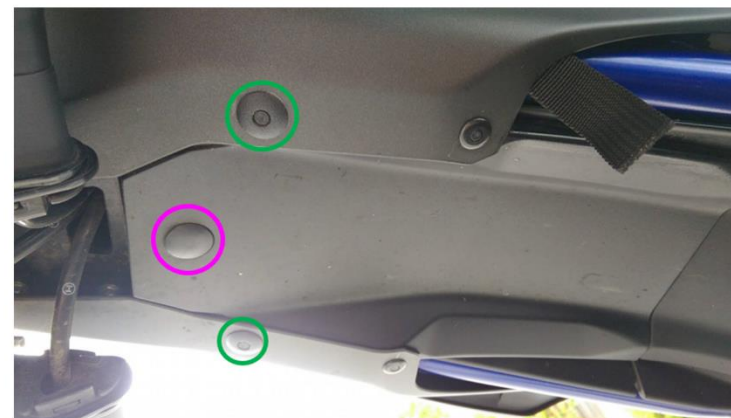

- 1 x Ribbed Rivet
- i** Ribbed Rivet only goes through under tray
- 2 x Push Rivet
- i** Push Rivets go through both the side cover and under tray

STEP7: Reinstall trim pieces and seat

INSTALLATION COMPLETE!