

Front Fender Mud Guard Package Installation (Instruction ID: 84263456)

Installation Instructions Part Number

84263456

Note: Please rear instructions thoroughly before starting.

Tools Required

- Socket wrench
- 7 mm Socket
- Plastic Trim Removal Tool
- Clean Cloth/Rag


Kit Contents

Qty	Description
1	Left Hand Mud Guard
1	Right Hand Mud Guard
1	Instruction Sheet


Procedure

Note: Do not use power tools to install splash guard fasteners


1. Turn front tire to provide clearance.
2. Clean and degrease body panel where mud guards are to be located.

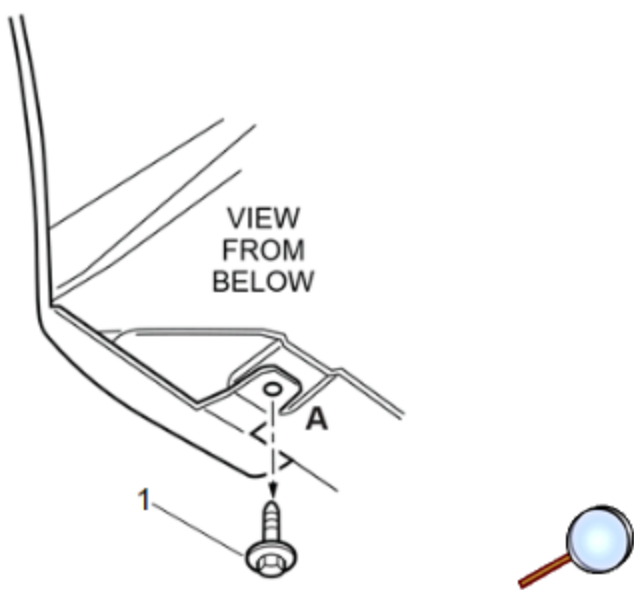

3. Use 7 mm socket to remove screw in location (A). Retain screw.

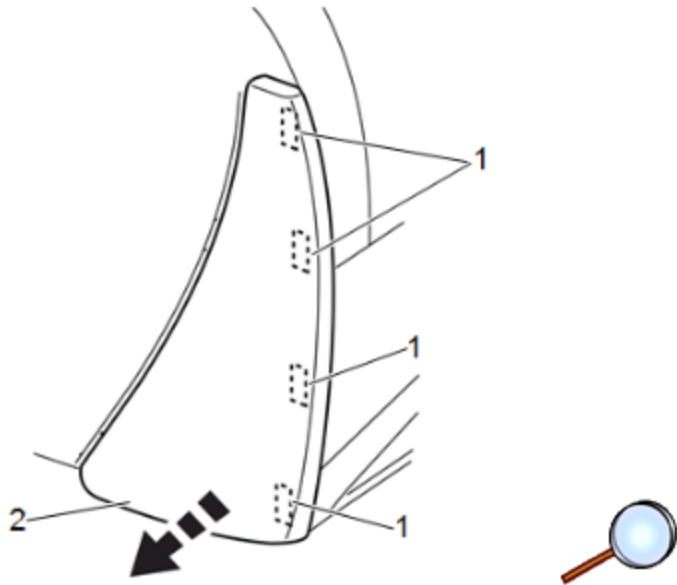


4. Use plastic trim removal tool to dislodge the existing stone protector panel clips (1) from fender. Remove the existing stone protector (2). Take care not to damage paint.

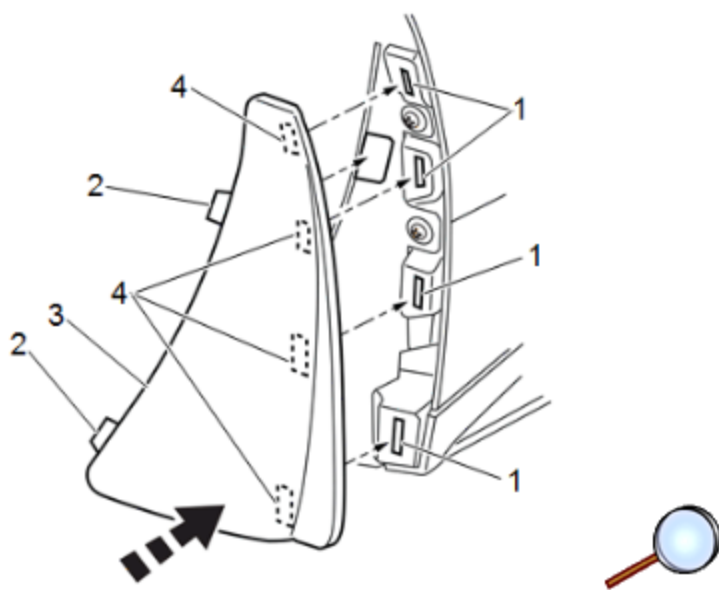

5. Guide mud guard tabs (2) into wheel liner slots.

6. Align mud guard clips (4) with clip insertion holes (1) and snap mud guard (3) in.

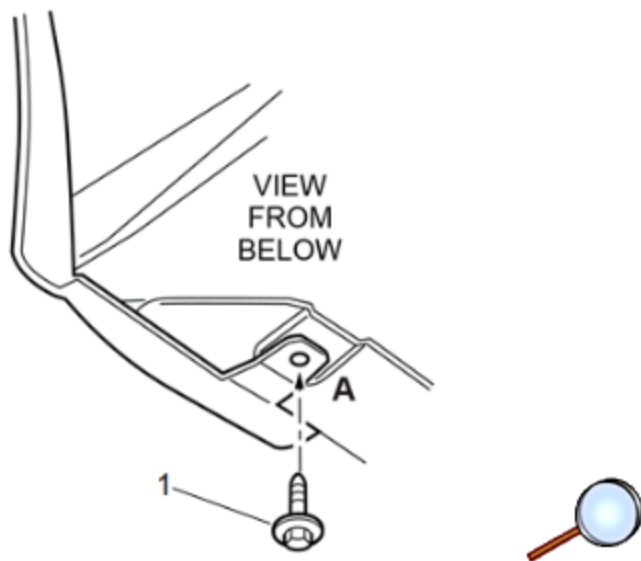

Caution: Use the correct fastener in the correct location. Replacement fasteners must be the correct part number for that application. Fasteners requiring replacement or fasteners requiring the use of thread locking compound or sealant are identified in the service procedure. Do not use paints, lubricants, or corrosion inhibitors on fasteners or fastener joint surfaces unless specified. These coatings affect fastener torque and joint clamping force and may damage the fastener. Use the correct tightening sequence and specifications when installing fasteners in order to avoid damage to parts and systems.

7. Reinstall screw (1) at location **A**.

Note: Max torque on M4.2 screw is 3.0 Nm.

8. Repeat procedure for the other side.

