



## FBM650C - Installation Instructions

The NoviStretch™ FBM650C mask is easily secured using snap fasteners integrated into the design. This requires snap-head screws, supplied in the hardware kit, be installed on the car as described below. The initial installation should require approximately 15 minutes to complete. After setup the mask can be easily installed and removed in just under one minute.

The **FBM650C** is designed for installation on all **2016 - Present 6th Generation Camaros**.

### Enclosed you will find:

- FBM650C Mask
- Hardware Kit containing eight (8) snap-head screw studs; one (1) adhesive backed Velcro strip
- Installation Instructions & Warranty Information  
**(Please read all information carefully.)**

### Tools Required:

- Short handle Philips screwdriver
- #15 Torx head screwdriver

### Step 1


Clean the bumper and surfaces under the car and the fender wells thoroughly (*tar and grease remover is recommended*).

### Step 2 (Fig. 2)

Turn the front wheels to gain easier access to the fender liner mounting screws that you will be replacing.


### Step 3 (Fig. 3.1 and 3.2)

Locate the three (3) mounting screws around the edge of the liner vent inside the fender liner and remove them. Replace each one as you go with the supplied snap-head screw studs. Repeat this step on the other side of the car.

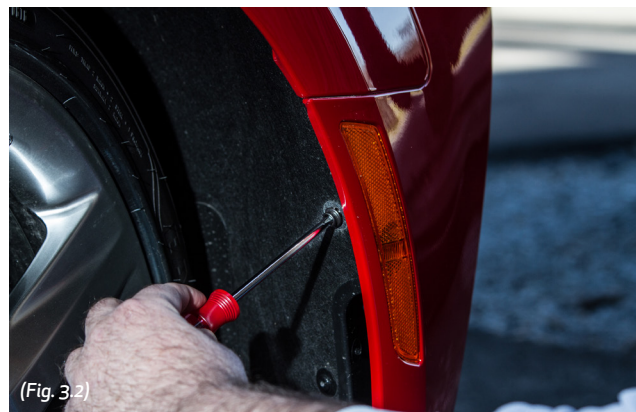

### Step 4 (Fig. 4.1)

Begin the installation by fastening the snaps on one end of the mask to the screws just installed in the fender liner.

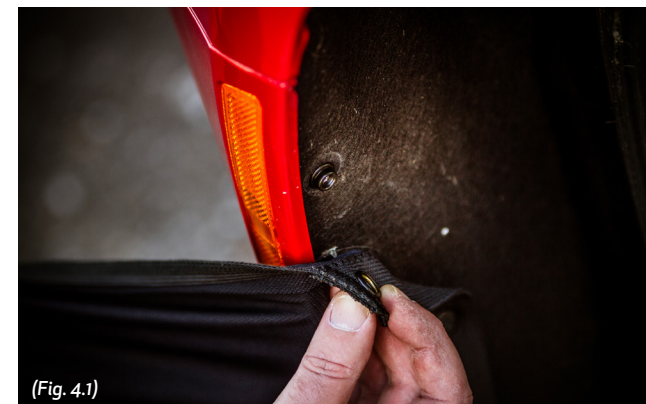

### Step 5 (Fig. 5)

Stretch the mask across the front of the bumper and attach to the other side of the car.



**Note:** the tension in the mask is normal and important to the overall performance of the product

## Step 6 (Fig. 6.1, 6.2, and 6.3)

Open the hood and remove the two (2) outer most OEM screws located just behind the edge of the bumper cover and install a snap head screw stud. Holding the top of the mask pull it up to the hood opening and fasten the snaps at each corner of the mask to the screws just installed.



(Fig. 6.1)



(Fig. 6.2)



(Fig. 6.3)

## Step 7 (Fig. 7.1)

Pull the bottom edge of the mask down under the bumper. The installation is now complete.

**Optional:** If a tighter or altered fit is desired, note the position of the Velcro strip on the bottom/center of the mask. Mark this position on the car and install the mating piece of Velcro to the stretch or tightness desired, taking care to completely clean the mounting surface.

**Caution:** allow 24 hr. cure time before trying to remove the mask after it has been attached.



(Fig. 7.1)

## Surface Prep & Care Instructions

**NoviStretch®** covers are constructed from synthetic stretch fabric that will not chaff or damage the painted surface and have been designed to perform in all weather & road conditions.

It is **important** that the painted surface be clean prior to installation of the cover. Over time and use, dirt or dust, may work its way between the cover and the painted surface. Regular cleaning of both the cover & surface is **essential** to provide proper protection. Severe weather conditions or travel on off-road surfaces increase the recommended frequency for inspection and cleaning.

## Surface Prep & Care Instructions (cont.)

It is expected to see some cosmetic damage (small holes, thinning, fading or discoloration) to the mask over time & miles as it does its job. However, proper care will maximize product life.

## Cleaning and Care Instructions

- The mask can be cleaned by rinsing in water to remove any dirt or debris then squeezing the water out and let air-dry. Wash (by hand) only as necessary.
- Use a concentrated soap solution on areas of the mask that may be particularly dirty.
- For the best life do not leave the mask on the car while parked in the sun for extended periods.
- Avoid obstacles and low clearance areas in the roadway that may come in contact with the bottom of the car causing the mask to snag and the material to tear.

**Notice:** Patent Pending; NoviStretch™ Copyright © 2016 Novigo Designs, LLC. All Rights Reserved.

## NOVIGO DESIGNS™ TWELVE (12) MONTH LIMITED WARRANTY

Novigo Designs, LLC warrants this product against "defects in material and workmanship" for a period of twelve (12) months from the original date of purchase by the original consumer purchaser. For full details and explanation of warranty coverage, requirements and policy – please go to the "Support" section of [www.NoviStretch.com](http://www.NoviStretch.com). Novigo Designs (and its authorized distributors) liability is limited to the materials and workmanship of the product. Novigo Designs is not responsible for damage caused by the product to the paint or finish of the vehicle. To avoid any possible damage and to get the maximum benefit from your Novigo Designs product, carefully follow the installation and care instructions provided. Novigo Designs, LLC.