
2020+ C8 Corvette

Waterfall Speaker Badge Removal Instructions Wildhammer Motorsports – Wildhammer Motorsports.com

Coupe


1.) Using leverage from the underside of the waterfall speaker, simply pull upwards to remove the silver trim piece.

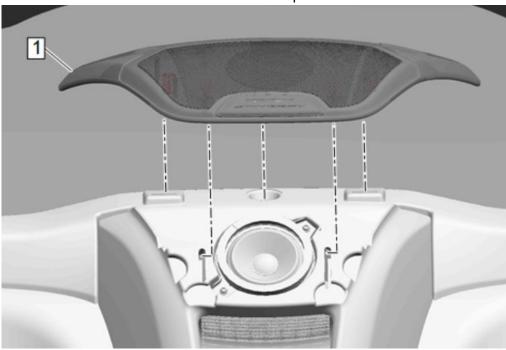


- 2.) Once removed, you should have easy access to the backside of the current badge, simply apply pressure from the backside to push out the current badge. You may need to use a plastic trim tool to help break loose the edges from the backside of the badge.
- 3.) Press new badge into place, reinstall waterfall speaker trim.

Convertible

1.) Using leverage from the underside of the waterfall speaker, simply pull upwards to remove the silver trim piece.

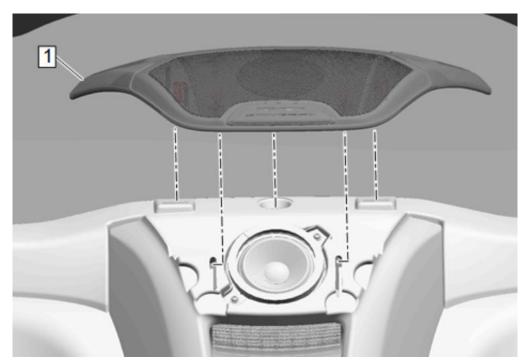

2.) Convertible Models will have an extra body reinforcement bolt/tether that's on the bottom side of the speaker trim, we do not suggest removing this, as you should have enough clearance to push on the backside of the current emblem to remove it from the speaker trim. You may need to use a plastic trim tool to help break loose the edges from the backside of the badge.

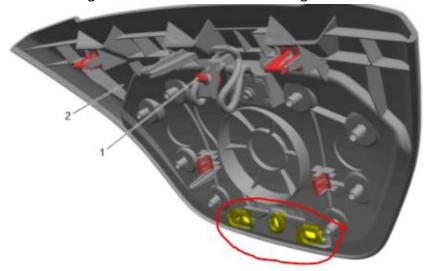



3.) Press new badge into place, reinstall waterfall speaker trim