


INSTILLATION MANUAL YAMAHA MT-07/FZ-07 2014-18

INCLUDED IN KIT

TAIL TIDY BRACKET 2 X INDICATOR SPACERS

TOOLS REQUIRED:

4,5 AND 6MM ALLEN KEY 8MM SOCKET PHILLIPS HEAD SCREWDRIVER

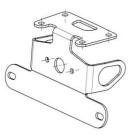



SECTION 1: REMOVE OEM FENDER

STEP1: Remove pillion seat (keyhole on left side of body)

STEP2: Remove riders seat




- 2 x 5mm allen bolt
- Fold corner of seat padding to access bolt

STEP3: Remove seat trim



• 2 x Phillips head screw

STEP 4: Remove side cover fasteners

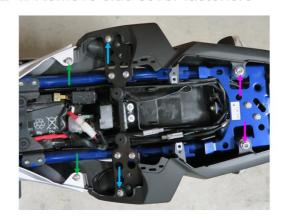


- 2 x 4mm Allen bolt
- 2 x 8mm Hex bolt
- 2 x 6mm Allen bolt

STEP5: Remove brake light trim




2 x Phillips head screw





- 6 x Plastic rivets
- Push centre to release then pull down to remove

STEP8: Unplug electrical connectors

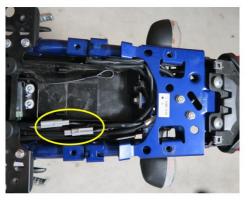

 3 x Connectors for rear indicators and licence plate light

STEP 9: Remove OEM fender



- 4 x 8mm Bolts

STEP7: Remove both side covers





- Pull side cover outward to detach from rubber grommet
- Slide side cover rearward to remove from bike

SECTION 2: OEM FENDER DISASSEMBLY






- Completely disassemble entire OEM fender by removing all fasteners
- Set asside indicators and retaining clips for later use
- Set asside licence plate light, washers and nuts for later use

SECTION 3: RENKEN TAIL TIDY ASSEMBLY

STEP1: Fit licence plate light



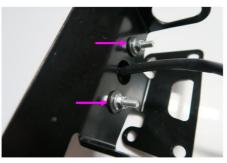

Use retained nuts and washers from Section 2

STEP2: Fit indicators





- Fit provided indicator spacers to indicators
- Fit indicators to tail tidy using hardware from Section 2

STEP3: Attach tail tidy to bike using 8mm bolts from Section 1 Step 9

STEP4: Fit licence plate to tail tidy

STEP5: Feed wiring back into bike and reconnect connectors

STEP6: Reinstall side panels, trim pieces and seats

INSTILLATION COMPLETE!