

Congratulations on your recent aquisition! We've prepared a handy guide to help you instal your oringal painting by Stewart Stephenson. For larger pieces, we do recommend contacting an art installation specialist if you do not feel 100% confident with the process.

If you do decide DIY, you may want to grab a friend to help you install your painting because the artwork can be quite heavy. All of the items that you will need are listed below, and are followed by a few helpful illustrations.

If you're having trouble, give us a call at 778.861.8292 or email us at info@stewartstephenson.com.





#### anchor your art!


When you use an anchor, you do not have to find the stud in the wall.

We use #8 wall anchors and steel screws to make sure the paintings are secure on the wall. They're great for regular drywall, but if you're installing on brick or concrete, make sure to ask your local hardware store for the appropriate hanging materials...

### Installation Instructions

A few easy steps to install your artwork by Stewart Stephenson...


### if your painting does not have pre-drilled holes in the back ...

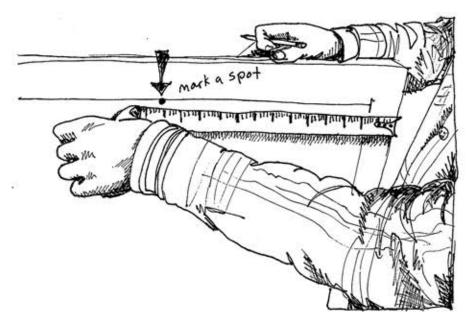

If your painting does not have pre-drilled holes in the back, you will need to measure out spots to make new holes.


Measure out two spots **on the back** of the painting. You'll want to place two holes about 2 inches from the top of the piece. Make sure you have at least 2 feet of space between the holes. Having two hanging points will stabalize the artwork on the wall.

(smaller paintings only need one hole in the center of the back)

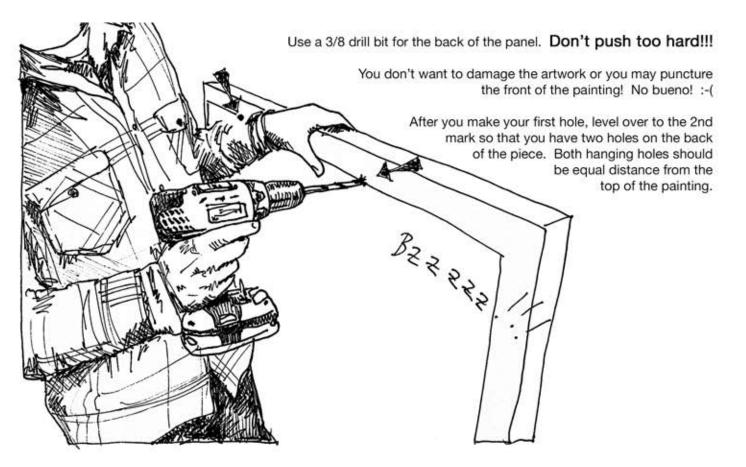




A few easy steps to install your artwork by Stewart Stephenson...

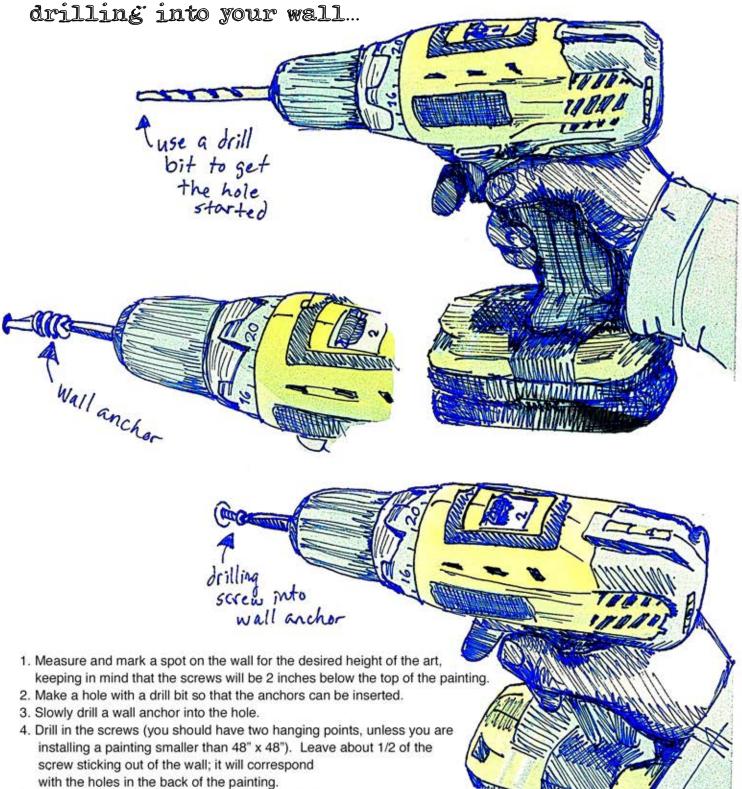

5. Make a second hole to line up with the other hole on the back of the painting. **Use a level!** 

# A few easy steps to install your artwork by Stewart Stephenson...

lining up the artwork with the screws...

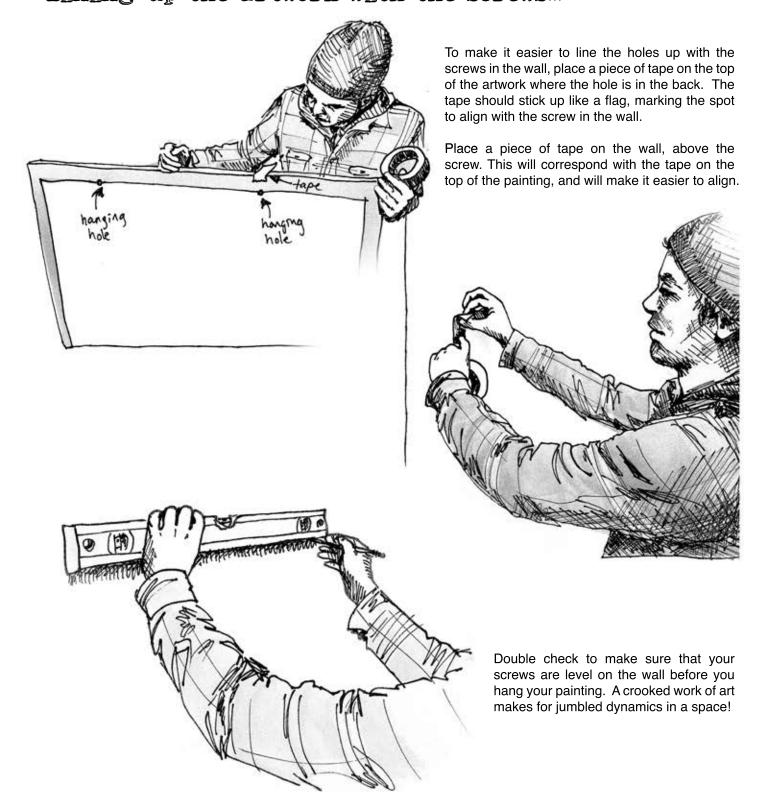

# A few easy steps to install your artwork by Stewart Stephenson...

### getting that sweet art up on your wall ...



Line up the tape on the top of the painting with the tape on the wall. You might have to jiggle the artwork a little bit until both screws are in the holes on the back of the painting. If the artwork does not go on the wall easily, double check to make sure the screws are **exactly** the same distance apart as the holes on the back of the piece.

Use your level again just to make sure that the artwork is perfectly straight.





Gently use a microfiber cloth to keep your painting dust and fingerprint free! Use light, circular motions to ensure that you do not scratch the art. (Never use any cleaning products on the surface of the painting.) Voila! Now, enjoy your art!!!