THE BMW 4 SERIES CONVERTIBLE.

Displays

Multifunctional instrument display

Concept


The instrument display is a variable display. When you change to a different program via Driving Dynamics Control, the displays in the instrument display adapt to the respective program.

General information

The display change in the instrument display can be deactivated via iDrive.

Some of the displays in the instrument display may differ from illustrations in this Owner's Manual.

Overview

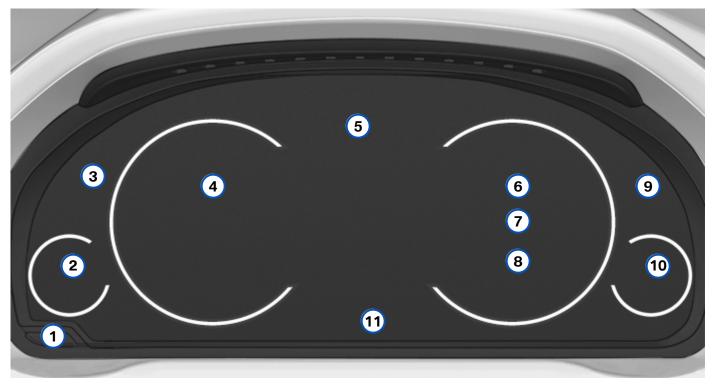

1 Display/reset miles	7 ECO PRO displays
2 Fuel gauge	8 Selection lists
3 Messages, for instance Check Control	Messages, for instance Check Control
4 Speedometer	10 Engine oil temperature
5 Messages, for instance Check Control	11 Onboard Computer

Switching the change of display on and off

You can set whether the instrument display automatically changes to the ECO PRO or SPORT in the display when you switch driving modes.

Via iDrive:

6 Tachometer

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Displays"
- 4. "Instrument panel"
- 5. "ECO PRO info" or "Driving mode view"


Switching zoom function on/off

The current speed can be shown enlarged in the speedometer.

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Displays"
- 4. "Instrument panel"
- 5. "Magnifier function"

Sport displays

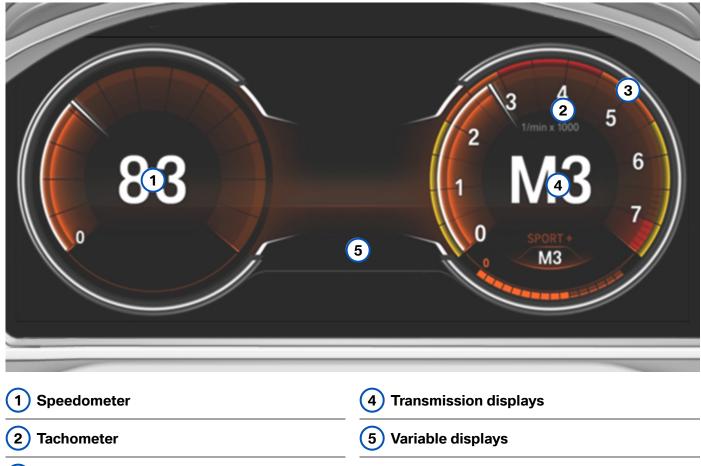

3 Shift point indicator

In the Sport and Sport+ programs the instrument display switches to a sporty view. This view supports a sporty driving style with more prominent representation of the tachometer, the transmission displays, and the vehicle speed.

Shift point indicator

Concept

Depending on the vehicle equipment, shift point indicators in the tachometer indicate the optimum shift point. Thus, with a sporty driving style, the best possible vehicle acceleration is achieved.


General information

Steptronic Sport transmission: shift lights are shown, when the SPORT+ driving program is activated. The M manual mode of the transmission must be activated too.

Switching on shift lights

- 1. Select SPORT+ using the Driving Dynamics Control.
- 2. Activate the M/S manual mode of the transmission.

Display

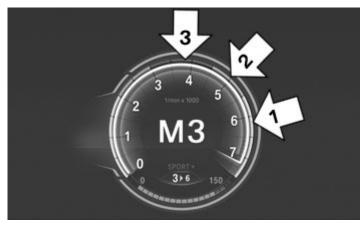

- Current engine speed is displayed in the tachometer.
- Arrow 1: successive yellow illuminated fields indicate an increase in the speed.
- Arrow 2: successive orange illuminated fields indicate the upcoming shift moment.
- Arrow 3: fields are illuminated in red. Do not wait any further to shift.

When the maximum permissible speed is reached, the entire display flashes and the supply of fuel is interrupted in order to protect the engine.

Check Control

Concept

The Check Control system monitors functions in the vehicle and notifies you of malfunctions in the monitored systems.