



© all rights reserved

# GRAVEDA® Vaporizer Medic+

**GRAVEDA®**  
Registered Trade Mark

**GRASPRESSO®**  
Registered Trade Mark



GRAVEDA® Vaporizer Medic+  
With stainless steel herbal chamber  
With ceramic Mouthpiece

Model number: Medic+

# Table of contents

**GRAVEDA®**  
Registered Trade Mark

**GRASPRESSO®**  
Registered Trade Mark

---

Page 2 Contact

Page 3 Introduction

Page 4 Precautions

Page 5 Safety Instructions

Page 6 Unpacking and assembly

Page 7 Functions and components

Page 8 Commissioning

Page 9 Warranty

Page 10 Technical data sheet

# Contact

**GRAVEDA®**  
Registered Trade Mark

**GRASPRESSO®**  
Registered Trade Mark

---

STELER GmbH  
Isarstraße 8  
85417 Marzling  
GERMANY

[info@graveda.de](mailto:info@graveda.de)

[www.graveda.de](http://www.graveda.de)

[www.shop.graveda.de](http://www.shop.graveda.de)

# Introduction

**GRAVEDA®**

Registered Trade Mark

**GRASPRESSO®**

Registered Trade Mark

---

The device must be used as described in the manual. If it is used for purposes other than those described in the manual or for purposes not intended for the device, the warranty/guarantee will be void.

To avoid accidents, first read the precautions (page 4) and safety instructions (page 5) and Unpacking and assembly (page 6).

Read the instructions carefully to ensure that you use the device correctly. After you have familiarized yourself with the manual and the unit, keep the manual in a safe place so that you can refer to it in the future.

© Copyright by GRAVEDA®

The published contents, brand names, images and information provided are subject to German copyright and ancillary copyright law. Any kind of reproduction, editing, distribution, storage and any kind of use outside the limits of copyright law requires the prior written consent of the respective copyright holder. Unauthorized copying/saving of the information and brand names provided is not permitted and is punishable by law.

Disclaimer - This product is intended for legal use only. Please always observe the respective laws, regulations and jurisdictions in your respective country.

Keep this manual in a safe place for future reference!

# Precautions

**GRAVEDA®**  
Registered Trade Mark

**GRASPRESSO®**  
Registered Trade Mark

---

The following precautions are designed to prevent accidents and injuries to yourself and others. Please ensure that you read, understand and follow these precautions thoroughly before using the product.

If the product appears to be damaged or there is obvious damage or malfunction, please contact GRAVEDA® Customer Service immediately at [info@graveda.de](mailto:info@graveda.de)






- Never reach into the hot herb chamber or stick your finger in. There is a danger of burns!
- Make sure that the appliance is always kept clean and free of dust.
- Always connect the power plug to the appliance first and only then to the socket.
- Before you disconnect the appliance from the power supply, make sure that the appliance is switched off.
- The appliance is supplied with a power cord. DO NOT attempt to charge the unit with any other power cord/USB or otherwise without proper grounding.
- Always turn the power off when you are not using the unit.

# Safety Instructions

**GRAVEDA®**  
Registered Trade Mark

**GRASPRESSO®**  
Registered Trade Mark

---

- Use this product only as described in this manual.
- Always keep the product out of the reach of children.
- Always turn the appliance off and let it cool down completely before cleaning, servicing or repairing.
- DO NOT immerse the appliance, power cord or plugs in water or any other liquid.
- DO NOT place the product on or near a gas or electric burner, heated stove, or other heat source.
- DO NOT operate the product with a damaged cord or USB cable or plug. 
- DO NOT leave any cables near a heat source. It may deform the cable or melt the insulation and cause electric shock or fire.
- Always insert the USB charging cable completely. 
- DO NOT touch the power plug, cable or device with wet hands.
- If you need to unplug the power cord, unplug it by the plug and not by the cord itself. The cable could otherwise be damaged!
- Do not scratch, cut, twist, bend, tie or place a heavy object on the cable.
- DO NOT drop the power cord over the edge of the table where it could be accidentally bent or someone could trip over it. 
- DO NOT connect too many power plugs to the same power outlet.
- DO NOT operate the product after the product has malfunctioned if it has been dropped or damaged in any way.
- DO NOT cover the product with a cloth. Doing so may result in heat and fire.
- Always keep the product out of the reach of children.



# Unpacking and assembly

**GRAVEDA®**  
Registered Trade Mark

**GRASPRESSO®**  
Registered Trade Mark

---

**ATTENTION:** Always keep the packaging material (cardboard, foils, polystyrene, plastic bags and straps) out of reach of children!  
There is danger of suffocation and strangulation!



Always keep the outer carton; it is suitable and designed for the proper transport of the device and for stowing away. Only use this original carton for returns

1. Place the box on a straight, stable surface
2. Open the box carefully! With scissors or a knife.
3. Remove the operating instructions and all other loose accessories
4. Remove the packaging materials and carefully take the device out of the carton.
5. After unpacking the device, check it for damage. If there is any damage, contact the GRAVEDA customer service immediately [info@graveda.de](mailto:info@graveda.de)
6. Make sure that all accessories are present

**1 x GRAVEDA® Vaporizer Medic+**

**1 x cleaning tool**

**1 x cleaning brush**


**1 x USB power cable**

**5 x Filter screens**

# Functions and components

**GRAVEDA®**  
Registered Trade Mark

**GRASPRESSO®**  
Registered Trade Mark

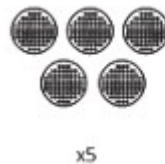



# Commissioning

**GRAVEDA®**  
Registered Trade Mark

**GRASPRESSO®**  
Registered Trade Mark

---

Check the voltage before using the device. The correct voltage is 220-240V/50Hz.

Insert the power plug into the unit. Then plug the power plug into the power outlet first.

You can set the temperature in Celsius and Fahrenheit

The device comes pre-installed with a powerful 3200mAh battery. It is strongly recommended to charge the device before first use to ensure maximum battery life.

## 1. charging the GRAVEDA® Medic+

Before using the GRAVEDA® Medic+ please make sure that the vaporizer is fully charged. Connect the GRAVEDA® Medic+ to your computer or power adapter with the supplied USB charging cable and the GRAVEDA® Medic+ vaporizer will be charged. The charging bars on the device will now show you that the GRAVEDA® Medic+ is charging.

The GRAVEDA® Medic+ is fully charged as soon as the charging indicator shows all bars fully. The GRAVEDA® Medic+ comes pre-installed with a powerful 3200mAh battery. It is strongly recommended to charge the GRAVEDA® Medic+ before first use to ensure maximum battery life.

## 2. switch on GRAVEDA® Medic+ and adjust temperature

Within two (2) seconds, quickly press the power button three (3) times to turn on the GRAVEDA® Medic+. The OLED display indicates that the GRAVEDA® Medic+ has been turned on by showing "N" and "S".

Note: "N" means normal mode, "S" means smart path mode.

The OLED display shows the current temperature of the heating chamber. To change the temperature of the heating chamber, simply use the Plus and Minus buttons. The temperature is increased / decreased in 1° steps. Leave the GRAVEDA® Medic+ standing while it heats up automatically. When the desired temperature is reached, the heating symbol is shown on the display and the GRAVEDA® Medic+ is ready for operation. Press and hold the "Plus" and "Minus" keys simultaneously to change from Fahrenheit to Celsius degrees or from Celsius to Fahrenheit degrees.

# Commissioning

**GRAVEDA®**  
Registered Trade Mark

**GRASPRESSO®**  
Registered Trade Mark

---

## 3. fill the herb chamber

The mouthpiece is held by two strong magnets. To access the heating chamber, simply grasp the ceramic mouthpiece and pull it upwards to remove the mouthpiece from the GRAVEDA® **Medic+**. Fill the chamber with desired ground material by gently pressing the material into the chamber with the tool provided. For best results, the chamber should not be filled more than 3/4 and should not be tamped too tightly. Please note that the airflow of the GRAVEDA® **Medic+** is influenced by the filling of the chamber. If the material for example is stuffed too tightly into the chamber it blocks the air flow. Too much material can cause that not all material is vaporized evenly. It is very important to make sure that the chamber is filled correctly so that you can vaporize with your GRAVEDA® **Medic+** right from the beginning.

## 4. smart path

If you select "S", the OLED display indicates that the GRAVEDA® **Medic+** has been switched to Smart Path mode by showing the MIN temperature. You can then adjust the temperature range and time of your session. The OLED display indicates that the heating chamber has reached the desired minimum temperature by displaying the heat symbol; the temperature is increased to the desired maximum temperature at a constant rate during the desired session time.

## 5. switch off the device

To turn off the GRAVEDA® **Medic+**, quickly press the power button three (3) times within two (2) seconds.

## 6. cleaning the GRAVEDA® **Medic+**

The mouthpiece can be cleaned with min. 80%/vol isopropanol alcohol. Let the mouthpiece dry completely before putting it back on the GRAVEDA® **Medic+**. Remove the filter screen from the mouthpiece and clean or replace it if necessary. The heating chamber can be cleaned with the brush tool provided or use cotton swabs with wooden handle. To clean the outer area of the chamber and the air passage, you can use a small amount of min. 80%/vol isopropanol alcohol with a cotton swab, but do not use detergents or scouring agents.

# Commissioning

**GRAVEDA®**  
Registered Trade Mark

**GRASPRESSO®**  
Registered Trade Mark

---

Never put your fingers into the hot herb chamber - danger of injury! Danger of burns! Never leave children unattended with the appliance!

Make sure that the GRAVEDA® **Medic+** has cooled down completely before cleaning. Clean the herb chamber regularly. Apply a small amount of alcohol to a clean cloth/wadding stick (preferably with a wooden handle) and wipe the inside of the chamber with it. It is best to use at least 80% isopropanol alcohol by volume

Wipe the GRAVEDA® **Medic+** with a dry, clean cloth.  
Repeat these steps to clean all associated components.

Always switch off the GRAVEDA® **Medic+**  
if you stop using it!

#GRAVEDALIEBDICH 

# Warranty

**GRAVEDA®**  
Registered Trade Mark

**GRASPRESSO®**  
Registered Trade Mark

---

1. we offer free warranty service only for normal use of the equipment.
2. the warranty does not apply to accessories, such as glass top or wear and tear of the battery.

Spare parts are available at cost price from  
GRAVEDA® support at [info@graveda.de](mailto:info@graveda.de)

4. please pack the device well when sending it in for repair.
5. please give us as much details as possible about the problems you have with your product, so we can react quickly.

**It is important to us that you can leave our house as a satisfied customer!**

# Technical data sheet

**GRAVEDA®**  
Registered Trade Mark

**GRASPRESSO®**  
Registered Trade Mark

Model Typ	GRAVEDA® Medic+
Dimensions	115x65 mm
Battery	3200mAh
Display	OLED
Mouthpiece	Ceramic fixed with magnet
Temperature scale	degrees Celsius and Fahrenheit
Voltage	220-240V
Certification	CE

