



# UV-C SANITIZER

## INTRODUCTION

The KAPSULE™ UV Sanitizing Wand 2.0 provides effective protection from germs, viruses, bacteria, dust mites and mold throughout your home. Used regularly on surfaces throughout your home to disinfect (in addition to regular cleaning of bedding, floors and other surfaces), it will protect your home without the use of sprays or harsh chemicals.




## FEATURES

- Naturally eliminates germs that cause colds, infections, asthma and allergic reactions
- Destroyed over 99.9% of E. coli in laboratory tests
- Chemical-Free

- Odorless
- No harmful residue
- A hypoallergenic way to disinfect kitchen surfaces and utensils, beds, sofas, children’s toys and more
- Safe and easy to use
- Silent operation
- New Safety Feature: A built-in safety switch will automatically turn off the UV-C light if the device is turned upwards, protecting the user from exposure to the UV Lamp

**WARNING:** Do not expose eyes or skin directly to UV-C light. Keep this device out of the reach of children at all times.

### PRODUCT DIAGRAM

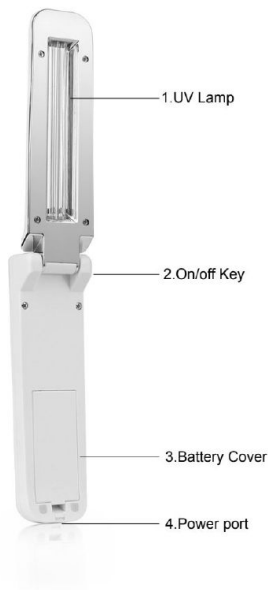

### OPERATING THE KAPSULE™ UV SANITIZING WAND 2.0

## **Inserting Batteries**

Open the battery cover. Insert 4 AAA Alkaline batteries (not included) into the battery compartment and close the cover. The KAPSULE™ UV Sanitizing Wand 2.0 is now ready to use.

## **Connecting to USB**

Take the USB cable and insert it into the USB connecting port. Connect to a USB power source (such as a powerbank). The KAPSULE™ UV Sanitizing Wand 2.0 is now ready to use.

## **Turning On and Off**

To turn the device on, face the KAPSULE™ UV Sanitizing Wand 2.0 downwards away from you and press and hold the On/Off Key for 3 seconds. The KAPSULE™ UV Sanitizing Wand 2.0 is ready for use.

## **Safety Switch**

The KAPSULE™ UV Sanitizing Wand 2.0 contains a safety switch that protects users from accidental direct contact with the UV-C light. When the UV-C lamp is turned to the upright position (bulb facing up) the switch will automatically cut off the UV-C light. When the UV-C lamp is pointing downwards, it will resume lighting.

## **THE KAPSULE™ UV SANITIZING WAND 2.0 CLEANING GUIDE**

## **Safe and effective use**

Hold the KAPSULE™ UV Sanitizing Wand 2.0 approximately 1-2 inches from the surface of the item that you wish to sanitize and gradually move the wand over the entire surface area. Allow the light to stay on each area for 5 -10 seconds to ensure optimum exposure.

## **WHAT IS UV-C LIGHT?**

UV stands for ultraviolet light. Ultraviolet light represents the frequency of light between 100 nanometers (nm) and 400nm and cannot be seen with the naked eye. Within the UV spectrum lie three distinct bands of light: UV-A, UV-B, and UV-C.

**UV-A (400nm - 315nm):** The long wave UV light (315nm to 400nm) or UV-A refers to what we commonly call “black light.” This is the longest wavelength region and has the lowest energy. UV-A represents the largest portion of natural UV light.

**UV-B (315nm - 280nm):** The UV-B (280nm to 315nm), or mid-range UV, causes sunburn.

**UV-C (280nm - 100nm):** The germicidal UV light (100nm to 280nm), or UV-C, is effective in microbial control.

Scientific research has proven that the most effective frequency for microbial destruction is between 280nm and 200nm, which is within the UV-C band. Therefore, as long as the nm frequency of a germicidal lamp is well controlled within that range, the microorganisms will be destroyed effectively.

**Please note:** Opportunities for infection are abundant and virtually everywhere, so it is important to realize that use of the KAPSULE™ UV Sanitizing Wand 2.0 does not guarantee that the user will avoid illness. To avoid microbial infection, one must take a wide range of precautions. The use of the KAPSULE™ UV Sanitizing Wand 2.0 is an important precaution, but not the only precaution one should take.

## **SPECIFICATIONS**

Size:	4.9in x 1.3in x 0.9in
Weight:	0.14lb
Voltage:	DC 5V
UV Wavelength:	254nm
Power Supply	Alkaline Batteries (4 X AAA) / USB

## **WARRANTY**

KAPSULE™ branded items purchased from [www.kapsule.store](http://www.kapsule.store) include a 1-year limited replacement warranty. If you have any questions not covered in this guide, please email [support@kapsule.store](mailto:support@kapsule.store). Customer care specialists are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.