

**Revision D:**

• MUFZ-KJ25VE - [E2], [ER2], [ET2], MUFZ-KJ35VE - [E2], [ER2], [ET2] and MUFZ-KJ50VE - [E2], [ER2], [ET2] have been added.

Please void OBH667 REVISED EDITION-C.

# OUTDOOR UNIT SERVICE MANUAL



**No. OBH667  
REVISED EDITION-D**


## Models

**MUFZ-KJ25VE** [E1], [E2], [ER1], [ER2], [ET1], [ET2]

**MUFZ-KJ35VE** [E1], [E2], [ER1], [ER2], [ET1], [ET2]

**MUFZ-KJ50VE** [E1], [E2], [ER1], [ER2], [ET1], [ET2]

Indoor unit service manual  
MFZ-KJ•VE Series (OBH666)

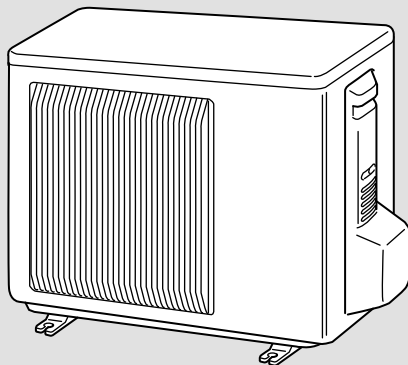

**MUFZ-KJ25VE  
MUFZ-KJ35VE**

## CONTENTS

1. TECHNICAL CHANGES .....	2...
2. PART NAMES AND FUNCTIONS .....	3.
3. SPECIFICATION .....	4...
4. NOISE CRITERIA CURVES .....	6..
5. OUTLINES AND DIMENSIONS .....	7..
6. WIRING DIAGRAM .....	8.....
7. REFRIGERANT SYSTEM DIAGRAM .....	12
8. PERFORMANCE CURVES .....	14.
9. ACTUATOR CONTROL .....	25..
10. SERVICE FUNCTIONS .....	26..
11. TROUBLESHOOTING .....	27..
12. DISASSEMBLY INSTRUCTIONS .....	50

**PARTS CATALOG (OBB667)**

**NOTE:**

RoHS compliant products have <G> mark on the spec name plate.

## Use the specified refrigerant only

### Never use any refrigerant other than that specified.

Doing so may cause a burst, an explosion, or fire when the unit is being used, serviced, or disposed of.

Correct refrigerant is specified in the manuals and on the spec labels provided with our products.

We will not be held responsible for mechanical failure, system malfunction, unit breakdown or accidents caused by failure to follow the instructions.

#### <Preparation before the repair service>

- Prepare the proper tools.
- Prepare the proper protectors.
- Provide adequate ventilation.
- After stopping the operation of the air conditioner, turn off the power-supply breaker and remove the power plug.
- Discharge the capacitor before the work involving the electric parts.

#### <Precautions during the repair service>

- Do not perform the work involving the electric parts with wet hands.
- Do not pour water into the electric parts.
- Do not touch the refrigerant.
- Do not touch the hot or cold areas in the refrigeration cycle.
- When the repair or the inspection of the circuit needs to be done without turning off the power, exercise great caution not to touch the live parts.

#### Revision A:

- MUFZ-KJ50VE -[E1] has been added.

#### Revision B:

- MUFZ-KJ25VE -[ER1], MUFZ-KJ35VE -[ER1] and MUFZ-KJ50VE -[ER1] have been added.

#### Revision C:

- MUFZ-KJ25VE -[ET1], MUFZ-KJ35VE -[ET1] and MUFZ-KJ50VE -[ET1] have been added.

#### Revision D:

- MUFZ-KJ25VE -[E2],[ER2],[ET2], MUFZ-KJ35VE -[E2],[ER2],[ET2] and MUFZ-KJ50VE -[E2],[ER2],[ET2] have been added.

## 1 TECHNICAL CHANGES

**MUFZ-KJ25VE** -[E1],[ER1]

**MUFZ-KJ35VE** -[E1],[ER1]

**MUFZ-KJ50VE** -[E1],[ER1]

1. New model

**MUFZ-KJ25VE** -[ET1]

**MUFZ-KJ35VE** -[ET1]

**MUFZ-KJ50VE** -[ET1]

1. New model

**MUFZ-KJ25VE** -[E1] → **MUFZ-KJ25VE** -[E2]

**MUFZ-KJ35VE** -[E1] → **MUFZ-KJ35VE** -[E2]

**MUFZ-KJ50VE** -[E1] → **MUFZ-KJ50VE** -[E2]

1. Model name has been changed.

MUFZ-KJ25VE -ER1 → MUFZ-KJ25VE -ER2

MUFZ-KJ35VE -ER1 → MUFZ-KJ35VE -ER2

MUFZ-KJ50VE -ER1 → MUFZ-KJ50VE -ER2

1. Model name has been changed.

MUFZ-KJ25VE -ET1 → MUFZ-KJ25VE -ET2

MUFZ-KJ35VE -ET1 → MUFZ-KJ35VE -ET2

MUFZ-KJ50VE -ET1 → MUFZ-KJ50VE -ET2


1. Model name has been changed.

## 2


## PART NAMES AND FUNCTIONS

MUFZ-KJ25VE

MUFZ-KJ35VE

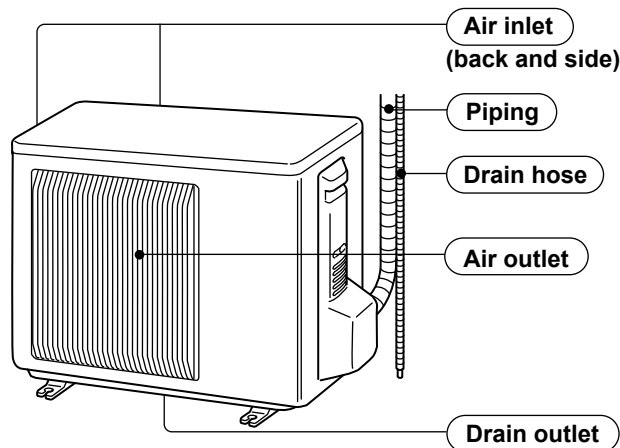

MUFZ-KJ50VE

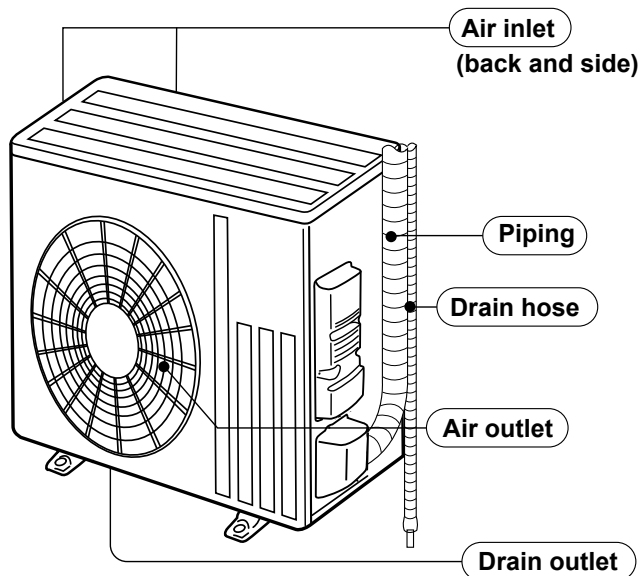

### ACCESSORIES

Model	MUFZ-KJ25VE MUFZ-KJ35VE MUFZ-KJ50VE
Drain socket	1

## 3

## SPECIFICATION

Outdoor model				MUFZ-KJ25VE	MUFZ-KJ35VE	MUFZ-KJ50VE	
Power supply				Single phase, 230 V, 50 Hz			
Capacity Rated frequency (Min.-Max.)	Cooling	kW	2.5 (0.5 - 3.4)		3.5 (0.5 - 3.7)		
	Heating		3.4 (1.2 - 4.6)		4.3 (1.2 - 5.5)		
Breaker Capacity			A		10		
Electrical data	Power input *1 (Set)	Cooling	W		540		
		Heating	W		770		
	Running current *1 (Set)	Cooling	A		2.7		
		Heating	A		3.7		
	Power factor *1 (Set)	Cooling	%		87		
		Heating	%		91		
Starting current *1 (Set)			A		3.7		
Coeff. of performance (COP) *1 (Set)	Cooling		4.63		3.72		
	Heating		4.42		3.91		
Compressor	Model		SNB140FRUMT		SNB172FEKMT		
	Output		W		950		
	Current *1	Cooling	A		2.25		
		Heating	A		3.17		
Refrigeration oil (Model)			L		0.35 (FV50S)		
Fan motor	Model		RC0J50-CI		RC0J60-BC		
	Current *1	Cooling	A		0.28		
		Heating	A		0.31		
Dimensions W × H × D			mm		800 × 550 × 285		
Weight			kg		37		
Special remarks	Dehumidification		Cooling		L/h		
	Air flow *1	Cooling	Med.		0.6		
			Low		1.4		
			m <sup>3</sup> /h		1,806		
		Heating	High		1,038		
			Med.		2,016		
			Low		1,710		
	Sound level *1	Cooling		dB(A)		46	
		Heating		dB(A)		47	
	Fan speed	Cooling	Med.		810		
			Low		490		
			rpm		900		
Heating		Med.		770			
		Low		610			
Fan speed regulator			3				
Refrigerant filling capacity (R410A)			kg		1.10		
					1.50		

**NOTE:** Test conditions are based on ISO 5151.

Cooling: Indoor Dry-bulb temperature 27°C

Outdoor Dry-bulb temperature 35°C

Heating: Indoor Dry-bulb temperature 20°C

Outdoor Dry-bulb temperature 7°C

Refrigerant piping length (one way): 5 m

\*1 Measured under rated operating frequency.

Wet-bulb temperature 19°C

Wet-bulb temperature 6°C



**Specifications and rated conditions of main electric parts**

Item		Model	MUFZ-KJ25VE	MUFZ-KJ35VE
Smoothing capacitor		(C61, C62)	600 $\mu$ F / 620 $\mu$ F 420 V	
Diode module		(DB61)	15 A 600 V	
Fuse		(F61)	T20AL250V	
		(F701, F801, F901)	T3.15AL250V	
Power module		(IC700)	15 A 600 V	
		(IC932)	8A600V	
Expansion valve coil		(LEV)	12 V DC	
Reactor		(L61)	23 mH	
Power factor controller		(IC820)	20A 600V	
Circuit protection		(PTC64, PTC65)	33 $\Omega$	
Terminal block		(TB)	5 P	
Relay		(X63)	3 A 250 V	
		(X64)	20 A 250 V	
		(X69)	10A 250V	
R.V.coil		(21S4)	220 - 240 V AC	

**Specifications and rated conditions of main electric parts**


Item		Model	MUZ-KJ50VE
Smoothing capacitor		(CB1, CB2, CB3)	560 $\mu$ F 450 V
Fuse		(F601, F880, F901)	T3.15AL250 V
IGBT module		(IC932)	5 A 600 V
		(IC700)	20 A 600 V
Expansion valve coil		(LEV)	12 V DC
Reactor		(L)	340 $\mu$ H
Diode module		(IC820)	20 A 600 V
Circuit protection		(PTC64, PTC65)	33 $\Omega$
Terminal block		(TB1, TB2)	3 P
Relay		(X64)	20 A 250 V
		(X65)	20 A 250 V
		(X69)	10 A 250 V
		(X601)	3 A 250 V
		(X602)	3 A 250 V
R.V. coil		(21S4)	220 - 240 V AC

# 4

# NOISE CRITERIA CURVES


## MUFZ-KJ25VE

FUNCTION	SPL(dB(A))	LINE
COOLING	46	●—●
HEATING	51	○—○

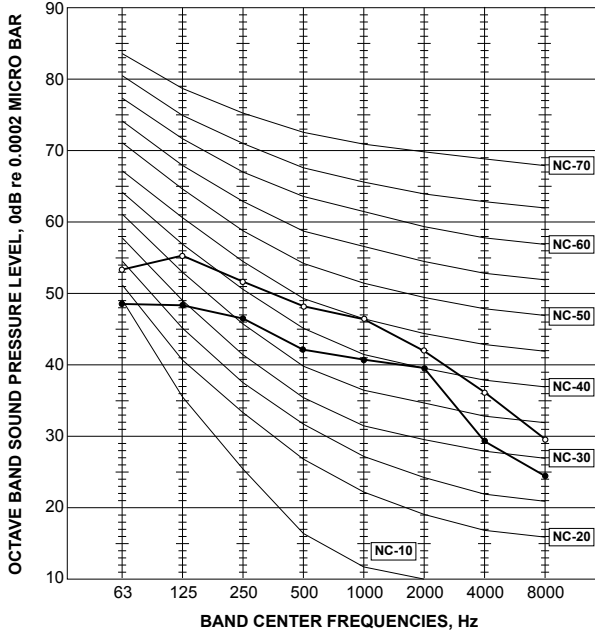

## MUFZ-KJ35VE

FUNCTION	SPL(dB(A))	LINE
COOLING	47	●—●
HEATING	51	○—○

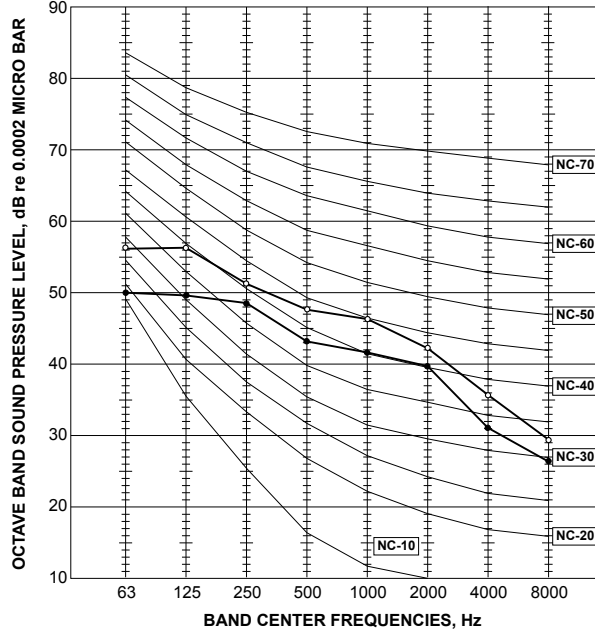



### Test conditions

Cooling: Dry-bulb temperature 35°C

Heating: Dry-bulb temperature 7°C Wet-bulb temperature 6°C

## MUFZ-KJ50VE


FUNCTION	SPL(dB(A))	LINE
COOLING	49	●—●
HEATING	51	○—○

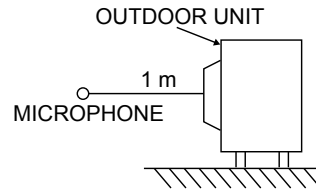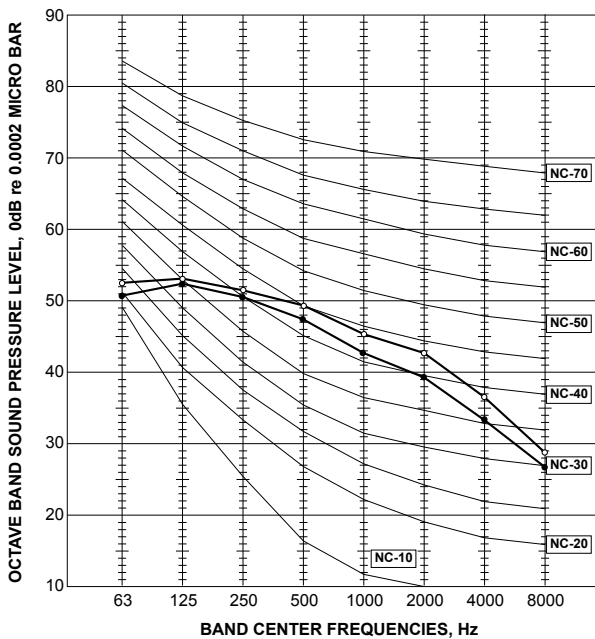

# 5


# OUTLINES AND DIMENSIONS

## MUFZ-KJ25VE MUFZ-KJ35VE

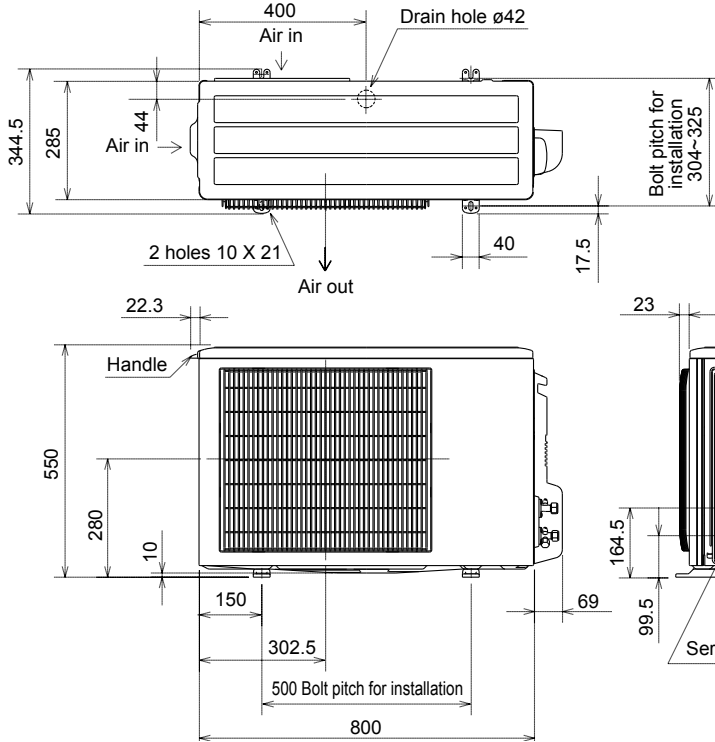


### REQUIRED SPACE

\*1 100 mm or more when front and sides of the unit are clear

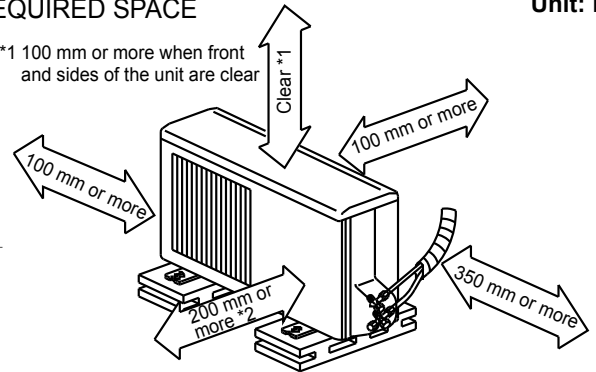


Unit: mm

\*2 When any 2 sides of left, right and rear of the unit are clear

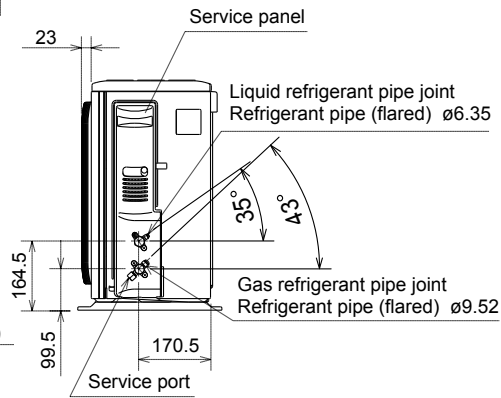


## MUFZ-KJ50VE

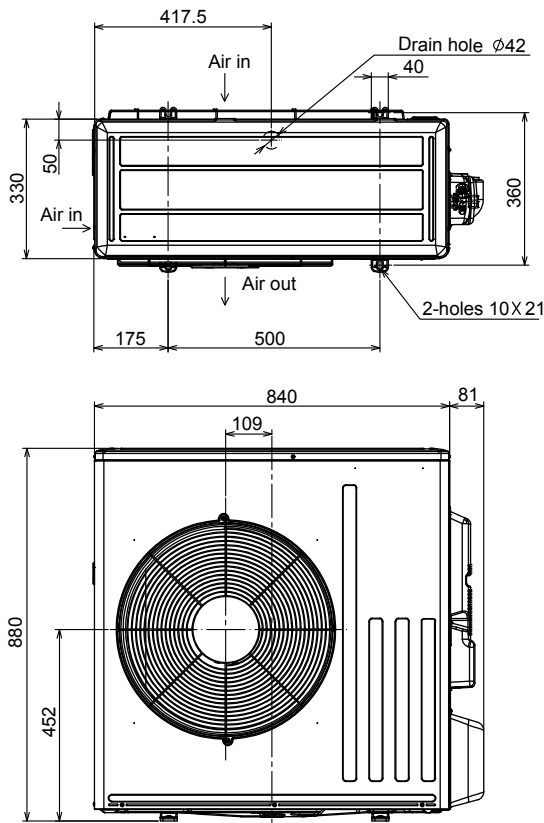


### REQUIRED SPACE

\*1 500 mm or more when front and sides of the unit are clear

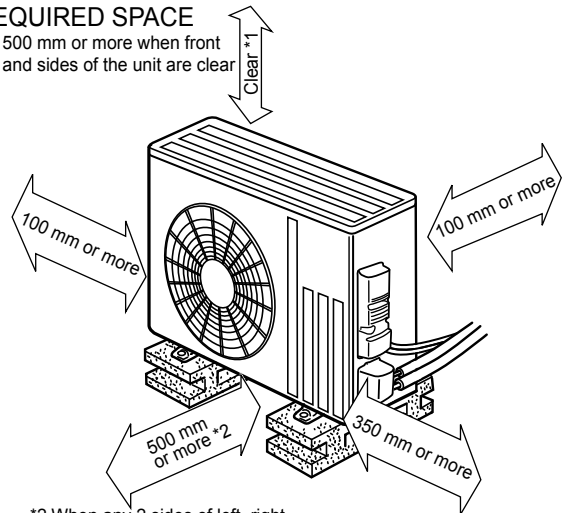

\*2 When any 2 sides of left, right and rear of the unit are clear

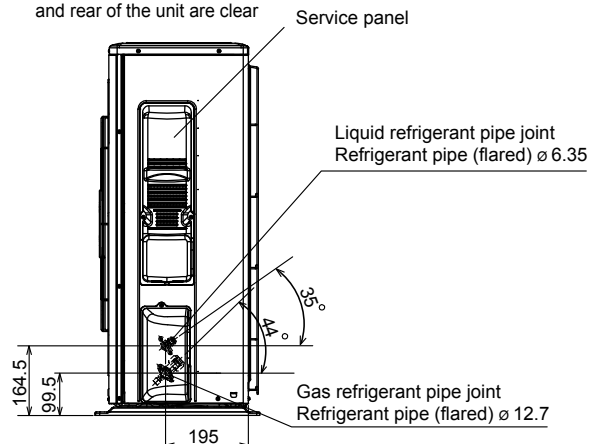


# 6

# WIRING DIAGRAM

MUFZ-KJ25VE -[E1], [ER1], [ET1]


MUFZ-KJ35VE -[E1], [ER1], [ET1]

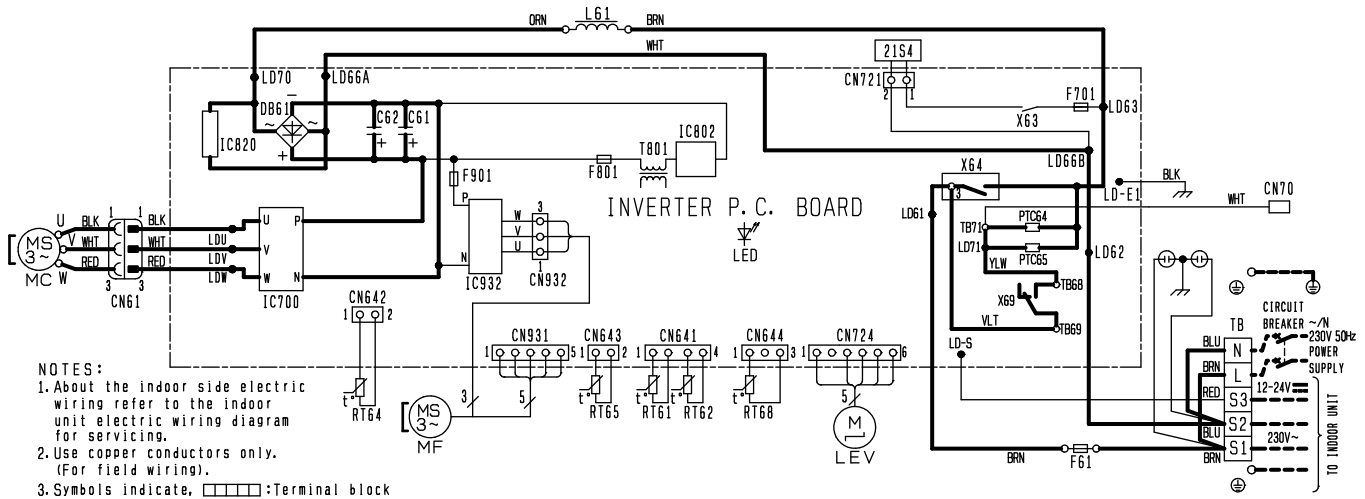

SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME
CN70	CONNECTOR	LED	LED	RT64	FIN TEMP. THERMISTOR
C61, C62	SMOOTHING CAPACITOR	LEV	EXPANSION VALVE COIL	RT65	AMBIENT TEMP. THERMISTOR
DB61	DIODE MODULE	L61	REACTOR	RT68	OUTDOOR HEAT EXCHANGER TEMP. THERMISTOR.
F61	FUSE (T20AL250V)	MC	COMPRESSOR	TB	TERMINAL BLOCK
F701, F801, F901	FUSE (T3.15AL250V)	MF	FAN MOTOR	T801	TRANSFORMER
IC700, IC820	POWER MODULE	PTC64, PTC65	CIRCUIT PROTECTION	X63, X64, X69	RELAY
IC932		RT61	DEFROST THERMISTOR	21S4	REVERSING VALVE COIL
IC802	POWER DEVICE	RT62	DISCHARGE TEMP. THERMISTOR		




**MUFZ-KJ25VE** -E2, ER2, ET2  
**MUFZ-KJ35VE** -E2, ER2, ET2

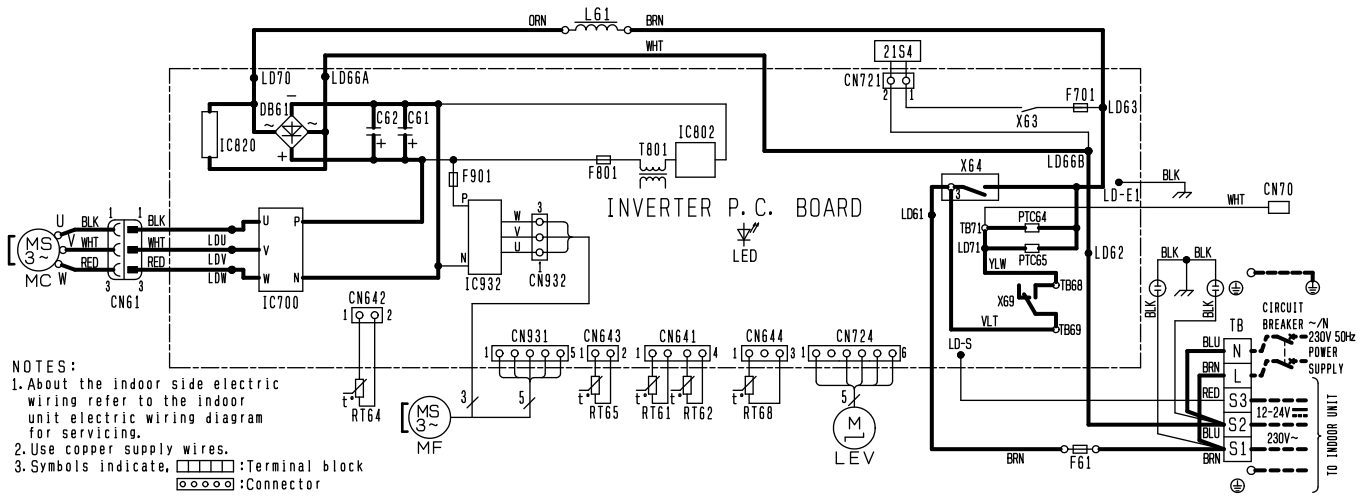

SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME
CN70	CONNECTOR	LED	LED	RT64	FIN TEMP. THERMISTOR
C61, C62	SMOOTHING CAPACITOR	LEV	EXPANSION VALVE COIL	RT65	AMBIENT TEMP. THERMISTOR
DB61	DIODE MODULE	L61	REACTOR	RT68	OUTDOOR HEAT EXCHANGER TEMP. THERMISTOR.
F61	FUSE (T20AL250V)	MC	COMPRESSOR	TB	TERMINAL BLOCK
F701, F801, F901	FUSE (T3. 15AL250V)	MF	FAN MOTOR	T801	TRANSFORMER
IC700, IC820	POWER MODULE	PTC64, PTC65	CIRCUIT PROTECTION	X63, X64, X69	RELAY
IC932	POWER MODULE	RT61	DEFROST THERMISTOR	21S4	REVERSING VALVE COIL
IC802	POWER DEVICE	RT62	DISCHARGE TEMP. THERMISTOR		


# MUFZ-KJ50VE -[E1], [ER1], [ET1]

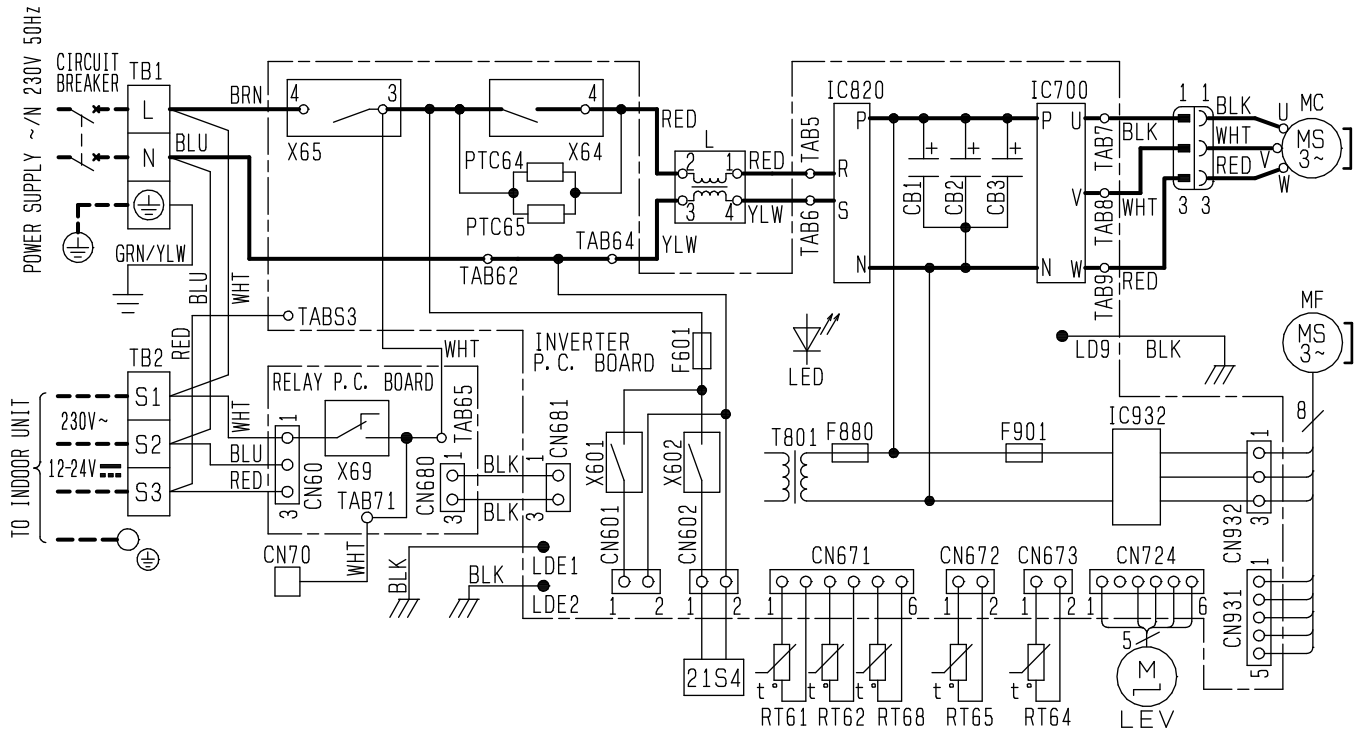

SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME
CB1 ~ 3	SMOOTHING CAPACITOR	L	REACTOR	RT62	DISCHARGE TEMP. THERMISTOR	X602	RELAY
CN70	CONNECTOR	LED	LED	RT64	FIN TEMP. THERMISTOR	X64	RELAY
F601	FUSE (T3. 15AL250V)	LEV	EXPANSION VALVE COIL	RT65	AMBIENT TEMP. THERMISTOR	X65	RELAY
F880	FUSE (T3. 15AL250V)	MC	COMPRESSOR	RT68	OUTDOOR HEAT EXCHANGER TEMP. THERMISTOR	X69	RELAY
F901	FUSE (T3. 15AL250V)	MF	FAN MOTOR	RT61	DEFROST THERMISTOR	21S4	REVERSING VALVE COIL
IC700	IGBT Module	PTC64	CIRCUIT PROTECTION	TB1, TB2	TERMINAL BLOCK		
IC820	DIODE Module	PTC65	CIRCUIT PROTECTION	T801	TRANSFORMER		
IC932	IGBT Module			X601	RELAY		

NOTES 1. About the indoor side electric wiring, refer to the indoor unit electric wiring diagram for servicing.  
 2. Use copper conductors only (for field wiring). 3. Symbols indicate, : Terminal block

**MUFZ-KJ50VE -E2, ER2, ET2**

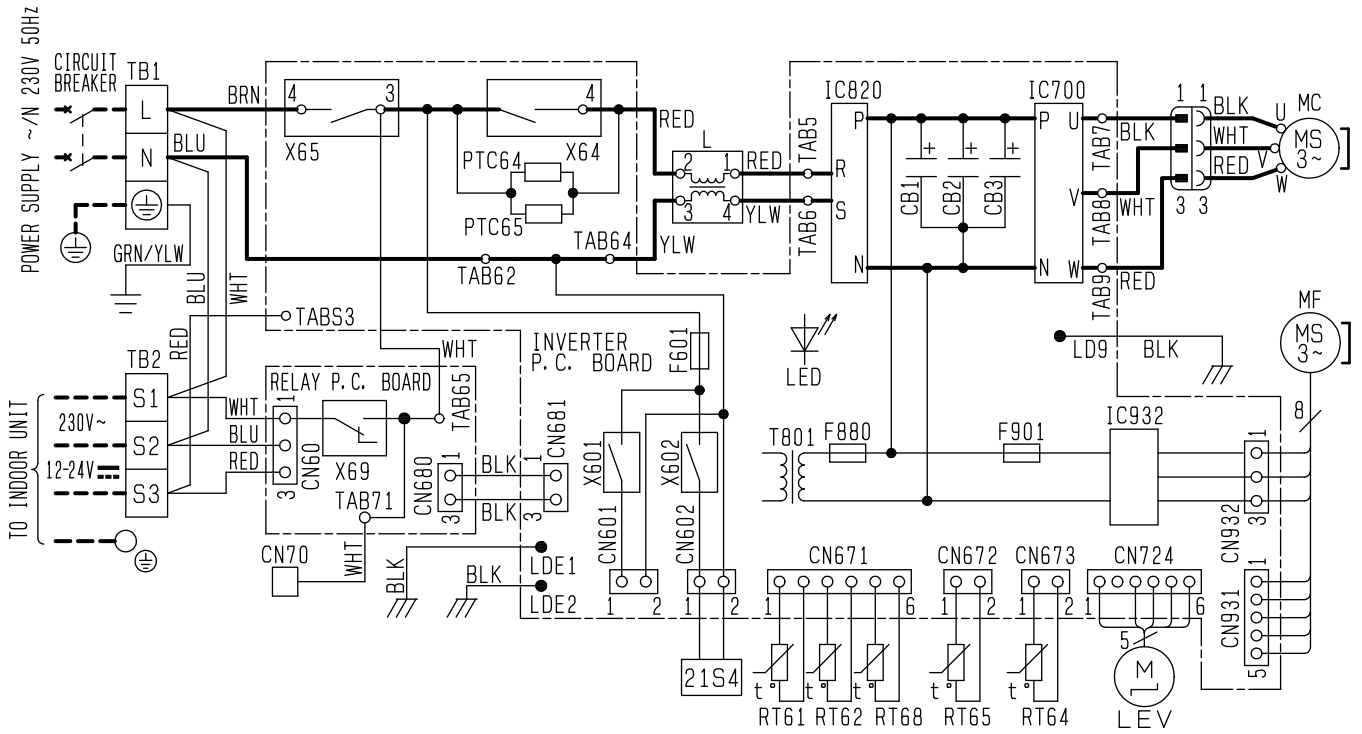


SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME
CB1~3	SMOOTHING CAPACITOR	L	REACTOR	RT62	DISCHARGE TEMP.THERMISTOR	X602	RELAY
CN70	CONNECTOR	LED	LED	RT64	FIN TEMP.THERMISTOR	X64	RELAY
F601	FUSE (T3. 15A/250V)	LEV	EXPANSION VALVE COIL	RT65	AMBIENT TEMP.THERMISTOR	X65	RELAY
F880	FUSE (T3. 15A/250V)	MC	COMPRESSOR	RT68	OUTDOOR HEAT EXCHANGER TEMP.THERMISTOR	X69	RELAY
F901	FUSE (T3. 15A/250V)	MF	FAN MOTOR	RT61	DEFROST THERMISTOR	X601	RELAY
IC700	IGBT Module	PTC64	CIRCUIT PROTECTION	TB1, TB2	TERMINAL BLOCK		
IC820	DIODE Module	PTC65	CIRCUIT PROTECTION	T801	TRANSFORMER		
IC932	IGBT Module						


NOTES 1. About the indoor side electric wiring, refer to the indoor unit electric wiring diagram for servicing.  
 2. Use copper supply wires. 3. Symbols indicate,  :Terminal block  :Connector

MUFZ-KJ25VE  
MUFZ-KJ35VE

Unit: mm

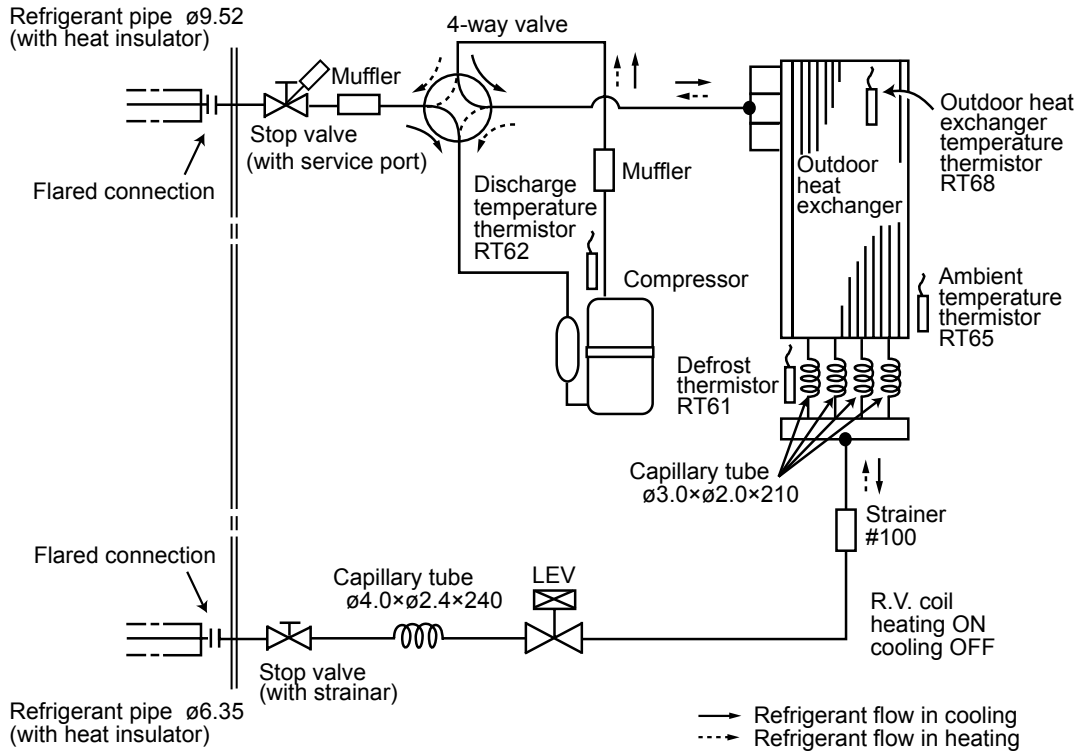


MUFZ-KJ50VE

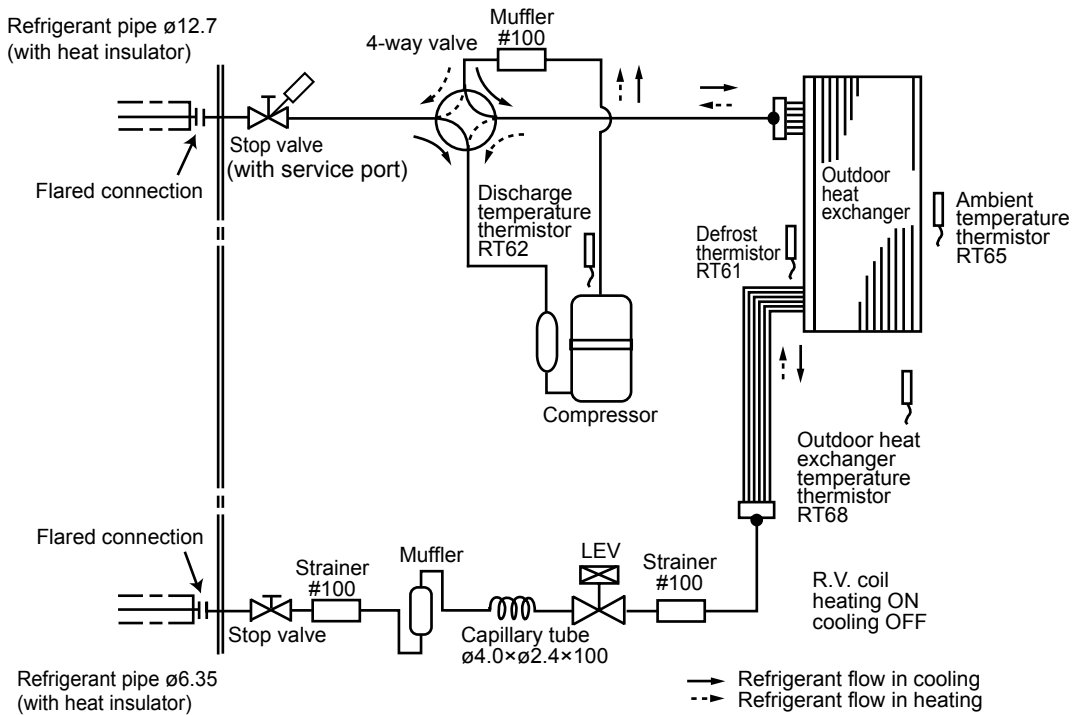



**MAX. REFRIGERANT PIPING LENGTH and MAX. HEIGHT DIFFERENCE**

Model	Refrigerant piping: m		Piping size O.D: mm	
	Max. Length A	Max. Height difference B	Gas	Liquid
<b>MUFZ-KJ25/35</b>	20	12	9.52	6.35
<b>MUFZ-KJ50</b>	30	15	12.7	6.35

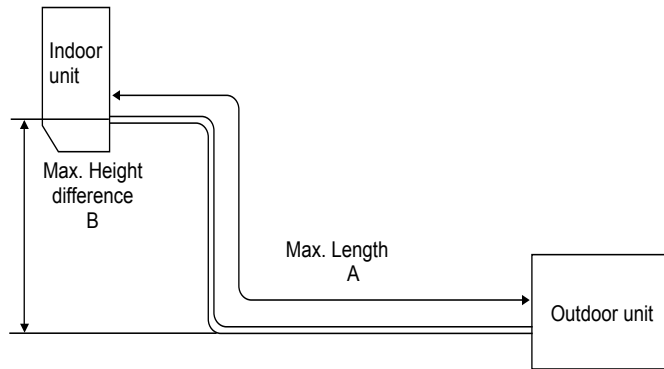

**ADDITIONAL REFRIGERANT CHARGE (R410A: g)**

Model	Outdoor unit precharged	Refrigerant piping length (one way)									
		7 m	8 m	9 m	10 m	11 m	12 m	13 m	14 m	15 m	20 m
<b>MUFZ-KJ25/35</b>	1,100	0	30	60	90	120	150	180	210	240	390

Calculation: X g = 30 g/m × (Refrigerant piping length (m) - 7)

Model	Outdoor unit precharged	Refrigerant piping length (one way)					
		7 m	10 m	15 m	20 m	25 m	30 m
<b>MUFZ-KJ50</b>	1,500	0	60	160	260	360	460

Calculation: X g = 20 g/m × (Refrigerant piping length (m) - 7)

**MUFZ-KJ25VE**  
**MUFZ-KJ35VE**  
**MUFZ-KJ50VE**

The standard specifications apply only to the operation of the air conditioner under normal conditions. Since operating conditions vary according to the areas where these units are installed, the following information has been provided to clarify the operating characteristics of the air conditioner under the conditions indicated by the performance curve.

**(1) GUARANTEED VOLTAGE**

198 ~ 264 V, 50 Hz

**(2) AIR FLOW**

Air flow should be set at MAX.


**(3) MAIN READINGS**

- |  |         |           |
|--|---------|-----------|
| (1) Indoor intake air wet-bulb temperature:  | °C [WB] | } Cooling |
| (2) Indoor outlet air wet-bulb temperature:  | °C [WB] |           |
| (3) Outdoor intake air dry-bulb temperature: | °C [DB] |           |
| (4) Total input:                             | W       | } Heating |
| (5) Indoor intake air dry-bulb temperature:  | °C [DB] |           |
| (6) Outdoor intake air wet-bulb temperature: | °C [WB] |           |
| (7) Total input:                             | W       |           |


Indoor air wet and dry bulb temperature difference on the left side of the following chart shows the difference between the indoor intake air wet and dry bulb temperature and the indoor outlet air wet and dry bulb temperature for your reference at service.




**How to measure the indoor air wet and dry bulb temperature difference**

- Attach at least 2 sets of wet and dry bulb thermometers to the indoor air intake as shown in the figure, and at least 2 sets of wet and dry bulb thermometers to the indoor air outlet. The thermometers must be attached to the position where air speed is high.
- Attach at least 2 sets of wet and dry bulb thermometers to the outdoor air intake. Cover the thermometers to prevent direct rays of the sun.
- Check that the air filter is cleaned.
- Open windows and doors of room.
- Press the EMERGENCY OPERATION switch once (twice) to start the EMERGENCY COOL (HEAT) MODE.
- When system stabilizes after more than 15 minutes, measure temperature and take an average temperature.
- 10 minutes later, measure temperature again and check that the temperature does not change.

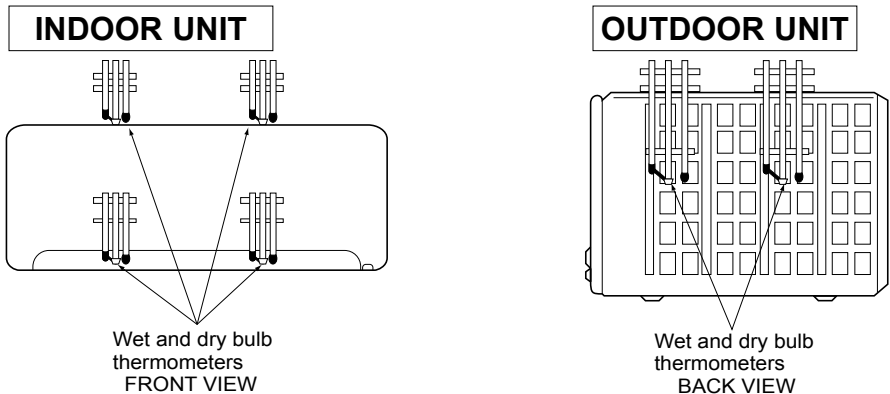

**8-1. CAPACITY AND INPUT CURVES**

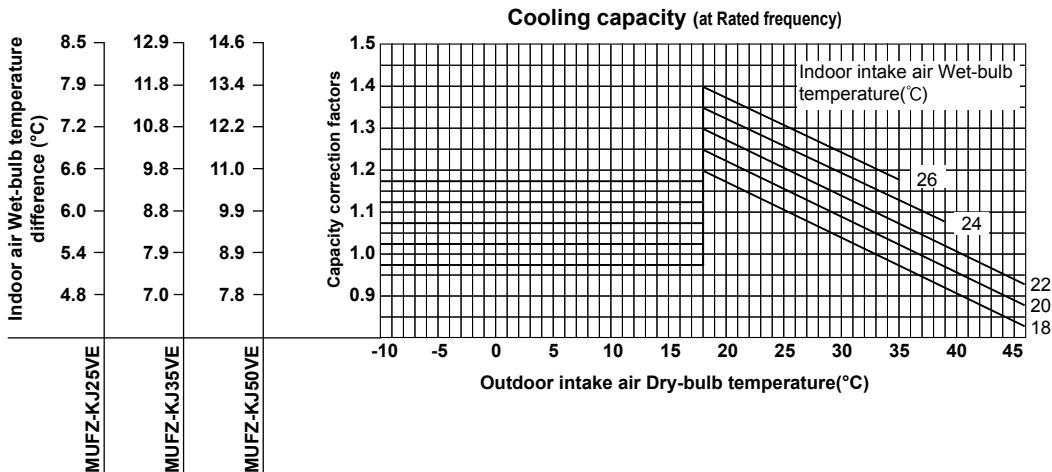


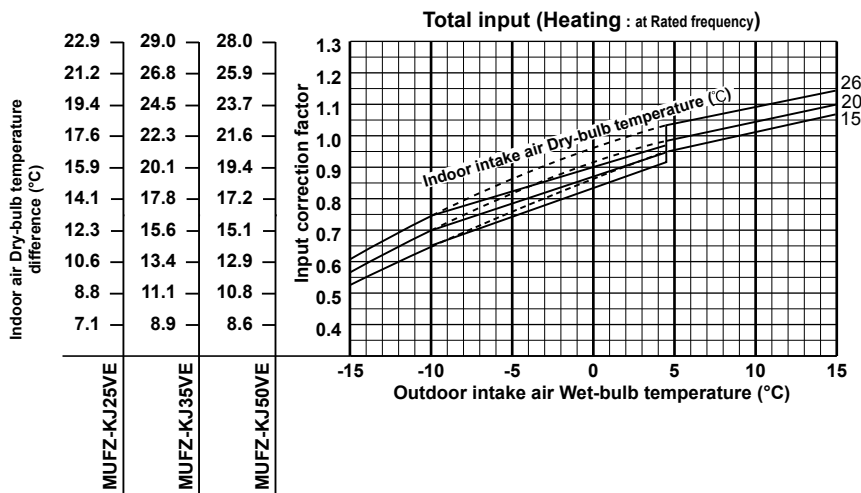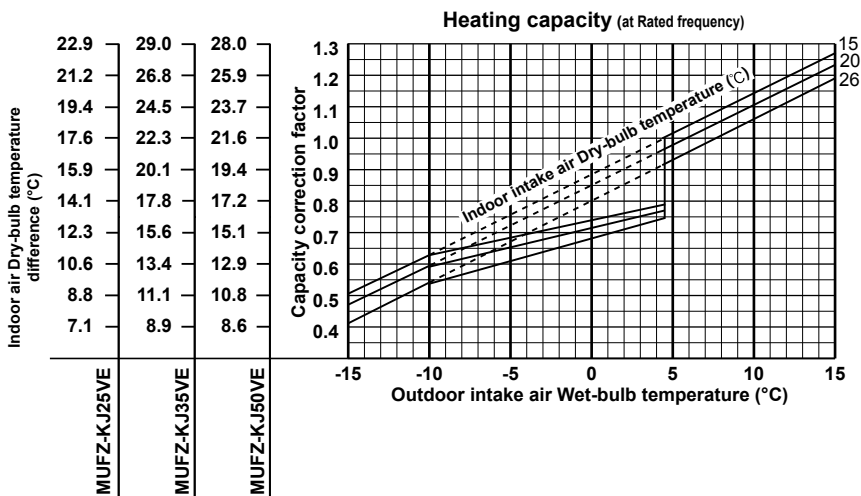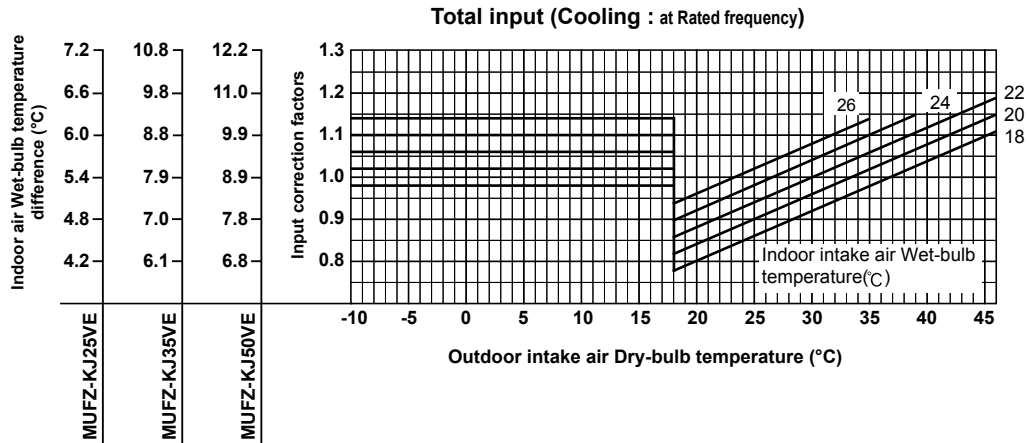


**NOTE:** The above broken lines are for the heating operation without any frost and defrost operation.

## 8-2. CAPACITY AND INPUT CORRECTION BY OPERATIONAL FREQUENCY OF COMPRESSOR


### MUFZ-KJ25VE

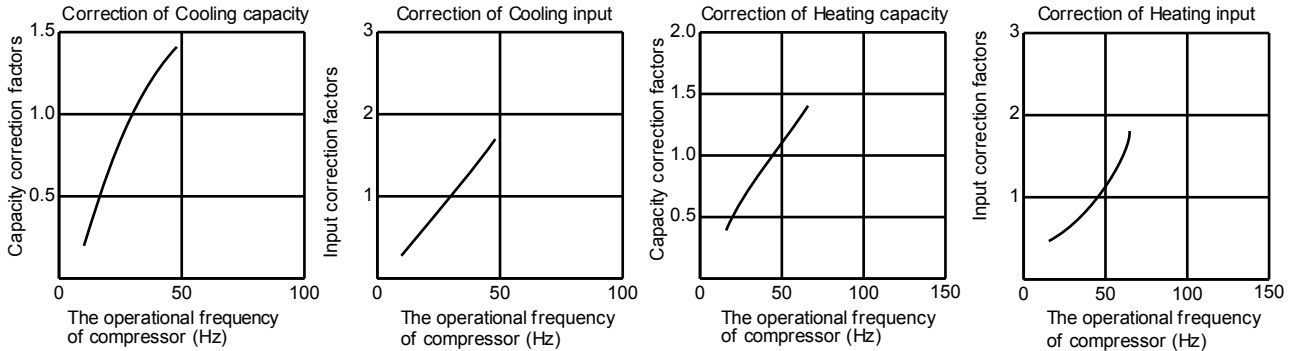

### MUFZ-KJ35VE

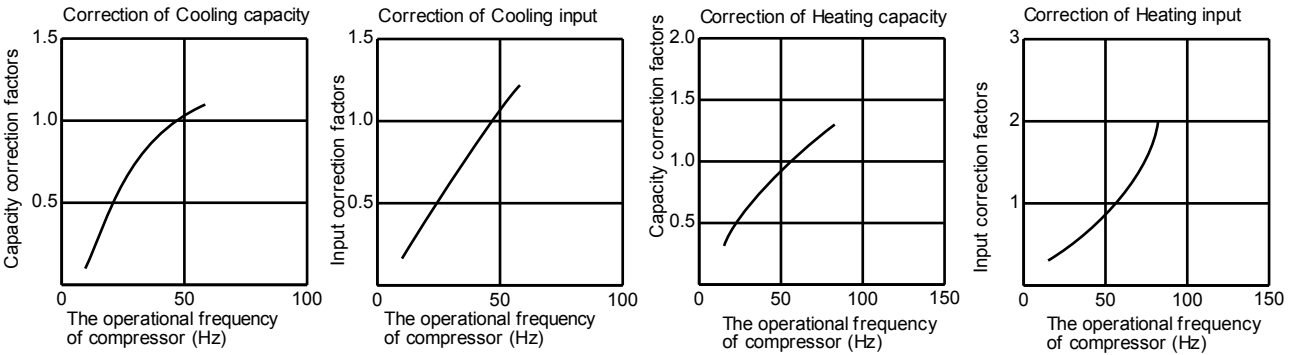

### MUFZ-KJ50VE

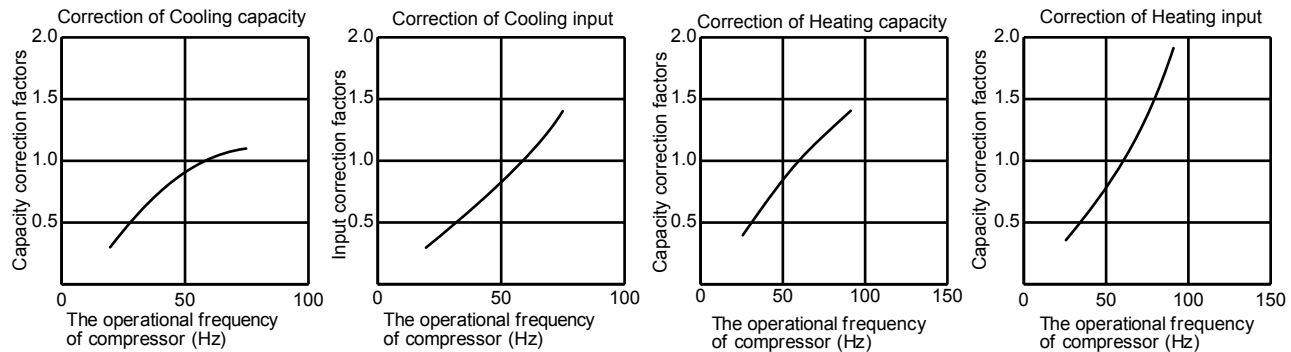

## 8-3. HOW TO OPERATE FIXED-FREQUENCY OPERATION

<Test run operation>

1. Press EMERGENCY OPERATION switch to start COOL or HEAT mode (COOL: Press once, HEAT: Press twice).
2. Test run operation starts and continues to operate for 30 minutes.
3. Compressor operates at rated frequency in COOL mode or 58 Hz in HEAT mode.
4. Indoor fan operates at High speed.
5. After 30 minutes, test run operation finishes and EMERGENCY OPERATION starts (operation frequency of compressor varies).
6. To cancel test run operation (EMERGENCY OPERATION), press EMERGENCY OPERATION switch or any button on the remote controller.



## 8-4. OUTDOOR LOW PRESSURE AND OUTDOOR UNIT CURRENT


### COOL operation

- ① Both indoor and outdoor unit are under the same temperature/humidity condition.  
 ② Operation: TEST RUN OPERATION (Refer to 8-3.)


Dry-bulb temperature (°C)	Relative humidity (%)
20	50
25	60
30	70

#### Outdoor low pressure


##### MUFZ-KJ25VE

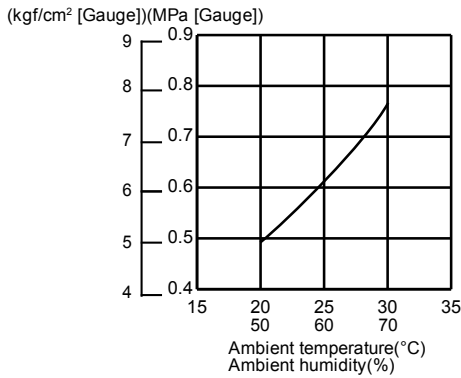

##### MUFZ-KJ35VE

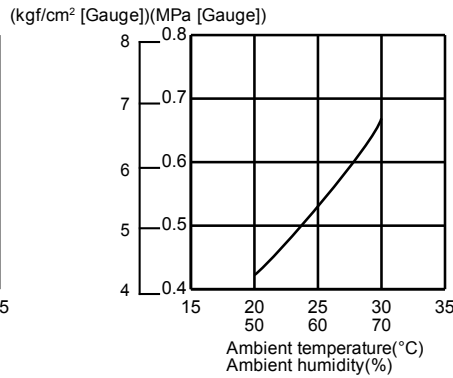

##### MUFZ-KJ50VE

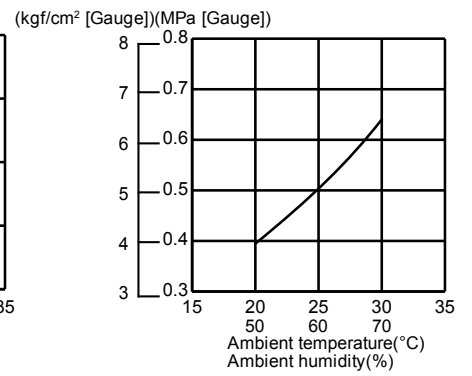


#### NOTE:


The unit of pressure has been changed to MPa on the international system of units (SI unit system)  
 The conversion factor is: **1 (MPa [Gauge]) = 10.2 (kgf/cm² [Gauge])**

#### Outdoor unit current


##### MUFZ-KJ25VE

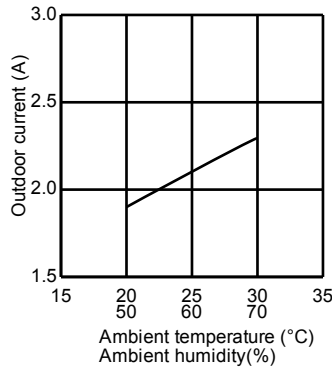

##### MUFZ-KJ35VE

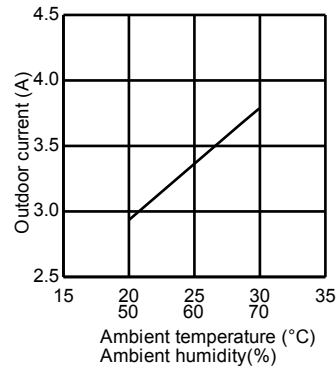

##### MUFZ-KJ50VE

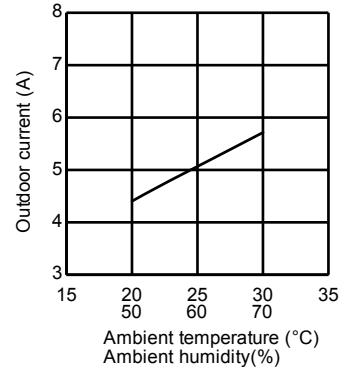

### HEAT operation


- ① Condition:

	Indoor	Outdoor			
Dry bulb temperature (°C)	20.0	2	7	15	20.0
Wet bulb temperature (°C)	14.5	1	6	12	14.5


- ② Operation: Test run operation (Refer to 8-3.)

#### Outdoor unit current


##### MUFZ-KJ25VE

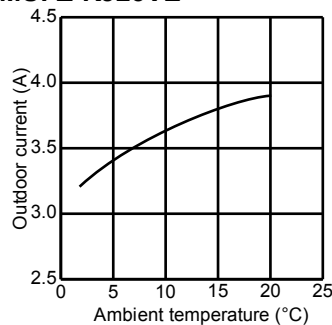

##### MUFZ-KJ35VE

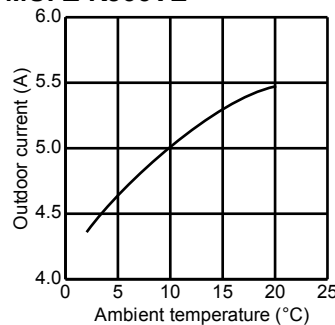

##### MUFZ-KJ50VE

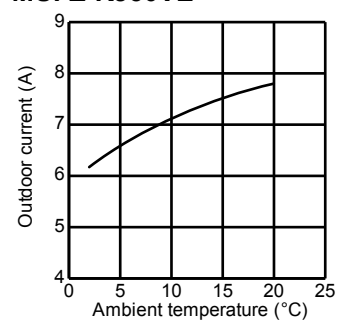

**PERFORMANCE DATA COOL operation at Rated frequency**

**MUFZ-KJ25VE**

CAPACITY: 2.5 kW

SHF: 0.85

INPUT: 540 W

INDOOR DB (°C)	INDOOR WB (°C)	OUTDOOR DB (°C)															
		21				25				27				30			
		Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT
21	18	2.94	1.97	0.67	432	2.81	1.88	0.67	454	2.70	1.81	0.67	475	2.60	1.74	0.67	497
21	20	3.06	1.68	0.55	454	2.94	1.62	0.55	481	2.85	1.57	0.55	491	2.75	1.51	0.55	513
22	18	2.94	2.09	0.71	432	2.81	2.00	0.71	454	2.70	1.92	0.71	475	2.60	1.85	0.71	497
22	20	3.06	1.81	0.59	454	2.94	1.73	0.59	481	2.85	1.68	0.59	491	2.75	1.62	0.59	513
22	22	3.19	1.50	0.47	470	3.08	1.45	0.47	500	3.00	1.41	0.47	513	2.88	1.35	0.47	535
23	18	2.94	2.20	0.75	432	2.81	2.11	0.75	454	2.70	2.03	0.75	475	2.60	1.95	0.75	497
23	20	3.06	1.93	0.63	454	2.94	1.85	0.63	481	2.85	1.80	0.63	491	2.75	1.73	0.63	513
23	22	3.19	1.63	0.51	470	3.08	1.57	0.51	500	3.00	1.53	0.51	513	2.88	1.47	0.51	535
24	18	2.94	2.32	0.79	432	2.81	2.22	0.79	454	2.70	2.13	0.79	475	2.60	2.05	0.79	497
24	20	3.06	2.05	0.67	454	2.94	1.97	0.67	481	2.85	1.91	0.67	491	2.75	1.84	0.67	513
24	22	3.19	1.75	0.55	470	3.08	1.69	0.55	500	3.00	1.65	0.55	513	2.88	1.58	0.55	535
24	24	3.35	1.44	0.43	491	3.23	1.39	0.43	518	3.15	1.35	0.43	535	3.05	1.31	0.43	562
25	18	2.94	2.44	0.83	432	2.81	2.33	0.83	454	2.70	2.24	0.83	475	2.60	2.16	0.83	497
25	20	3.06	2.17	0.71	454	2.94	2.09	0.71	481	2.85	2.02	0.71	491	2.75	1.95	0.71	513
25	22	3.19	1.88	0.59	470	3.08	1.81	0.59	500	3.00	1.77	0.59	513	2.88	1.70	0.59	535
25	24	3.35	1.57	0.47	491	3.23	1.52	0.47	518	3.15	1.48	0.47	535	3.05	1.43	0.47	562
26	18	2.94	2.56	0.87	432	2.81	2.45	0.87	454	2.70	2.35	0.87	475	2.60	2.26	0.87	497
26	20	3.06	2.30	0.75	454	2.94	2.20	0.75	481	2.85	2.14	0.75	491	2.75	2.06	0.75	513
26	22	3.19	2.01	0.63	470	3.08	1.94	0.63	500	3.00	1.89	0.63	513	2.88	1.81	0.63	535
26	24	3.35	1.71	0.51	491	3.23	1.64	0.51	518	3.15	1.61	0.51	535	3.05	1.56	0.51	562
26	26	3.45	1.35	0.39	518	3.35	1.31	0.39	545	3.30	1.29	0.39	562	3.20	1.25	0.39	578
27	18	2.94	2.67	0.91	432	2.81	2.56	0.91	454	2.70	2.46	0.91	475	2.60	2.37	0.91	497
27	20	3.06	2.42	0.79	454	2.94	2.32	0.79	481	2.85	2.25	0.79	491	2.75	2.17	0.79	513
27	22	3.19	2.14	0.67	470	3.08	2.06	0.67	500	3.00	2.01	0.67	513	2.88	1.93	0.67	535
27	24	3.35	1.84	0.55	491	3.23	1.77	0.55	518	3.15	1.73	0.55	535	3.05	1.68	0.55	562
27	26	3.45	1.48	0.43	518	3.35	1.44	0.43	545	3.30	1.42	0.43	562	3.20	1.38	0.43	578
28	18	2.94	2.79	0.95	432	2.81	2.67	0.95	454	2.70	2.57	0.95	475	2.60	2.47	0.95	497
28	20	3.06	2.54	0.83	454	2.94	2.44	0.83	481	2.85	2.37	0.83	491	2.75	2.28	0.83	513
28	22	3.19	2.26	0.71	470	3.08	2.18	0.71	500	3.00	2.13	0.71	513	2.88	2.04	0.71	535
28	24	3.35	1.98	0.59	491	3.23	1.90	0.59	518	3.15	1.86	0.59	535	3.05	1.80	0.59	562
28	26	3.45	1.62	0.47	518	3.35	1.57	0.47	545	3.30	1.55	0.47	562	3.20	1.50	0.47	578
29	18	2.94	2.91	0.99	432	2.81	2.78	0.99	454	2.70	2.67	0.99	475	2.60	2.57	0.99	497
29	20	3.06	2.66	0.87	454	2.94	2.56	0.87	481	2.85	2.48	0.87	491	2.75	2.39	0.87	513
29	22	3.19	2.39	0.75	470	3.08	2.31	0.75	500	3.00	2.25	0.75	513	2.88	2.16	0.75	535
29	24	3.35	2.11	0.63	491	3.23	2.03	0.63	518	3.15	1.98	0.63	535	3.05	1.92	0.63	562
29	26	3.45	1.76	0.51	518	3.35	1.71	0.51	545	3.30	1.68	0.51	562	3.20	1.63	0.51	578
30	18	2.94	2.94	1.00	432	2.81	2.81	1.00	454	2.70	2.70	1.00	475	2.60	2.60	1.00	497
30	20	3.06	2.79	0.91	454	2.94	2.67	0.91	481	2.85	2.59	0.91	491	2.75	2.50	0.91	513
30	22	3.19	2.52	0.79	470	3.08	2.43	0.79	500	3.00	2.37	0.79	513	2.88	2.27	0.79	535
30	24	3.35	2.24	0.67	491	3.23	2.16	0.67	518	3.15	2.11	0.67	535	3.05	2.04	0.67	562
30	26	3.45	1.90	0.55	518	3.35	1.84	0.55	545	3.30	1.82	0.55	562	3.20	1.76	0.55	578
31	18	2.94	2.94	1.00	432	2.81	2.81	1.00	454	2.70	2.70	1.00	475	2.60	2.60	1.00	497
31	20	3.06	2.91	0.95	454	2.94	2.79	0.95	481	2.85	2.71	0.95	491	2.75	2.61	0.95	513
31	22	3.19	2.65	0.83	470	3.08	2.55	0.83	500	3.00	2.49	0.83	513	2.88	2.39	0.83	535
31	24	3.35	2.38	0.71	491	3.23	2.29	0.71	518	3.15	2.24	0.71	535	3.05	2.17	0.71	562
31	26	3.45	2.04	0.59	518	3.35	1.98	0.59	545	3.30	1.95	0.59	562	3.20	1.89	0.59	578
32	18	2.94	2.94	1.00	432	2.81	2.81	1.00	454	2.70	2.70	1.00	475	2.60	2.60	1.00	497
32	20	3.06	3.03	0.99	454	2.94	2.91	0.99	481	2.85	2.82	0.99	491	2.75	2.72	0.99	513
32	22	3.19	2.77	0.87	470	3.08	2.68	0.87	500	3.00	2.61	0.87	513	2.88	2.50	0.87	535
32	24	3.35	2.51	0.75	491	3.23	2.42	0.75	518	3.15	2.36	0.75	535	3.05	2.29	0.75	562
32	26	3.45	2.17	0.63	518	3.35	2.11	0.63	545	3.30	2.08	0.63	562	3.20	2.02	0.63	578

**NOTE** Q : Total capacity (kW) SHF : Sensible heat factor DB : Dry-bulb temperature  
 SHC : Sensible heat capacity (kW) INPUT : Total power input (W) WB : Wet-bulb temperature

**PERFORMANCE DATA COOL operation at Rated frequency**  
**MUFZ-KJ25VE**

CAPACITY: 2.5 kW SHF: 0.85 INPUT: 540 W

INDOOR DB (°C)	INDOOR WB (°C)	OUTDOOR DB (°C)											
		35				40				46			
		Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT
21	18	2.45	1.64	0.67	529	2.25	1.51	0.67	562	2.08	1.39	0.67	583
21	20	2.58	1.42	0.55	551	2.40	1.32	0.55	578	2.23	1.22	0.55	610
22	18	2.45	1.74	0.71	529	2.25	1.60	0.71	562	2.08	1.47	0.71	583
22	20	2.58	1.52	0.59	551	2.40	1.42	0.59	578	2.23	1.31	0.59	610
22	22	2.73	1.28	0.47	572	2.55	1.20	0.47	605	2.38	1.12	0.47	626
23	18	2.45	1.84	0.75	529	2.25	1.69	0.75	562	2.08	1.56	0.75	583
23	20	2.58	1.62	0.63	551	2.40	1.51	0.63	578	2.23	1.40	0.63	610
23	22	2.73	1.39	0.51	572	2.55	1.30	0.51	605	2.38	1.21	0.51	626
24	18	2.45	1.94	0.79	529	2.25	1.78	0.79	562	2.08	1.64	0.79	583
24	20	2.58	1.73	0.67	551	2.40	1.61	0.67	578	2.23	1.49	0.67	610
24	22	2.73	1.50	0.55	572	2.55	1.40	0.55	605	2.38	1.31	0.55	626
24	24	2.88	1.24	0.43	594	2.70	1.16	0.43	621	2.55	1.10	0.43	648
25	18	2.45	2.03	0.83	529	2.25	1.87	0.83	562	2.08	1.72	0.83	583
25	20	2.58	1.83	0.71	551	2.40	1.70	0.71	578	2.23	1.58	0.71	610
25	22	2.73	1.61	0.59	572	2.55	1.50	0.59	605	2.38	1.40	0.59	626
25	24	2.88	1.35	0.47	594	2.70	1.27	0.47	621	2.55	1.20	0.47	648
26	18	2.45	2.13	0.87	529	2.25	1.96	0.87	562	2.08	1.81	0.87	583
26	20	2.58	1.93	0.75	551	2.40	1.80	0.75	578	2.23	1.67	0.75	610
26	22	2.73	1.72	0.63	572	2.55	1.61	0.63	605	2.38	1.50	0.63	626
26	24	2.88	1.47	0.51	594	2.70	1.38	0.51	621	2.55	1.30	0.51	648
26	26	3.03	1.18	0.39	616	2.85	1.11	0.39	643	2.68	1.04	0.39	670
27	18	2.45	2.23	0.91	529	2.25	2.05	0.91	562	2.08	1.89	0.91	583
27	20	2.58	2.03	0.79	551	2.40	1.90	0.79	578	2.23	1.76	0.79	610
27	22	2.73	1.83	0.67	572	2.55	1.71	0.67	605	2.38	1.59	0.67	626
27	24	2.88	1.58	0.55	594	2.70	1.49	0.55	621	2.55	1.40	0.55	648
27	26	3.03	1.30	0.43	616	2.85	1.23	0.43	643	2.68	1.15	0.43	670
28	18	2.45	2.33	0.95	529	2.25	2.14	0.95	562	2.08	1.97	0.95	583
28	20	2.58	2.14	0.83	551	2.40	1.99	0.83	578	2.23	1.85	0.83	610
28	22	2.73	1.93	0.71	572	2.55	1.81	0.71	605	2.38	1.69	0.71	626
28	24	2.88	1.70	0.59	594	2.70	1.59	0.59	621	2.55	1.50	0.59	648
28	26	3.03	1.42	0.47	616	2.85	1.34	0.47	643	2.68	1.26	0.47	670
29	18	2.45	2.43	0.99	529	2.25	2.23	0.99	562	2.08	2.05	0.99	583
29	20	2.58	2.24	0.87	551	2.40	2.09	0.87	578	2.23	1.94	0.87	610
29	22	2.73	2.04	0.75	572	2.55	1.91	0.75	605	2.38	1.78	0.75	626
29	24	2.88	1.81	0.63	594	2.70	1.70	0.63	621	2.55	1.61	0.63	648
29	26	3.03	1.54	0.51	616	2.85	1.45	0.51	643	2.68	1.36	0.51	670
30	18	2.45	2.45	1.00	529	2.25	2.25	1.00	562	2.08	2.08	1.00	583
30	20	2.58	2.34	0.91	551	2.40	2.18	0.91	578	2.23	2.02	0.91	610
30	22	2.73	2.15	0.79	572	2.55	2.01	0.79	605	2.38	1.88	0.79	626
30	24	2.88	1.93	0.67	594	2.70	1.81	0.67	621	2.55	1.71	0.67	648
30	26	3.03	1.66	0.55	616	2.85	1.57	0.55	643	2.68	1.47	0.55	670
31	18	2.45	2.45	1.00	529	2.25	2.25	1.00	562	2.08	2.08	1.00	583
31	20	2.58	2.45	0.95	551	2.40	2.28	0.95	578	2.23	2.11	0.95	610
31	22	2.73	2.26	0.83	572	2.55	2.12	0.83	605	2.38	1.97	0.83	626
31	24	2.88	2.04	0.71	594	2.70	1.92	0.71	621	2.55	1.81	0.71	648
31	26	3.03	1.78	0.59	616	2.85	1.68	0.59	643	2.68	1.58	0.59	670
32	18	2.45	2.45	1.00	529	2.25	2.25	1.00	562	2.08	2.08	1.00	583
32	20	2.58	2.55	0.99	551	2.40	2.38	0.99	578	2.23	2.20	0.99	610
32	22	2.73	2.37	0.87	572	2.55	2.22	0.87	605	2.38	2.07	0.87	626
32	24	2.88	2.16	0.75	594	2.70	2.03	0.75	621	2.55	1.91	0.75	648
32	26	3.03	1.91	0.63	616	2.85	1.80	0.63	643	2.68	1.69	0.63	670

**NOTE** Q : Total capacity (kW) SHF : Sensible heat factor DB : Dry-bulb temperature  
 SHC : Sensible heat capacity (kW) INPUT : Total power input (W) WB : Wet-bulb temperature

**PERFORMANCE DATA COOL operation at Rated frequency**

**MUFZ-KJ35VE**

CAPACITY: 3.5 kW

SHF: 0.73

INPUT: 940 W

INDOOR DB (°C)	INDOOR WB (°C)	OUTDOOR DB (°C)															
		21				25				27				30			
		Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT
21	18	4.11	2.26	0.55	752	3.94	2.17	0.55	790	3.78	2.08	0.55	827	3.64	2.00	0.55	865
21	20	4.29	1.84	0.43	790	4.11	1.77	0.43	837	3.99	1.72	0.43	855	3.85	1.66	0.43	893
22	18	4.11	2.43	0.59	752	3.94	2.32	0.59	790	3.78	2.23	0.59	827	3.64	2.15	0.59	865
22	20	4.29	2.02	0.47	790	4.11	1.93	0.47	837	3.99	1.88	0.47	855	3.85	1.81	0.47	893
22	22	4.46	1.56	0.35	818	4.31	1.51	0.35	870	4.20	1.47	0.35	893	4.03	1.41	0.35	931
23	18	4.11	2.59	0.63	752	3.94	2.48	0.63	790	3.78	2.38	0.63	827	3.64	2.29	0.63	865
23	20	4.29	2.19	0.51	790	4.11	2.10	0.51	837	3.99	2.03	0.51	855	3.85	1.96	0.51	893
23	22	4.46	1.74	0.39	818	4.31	1.68	0.39	870	4.20	1.64	0.39	893	4.03	1.57	0.39	931
24	18	4.11	2.76	0.67	752	3.94	2.64	0.67	790	3.78	2.53	0.67	827	3.64	2.44	0.67	865
24	20	4.29	2.36	0.55	790	4.11	2.26	0.55	837	3.99	2.19	0.55	855	3.85	2.12	0.55	893
24	22	4.46	1.92	0.43	818	4.31	1.85	0.43	870	4.20	1.81	0.43	893	4.03	1.73	0.43	931
24	24	4.69	1.45	0.31	855	4.52	1.40	0.31	902	4.41	1.37	0.31	931	4.27	1.32	0.31	978
25	18	4.11	2.92	0.71	752	3.94	2.80	0.71	790	3.78	2.68	0.71	827	3.64	2.58	0.71	865
25	20	4.29	2.53	0.59	790	4.11	2.43	0.59	837	3.99	2.35	0.59	855	3.85	2.27	0.59	893
25	22	4.46	2.10	0.47	818	4.31	2.02	0.47	870	4.20	1.97	0.47	893	4.03	1.89	0.47	931
25	24	4.69	1.64	0.35	855	4.52	1.58	0.35	902	4.41	1.54	0.35	931	4.27	1.49	0.35	978
26	18	4.11	3.08	0.75	752	3.94	2.95	0.75	790	3.78	2.84	0.75	827	3.64	2.73	0.75	865
26	20	4.29	2.70	0.63	790	4.11	2.59	0.63	837	3.99	2.51	0.63	855	3.85	2.43	0.63	893
26	22	4.46	2.28	0.51	818	4.31	2.20	0.51	870	4.20	2.14	0.51	893	4.03	2.05	0.51	931
26	24	4.69	1.83	0.39	855	4.52	1.76	0.39	902	4.41	1.72	0.39	931	4.27	1.67	0.39	978
26	26	4.83	1.30	0.27	902	4.69	1.27	0.27	949	4.62	1.25	0.27	978	4.48	1.21	0.27	1006
27	18	4.11	3.25	0.79	752	3.94	3.11	0.79	790	3.78	2.99	0.79	827	3.64	2.88	0.79	865
27	20	4.29	2.87	0.67	790	4.11	2.76	0.67	837	3.99	2.67	0.67	855	3.85	2.58	0.67	893
27	22	4.46	2.45	0.55	818	4.31	2.37	0.55	870	4.20	2.31	0.55	893	4.03	2.21	0.55	931
27	24	4.69	2.02	0.43	855	4.52	1.94	0.43	902	4.41	1.90	0.43	931	4.27	1.84	0.43	978
27	26	4.83	1.50	0.31	902	4.69	1.45	0.31	949	4.62	1.43	0.31	978	4.48	1.39	0.31	1006
28	18	4.11	3.41	0.83	752	3.94	3.27	0.83	790	3.78	3.14	0.83	827	3.64	3.02	0.83	865
28	20	4.29	3.04	0.71	790	4.11	2.92	0.71	837	3.99	2.83	0.71	855	3.85	2.73	0.71	893
28	22	4.46	2.63	0.59	818	4.31	2.54	0.59	870	4.20	2.48	0.59	893	4.03	2.37	0.59	931
28	24	4.69	2.20	0.47	855	4.52	2.12	0.47	902	4.41	2.07	0.47	931	4.27	2.01	0.47	978
28	26	4.83	1.69	0.35	902	4.69	1.64	0.35	949	4.62	1.62	0.35	978	4.48	1.57	0.35	1006
29	18	4.11	3.58	0.87	752	3.94	3.43	0.87	790	3.78	3.29	0.87	827	3.64	3.17	0.87	865
29	20	4.29	3.22	0.75	790	4.11	3.08	0.75	837	3.99	2.99	0.75	855	3.85	2.89	0.75	893
29	22	4.46	2.81	0.63	818	4.31	2.71	0.63	870	4.20	2.65	0.63	893	4.03	2.54	0.63	931
29	24	4.69	2.39	0.51	855	4.52	2.30	0.51	902	4.41	2.25	0.51	931	4.27	2.18	0.51	978
29	26	4.83	1.88	0.39	902	4.69	1.83	0.39	949	4.62	1.80	0.39	978	4.48	1.75	0.39	1006
30	18	4.11	3.74	0.91	752	3.94	3.58	0.91	790	3.78	3.44	0.91	827	3.64	3.31	0.91	865
30	20	4.29	3.39	0.79	790	4.11	3.25	0.79	837	3.99	3.15	0.79	855	3.85	3.04	0.79	893
30	22	4.46	2.99	0.67	818	4.31	2.88	0.67	870	4.20	2.81	0.67	893	4.03	2.70	0.67	931
30	24	4.69	2.58	0.55	855	4.52	2.48	0.55	902	4.41	2.43	0.55	931	4.27	2.35	0.55	978
30	26	4.83	2.08	0.43	902	4.69	2.02	0.43	949	4.62	1.99	0.43	978	4.48	1.93	0.43	1006
31	18	4.11	3.91	0.95	752	3.94	3.74	0.95	790	3.78	3.59	0.95	827	3.64	3.46	0.95	865
31	20	4.29	3.56	0.83	790	4.11	3.41	0.83	837	3.99	3.31	0.83	855	3.85	3.20	0.83	893
31	22	4.46	3.17	0.71	818	4.31	3.06	0.71	870	4.20	2.98	0.71	893	4.03	2.86	0.71	931
31	24	4.69	2.77	0.59	855	4.52	2.66	0.59	902	4.41	2.60	0.59	931	4.27	2.52	0.59	978
31	26	4.83	2.27	0.47	902	4.69	2.20	0.47	949	4.62	2.17	0.47	978	4.48	2.11	0.47	1006
32	18	4.11	4.07	0.99	752	3.94	3.90	0.99	790	3.78	3.74	0.99	827	3.64	3.60	0.99	865
32	20	4.29	3.73	0.87	790	4.11	3.58	0.87	837	3.99	3.47	0.87	855	3.85	3.35	0.87	893
32	22	4.46	3.35	0.75	818	4.31	3.23	0.75	870	4.20	3.15	0.75	893	4.03	3.02	0.75	931
32	24	4.69	2.95	0.63	855	4.52	2.84	0.63	902	4.41	2.78	0.63	931	4.27	2.69	0.63	978
32	26	4.83	2.46	0.51	902	4.69	2.39	0.51	949	4.62	2.36	0.51	978	4.48	2.28	0.51	1006

**NOTE** Q : Total capacity (kW) SHF : Sensible heat factor DB : Dry-bulb temperature  
 SHC : Sensible heat capacity (kW) INPUT : Total power input (W) WB : Wet-bulb temperature

**PERFORMANCE DATA COOL operation at Rated frequency**  
**MUFZ-KJ35VE**

CAPACITY: 3.5 kW SHF: 0.73 INPUT: 940 W

INDOOR DB (°C)	INDOOR WB (°C)	OUTDOOR DB (°C)											
		35				40				46			
		Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT
21	18	3.43	1.89	0.55	921	3.15	1.73	0.55	978	2.91	1.60	0.55	1015
21	20	3.61	1.55	0.43	959	3.36	1.44	0.43	1006	3.12	1.34	0.43	1062
22	18	3.43	2.02	0.59	921	3.15	1.86	0.59	978	2.91	1.71	0.59	1015
22	20	3.61	1.69	0.47	959	3.36	1.58	0.47	1006	3.12	1.46	0.47	1062
22	22	3.82	1.34	0.35	996	3.57	1.25	0.35	1053	3.33	1.16	0.35	1090
23	18	3.43	2.16	0.63	921	3.15	1.98	0.63	978	2.91	1.83	0.63	1015
23	20	3.61	1.84	0.51	959	3.36	1.71	0.51	1006	3.12	1.59	0.51	1062
23	22	3.82	1.49	0.39	996	3.57	1.39	0.39	1053	3.33	1.30	0.39	1090
24	18	3.43	2.30	0.67	921	3.15	2.11	0.67	978	2.91	1.95	0.67	1015
24	20	3.61	1.98	0.55	959	3.36	1.85	0.55	1006	3.12	1.71	0.55	1062
24	22	3.82	1.64	0.43	996	3.57	1.54	0.43	1053	3.33	1.43	0.43	1090
24	24	4.03	1.25	0.31	1034	3.78	1.17	0.31	1081	3.57	1.11	0.31	1128
25	18	3.43	2.44	0.71	921	3.15	2.24	0.71	978	2.91	2.06	0.71	1015
25	20	3.61	2.13	0.59	959	3.36	1.98	0.59	1006	3.12	1.84	0.59	1062
25	22	3.82	1.79	0.47	996	3.57	1.68	0.47	1053	3.33	1.56	0.47	1090
25	24	4.03	1.41	0.35	1034	3.78	1.32	0.35	1081	3.57	1.25	0.35	1128
26	18	3.43	2.57	0.75	921	3.15	2.36	0.75	978	2.91	2.18	0.75	1015
26	20	3.61	2.27	0.63	959	3.36	2.12	0.63	1006	3.12	1.96	0.63	1062
26	22	3.82	1.95	0.51	996	3.57	1.82	0.51	1053	3.33	1.70	0.51	1090
26	24	4.03	1.57	0.39	1034	3.78	1.47	0.39	1081	3.57	1.39	0.39	1128
26	26	4.24	1.14	0.27	1072	3.99	1.08	0.27	1119	3.75	1.01	0.27	1166
27	18	3.43	2.71	0.79	921	3.15	2.49	0.79	978	2.91	2.29	0.79	1015
27	20	3.61	2.42	0.67	959	3.36	2.25	0.67	1006	3.12	2.09	0.67	1062
27	22	3.82	2.10	0.55	996	3.57	1.96	0.55	1053	3.33	1.83	0.55	1090
27	24	4.03	1.73	0.43	1034	3.78	1.63	0.43	1081	3.57	1.54	0.43	1128
27	26	4.24	1.31	0.31	1072	3.99	1.24	0.31	1119	3.75	1.16	0.31	1166
28	18	3.43	2.85	0.83	921	3.15	2.61	0.83	978	2.91	2.41	0.83	1015
28	20	3.61	2.56	0.71	959	3.36	2.39	0.71	1006	3.12	2.21	0.71	1062
28	22	3.82	2.25	0.59	996	3.57	2.11	0.59	1053	3.33	1.96	0.59	1090
28	24	4.03	1.89	0.47	1034	3.78	1.78	0.47	1081	3.57	1.68	0.47	1128
28	26	4.24	1.48	0.35	1072	3.99	1.40	0.35	1119	3.75	1.31	0.35	1166
29	18	3.43	2.98	0.87	921	3.15	2.74	0.87	978	2.91	2.53	0.87	1015
29	20	3.61	2.70	0.75	959	3.36	2.52	0.75	1006	3.12	2.34	0.75	1062
29	22	3.82	2.40	0.63	996	3.57	2.25	0.63	1053	3.33	2.09	0.63	1090
29	24	4.03	2.05	0.51	1034	3.78	1.93	0.51	1081	3.57	1.82	0.51	1128
29	26	4.24	1.65	0.39	1072	3.99	1.56	0.39	1119	3.75	1.46	0.39	1166
30	18	3.43	3.12	0.91	921	3.15	2.87	0.91	978	2.91	2.64	0.91	1015
30	20	3.61	2.85	0.79	959	3.36	2.65	0.79	1006	3.12	2.46	0.79	1062
30	22	3.82	2.56	0.67	996	3.57	2.39	0.67	1053	3.33	2.23	0.67	1090
30	24	4.03	2.21	0.55	1034	3.78	2.08	0.55	1081	3.57	1.96	0.55	1128
30	26	4.24	1.82	0.43	1072	3.99	1.72	0.43	1119	3.75	1.61	0.43	1166
31	18	3.43	3.26	0.95	921	3.15	2.99	0.95	978	2.91	2.76	0.95	1015
31	20	3.61	2.99	0.83	959	3.36	2.79	0.83	1006	3.12	2.59	0.83	1062
31	22	3.82	2.71	0.71	996	3.57	2.53	0.71	1053	3.33	2.36	0.71	1090
31	24	4.03	2.37	0.59	1034	3.78	2.23	0.59	1081	3.57	2.11	0.59	1128
31	26	4.24	1.99	0.47	1072	3.99	1.88	0.47	1119	3.75	1.76	0.47	1166
32	18	3.43	3.40	0.99	921	3.15	3.12	0.99	978	2.91	2.88	0.99	1015
32	20	3.61	3.14	0.87	959	3.36	2.92	0.87	1006	3.12	2.71	0.87	1062
32	22	3.82	2.86	0.75	996	3.57	2.68	0.75	1053	3.33	2.49	0.75	1090
32	24	4.03	2.54	0.63	1034	3.78	2.38	0.63	1081	3.57	2.25	0.63	1128
32	26	4.24	2.16	0.51	1072	3.99	2.03	0.51	1119	3.75	1.91	0.51	1166

**NOTE** Q : Total capacity (kW) SHF : Sensible heat factor DB : Dry-bulb temperature  
 SHC : Sensible heat capacity (kW) INPUT : Total power input (W) WB : Wet-bulb temperature

**PERFORMANCE DATA COOL operation at Rated frequency**

**MUFZ-KJ50VE**

CAPACITY: 5.0 kW

SHF: 0.71

INPUT: 1410 W

INDOOR DB (°C)	INDOOR WB (°C)	OUTDOOR DB (°C)															
		21				25				27				30			
		Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT
21	18	5.88	3.11	0.53	1128	5.63	2.98	0.53	1184	5.40	2.86	0.53	1241	5.20	2.76	0.53	1297
21	20	6.13	2.51	0.41	1184	5.88	2.41	0.41	1255	5.70	2.34	0.41	1283	5.50	2.26	0.41	1340
22	18	5.88	3.35	0.57	1128	5.63	3.21	0.57	1184	5.40	3.08	0.57	1241	5.20	2.96	0.57	1297
22	20	6.13	2.76	0.45	1184	5.88	2.64	0.45	1255	5.70	2.57	0.45	1283	5.50	2.48	0.45	1340
22	22	6.38	2.10	0.33	1227	6.15	2.03	0.33	1304	6.00	1.98	0.33	1340	5.75	1.90	0.33	1396
23	18	5.88	3.58	0.61	1128	5.63	3.43	0.61	1184	5.40	3.29	0.61	1241	5.20	3.17	0.61	1297
23	20	6.13	3.00	0.49	1184	5.88	2.88	0.49	1255	5.70	2.79	0.49	1283	5.50	2.70	0.49	1340
23	22	6.38	2.36	0.37	1227	6.15	2.28	0.37	1304	6.00	2.22	0.37	1340	5.75	2.13	0.37	1396
24	18	5.88	3.82	0.65	1128	5.63	3.66	0.65	1184	5.40	3.51	0.65	1241	5.20	3.38	0.65	1297
24	20	6.13	3.25	0.53	1184	5.88	3.11	0.53	1255	5.70	3.02	0.53	1283	5.50	2.92	0.53	1340
24	22	6.38	2.61	0.41	1227	6.15	2.52	0.41	1304	6.00	2.46	0.41	1340	5.75	2.36	0.41	1396
24	24	6.70	1.94	0.29	1283	6.45	1.87	0.29	1354	6.30	1.83	0.29	1396	6.10	1.77	0.29	1466
25	18	5.88	4.05	0.69	1128	5.63	3.88	0.69	1184	5.40	3.73	0.69	1241	5.20	3.59	0.69	1297
25	20	6.13	3.49	0.57	1184	5.88	3.35	0.57	1255	5.70	3.25	0.57	1283	5.50	3.14	0.57	1340
25	22	6.38	2.87	0.45	1227	6.15	2.77	0.45	1304	6.00	2.70	0.45	1340	5.75	2.59	0.45	1396
25	24	6.70	2.21	0.33	1283	6.45	2.13	0.33	1354	6.30	2.08	0.33	1396	6.10	2.01	0.33	1466
26	18	5.88	4.29	0.73	1128	5.63	4.11	0.73	1184	5.40	3.94	0.73	1241	5.20	3.80	0.73	1297
26	20	6.13	3.74	0.61	1184	5.88	3.58	0.61	1255	5.70	3.48	0.61	1283	5.50	3.36	0.61	1340
26	22	6.38	3.12	0.49	1227	6.15	3.01	0.49	1304	6.00	2.94	0.49	1340	5.75	2.82	0.49	1396
26	24	6.70	2.48	0.37	1283	6.45	2.39	0.37	1354	6.30	2.33	0.37	1396	6.10	2.26	0.37	1466
26	26	6.90	1.73	0.25	1354	6.70	1.68	0.25	1424	6.60	1.65	0.25	1466	6.40	1.60	0.25	1509
27	18	5.88	4.52	0.77	1128	5.63	4.33	0.77	1184	5.40	4.16	0.77	1241	5.20	4.00	0.77	1297
27	20	6.13	3.98	0.65	1184	5.88	3.82	0.65	1255	5.70	3.71	0.65	1283	5.50	3.58	0.65	1340
27	22	6.38	3.38	0.53	1227	6.15	3.26	0.53	1304	6.00	3.18	0.53	1340	5.75	3.05	0.53	1396
27	24	6.70	2.75	0.41	1283	6.45	2.64	0.41	1354	6.30	2.58	0.41	1396	6.10	2.50	0.41	1466
27	26	6.90	2.00	0.29	1354	6.70	1.94	0.29	1424	6.60	1.91	0.29	1466	6.40	1.86	0.29	1509
28	18	5.88	4.76	0.81	1128	5.63	4.56	0.81	1184	5.40	4.37	0.81	1241	5.20	4.21	0.81	1297
28	20	6.13	4.23	0.69	1184	5.88	4.05	0.69	1255	5.70	3.93	0.69	1283	5.50	3.80	0.69	1340
28	22	6.38	3.63	0.57	1227	6.15	3.51	0.57	1304	6.00	3.42	0.57	1340	5.75	3.28	0.57	1396
28	24	6.70	3.02	0.45	1283	6.45	2.90	0.45	1354	6.30	2.84	0.45	1396	6.10	2.75	0.45	1466
28	26	6.90	2.28	0.33	1354	6.70	2.21	0.33	1424	6.60	2.18	0.33	1466	6.40	2.11	0.33	1509
29	18	5.88	4.99	0.85	1128	5.63	4.78	0.85	1184	5.40	4.59	0.85	1241	5.20	4.42	0.85	1297
29	20	6.13	4.47	0.73	1184	5.88	4.29	0.73	1255	5.70	4.16	0.73	1283	5.50	4.02	0.73	1340
29	22	6.38	3.89	0.61	1227	6.15	3.75	0.61	1304	6.00	3.66	0.61	1340	5.75	3.51	0.61	1396
29	24	6.70	3.28	0.49	1283	6.45	3.16	0.49	1354	6.30	3.09	0.49	1396	6.10	2.99	0.49	1466
29	26	6.90	2.55	0.37	1354	6.70	2.48	0.37	1424	6.60	2.44	0.37	1466	6.40	2.37	0.37	1509
30	18	5.88	5.23	0.89	1128	5.63	5.01	0.89	1184	5.40	4.81	0.89	1241	5.20	4.63	0.89	1297
30	20	6.13	4.72	0.77	1184	5.88	4.52	0.77	1255	5.70	4.39	0.77	1283	5.50	4.24	0.77	1340
30	22	6.38	4.14	0.65	1227	6.15	4.00	0.65	1304	6.00	3.90	0.65	1340	5.75	3.74	0.65	1396
30	24	6.70	3.55	0.53	1283	6.45	3.42	0.53	1354	6.30	3.34	0.53	1396	6.10	3.23	0.53	1466
30	26	6.90	2.83	0.41	1354	6.70	2.75	0.41	1424	6.60	2.71	0.41	1466	6.40	2.62	0.41	1509
31	18	5.88	5.46	0.93	1128	5.63	5.23	0.93	1184	5.40	5.02	0.93	1241	5.20	4.84	0.93	1297
31	20	6.13	4.96	0.81	1184	5.88	4.76	0.81	1255	5.70	4.62	0.81	1283	5.50	4.46	0.81	1340
31	22	6.38	4.40	0.69	1227	6.15	4.24	0.69	1304	6.00	4.14	0.69	1340	5.75	3.97	0.69	1396
31	24	6.70	3.82	0.57	1283	6.45	3.68	0.57	1354	6.30	3.59	0.57	1396	6.10	3.48	0.57	1466
31	26	6.90	3.11	0.45	1354	6.70	3.02	0.45	1424	6.60	2.97	0.45	1466	6.40	2.88	0.45	1509
32	18	5.88	5.70	0.97	1128	5.63	5.46	0.97	1184	5.40	5.24	0.97	1241	5.20	5.04	0.97	1297
32	20	6.13	5.21	0.85	1184	5.88	4.99	0.85	1255	5.70	4.84	0.85	1283	5.50	4.68	0.85	1340
32	22	6.38	4.65	0.73	1227	6.15	4.49	0.73	1304	6.00	4.38	0.73	1340	5.75	4.20	0.73	1396
32	24	6.70	4.09	0.61	1283	6.45	3.93	0.61	1354	6.30	3.84	0.61	1396	6.10	3.72	0.61	1466
32	26	6.90	3.38	0.49	1354	6.70	3.28	0.49	1424	6.60	3.23	0.49	1466	6.40	3.14	0.49	1509

**NOTE** Q : Total capacity (kW) SHF : Sensible heat factor DB : Dry-bulb temperature  
 SHC : Sensible heat capacity (kW) INPUT : Total power input (W) WB : Wet-bulb temperature

**PERFORMANCE DATA COOL operation at Rated frequency**

**MUFZ-KJ50VE**

CAPACITY: 5.0 kW

SHF: 0.71

INPUT: 1410 W

INDOOR DB (°C)	INDOOR WB (°C)	OUTDOOR DB (°C)											
		35				40				46			
		Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT
21	18	4.90	2.60	0.53	1382	4.50	2.39	0.53	1466	4.15	2.20	0.53	1523
21	20	5.15	2.11	0.41	1438	4.80	1.97	0.41	1509	4.45	1.82	0.41	1593
22	18	4.90	2.79	0.57	1382	4.50	2.57	0.57	1466	4.15	2.37	0.57	1523
22	20	5.15	2.32	0.45	1438	4.80	2.16	0.45	1509	4.45	2.00	0.45	1593
22	22	5.45	1.80	0.33	1495	5.10	1.68	0.33	1579	4.75	1.57	0.33	1636
23	18	4.90	2.99	0.61	1382	4.50	2.75	0.61	1466	4.15	2.53	0.61	1523
23	20	5.15	2.52	0.49	1438	4.80	2.35	0.49	1509	4.45	2.18	0.49	1593
23	22	5.45	2.02	0.37	1495	5.10	1.89	0.37	1579	4.75	1.76	0.37	1636
24	18	4.90	3.19	0.65	1382	4.50	2.93	0.65	1466	4.15	2.70	0.65	1523
24	20	5.15	2.73	0.53	1438	4.80	2.54	0.53	1509	4.45	2.36	0.53	1593
24	22	5.45	2.23	0.41	1495	5.10	2.09	0.41	1579	4.75	1.95	0.41	1636
24	24	5.75	1.67	0.29	1551	5.40	1.57	0.29	1621	5.10	1.48	0.29	1692
25	18	4.90	3.38	0.69	1382	4.50	3.11	0.69	1466	4.15	2.86	0.69	1523
25	20	5.15	2.94	0.57	1438	4.80	2.74	0.57	1509	4.45	2.54	0.57	1593
25	22	5.45	2.45	0.45	1495	5.10	2.30	0.45	1579	4.75	2.14	0.45	1636
25	24	5.75	1.90	0.33	1551	5.40	1.78	0.33	1621	5.10	1.68	0.33	1692
26	18	4.90	3.58	0.73	1382	4.50	3.29	0.73	1466	4.15	3.03	0.73	1523
26	20	5.15	3.14	0.61	1438	4.80	2.93	0.61	1509	4.45	2.71	0.61	1593
26	22	5.45	2.67	0.49	1495	5.10	2.50	0.49	1579	4.75	2.33	0.49	1636
26	24	5.75	2.13	0.37	1551	5.40	2.00	0.37	1621	5.10	1.89	0.37	1692
26	26	6.05	1.51	0.25	1607	5.70	1.43	0.25	1678	5.35	1.34	0.25	1748
27	18	4.90	3.77	0.77	1382	4.50	3.47	0.77	1466	4.15	3.20	0.77	1523
27	20	5.15	3.35	0.65	1438	4.80	3.12	0.65	1509	4.45	2.89	0.65	1593
27	22	5.45	2.89	0.53	1495	5.10	2.70	0.53	1579	4.75	2.52	0.53	1636
27	24	5.75	2.36	0.41	1551	5.40	2.21	0.41	1621	5.10	2.09	0.41	1692
27	26	6.05	1.75	0.29	1607	5.70	1.65	0.29	1678	5.35	1.55	0.29	1748
28	18	4.90	3.97	0.81	1382	4.50	3.65	0.81	1466	4.15	3.36	0.81	1523
28	20	5.15	3.55	0.69	1438	4.80	3.31	0.69	1509	4.45	3.07	0.69	1593
28	22	5.45	3.11	0.57	1495	5.10	2.91	0.57	1579	4.75	2.71	0.57	1636
28	24	5.75	2.59	0.45	1551	5.40	2.43	0.45	1621	5.10	2.30	0.45	1692
28	26	6.05	2.00	0.33	1607	5.70	1.88	0.33	1678	5.35	1.77	0.33	1748
29	18	4.90	4.17	0.85	1382	4.50	3.83	0.85	1466	4.15	3.53	0.85	1523
29	20	5.15	3.76	0.73	1438	4.80	3.50	0.73	1509	4.45	3.25	0.73	1593
29	22	5.45	3.32	0.61	1495	5.10	3.11	0.61	1579	4.75	2.90	0.61	1636
29	24	5.75	2.82	0.49	1551	5.40	2.65	0.49	1621	5.10	2.50	0.49	1692
29	26	6.05	2.24	0.37	1607	5.70	2.11	0.37	1678	5.35	1.98	0.37	1748
30	18	4.90	4.36	0.89	1382	4.50	4.01	0.89	1466	4.15	3.69	0.89	1523
30	20	5.15	3.97	0.77	1438	4.80	3.70	0.77	1509	4.45	3.43	0.77	1593
30	22	5.45	3.54	0.65	1495	5.10	3.32	0.65	1579	4.75	3.09	0.65	1636
30	24	5.75	3.05	0.53	1551	5.40	2.86	0.53	1621	5.10	2.70	0.53	1692
30	26	6.05	2.48	0.41	1607	5.70	2.34	0.41	1678	5.35	2.19	0.41	1748
31	18	4.90	4.56	0.93	1382	4.50	4.19	0.93	1466	4.15	3.86	0.93	1523
31	20	5.15	4.17	0.81	1438	4.80	3.89	0.81	1509	4.45	3.60	0.81	1593
31	22	5.45	3.76	0.69	1495	5.10	3.52	0.69	1579	4.75	3.28	0.69	1636
31	24	5.75	3.28	0.57	1551	5.40	3.08	0.57	1621	5.10	2.91	0.57	1692
31	26	6.05	2.72	0.45	1607	5.70	2.57	0.45	1678	5.35	2.41	0.45	1748
32	18	4.90	4.75	0.97	1382	4.50	4.37	0.97	1466	4.15	4.03	0.97	1523
32	20	5.15	4.38	0.85	1438	4.80	4.08	0.85	1509	4.45	3.78	0.85	1593
32	22	5.45	3.98	0.73	1495	5.10	3.72	0.73	1579	4.75	3.47	0.73	1636
32	24	5.75	3.51	0.61	1551	5.40	3.29	0.61	1621	5.10	3.11	0.61	1692
32	26	6.05	2.96	0.49	1607	5.70	2.79	0.49	1678	5.35	2.62	0.49	1748

**NOTE** Q : Total capacity (kW) SHF : Sensible heat factor DB : Dry-bulb temperature  
 SHC : Sensible heat capacity (kW) INPUT : Total power input (W) WB : Wet-bulb temperature

**PERFORMANCE DATA HEAT operation at Rated frequency**  
**MUFZ-KJ25VE**

CAPACITY: 3.4 kW INPUT: 770 W

INDOOR DB (°C)	OUTDOOR WB (°C)													
	-10		-5		0		5		10		15		20	
	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT
15	2.14	501	2.58	601	3.03	678	3.47	732	3.91	778	4.32	801	4.76	816
21	2.04	539	2.45	639	2.89	708	3.30	762	3.74	801	4.15	824	4.57	855
26	1.84	578	2.28	678	2.69	747	3.13	801	3.57	839	3.98	862	4.42	886

**MUFZ-KJ35VE**

CAPACITY: 4.3 kW INPUT: 1100 W

INDOOR DB (°C)	OUTDOOR WB (°C)													
	-10		-5		0		5		10		15		20	
	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT
15	2.71	715	3.27	858	3.83	968	4.39	1045	4.95	1111	5.46	1144	6.02	1166
21	2.58	770	3.10	913	3.66	1012	4.17	1089	4.73	1144	5.25	1177	5.78	1221
26	2.32	825	2.88	968	3.40	1067	3.96	1144	4.52	1199	5.03	1232	5.59	1265

**NOTE:** Q: Total capacity (kW) INPUT : Total power input (W) DB: Dry-bulb temperature WB: Wet-bulb temperature

**MUFZ-KJ50VE**

CAPACITY: 6.0 kW INPUT: 1610 W

INDOOR DB (°C)	OUTDOOR WB (°C)													
	-10		-5		0		5		10		15		20	
	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT
15	3.78	1047	4.56	1256	5.34	1417	6.12	1530	6.90	1626	7.62	1674	8.40	1707
21	3.60	1127	4.32	1336	5.10	1481	5.82	1594	6.60	1674	7.32	1723	8.07	1787
26	3.24	1208	4.02	1417	4.74	1562	5.52	1674	6.30	1755	7.02	1803	7.80	1852

**NOTE:** Q: Total capacity (kW) INPUT : Total power input (W) DB: Dry-bulb temperature WB: Wet-bulb temperature




**MUFZ-KJ25VE  
MUFZ-KJ35VE  
MUFZ-KJ50VE**

**9-1. OUTDOOR FAN MOTOR CONTROL**

The fan motor turns ON/OFF, interlocking with the compressor.

[ON] The fan motor turns ON 5 seconds before the compressor starts up.


[OFF] The fan motor turns OFF 15 seconds after the compressor has stopped running.

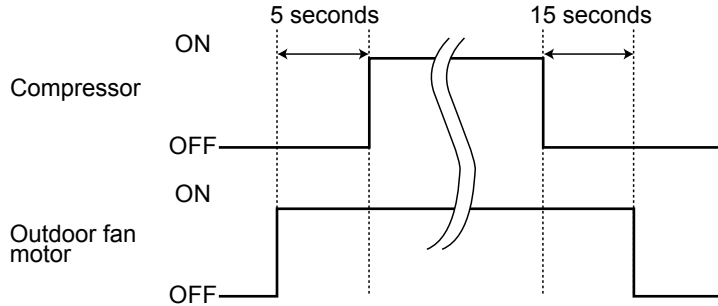

**9-2. R.V. COIL CONTROL**

- Heating . . . . . ON
- Cooling . . . . . OFF
- Dry . . . . . OFF

**NOTE:** The 4-way valve reverses for 5 seconds right before start-up of the compressor.

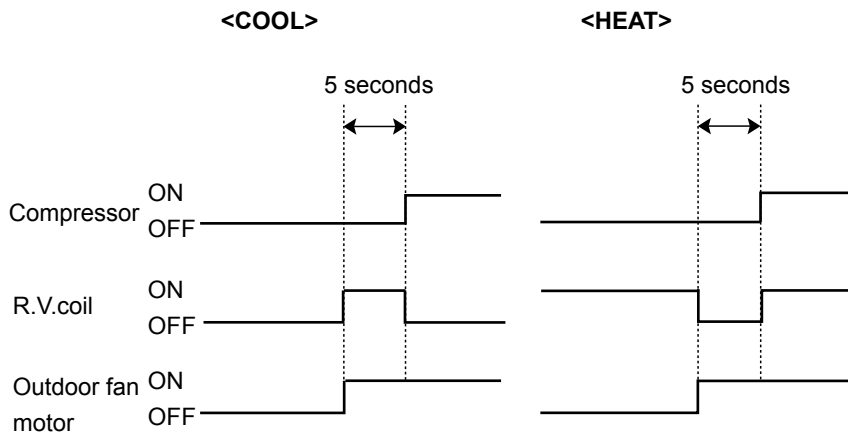

**9-3. RELATION BETWEEN MAIN SENSOR AND ACTUATOR**

Sensor	Purpose	Actuator					
		Compressor	LEV	Outdoor fan motor	R.V.coil	Indoor fan motor	Defrost heater
Discharge temperature thermistor	Protection	○	○				
Indoor coil temperature thermistor	Cooling: Coil frost prevention	○					
	Heating: High pressure protection	○	○				
Defrost thermistor	Heating: Defrosting	○	○	○	○	○	
Fin temperature thermistor	Protection	○		○			
Ambient temperature thermistor	Cooling: Low ambient temperature operation	○	○	○			
	Heating: Defrosting (Heater)						○
Outdoor heat exchanger temperature thermistor	Cooling: Low ambient temperature operation	○	○	○			
	Cooling: High pressure protection	○	○	○			

## MUFZ-KJ25VE MUFZ-KJ35VE MUFZ-KJ50VE

**10-1. CHANGE IN DEFROST SETTING****Changing defrost finish temperature**

<JS> To change the defrost finish temperature, cut/solder the JS wire of the outdoor inverter P.C. board.

(Refer to 11-6-1.)

Jumper wire		Defrost finish temperature (°C)
JS	Soldered (Initial setting)	5
	None (Cut)	10

**10-2. PRE-HEAT CONTROL SETTING****PRE-HEAT CONTROL****MUFZ-KJ25/35**

When moisture gets into the refrigerant cycle, it may interfere the start-up of the compressor at low outside temperature. The pre-heat control prevents this interference. The pre-heat control turns ON when the discharge temperature thermistor is 20°C or below. When the pre-heat control turns ON, the compressor is energized. (About 50 W)

**MUFZ-KJ50**

Prolonged low load operation, in which the thermostat is OFF for a long time, at low outside temperature (0°C or less) may cause the following troubles. To prevent those troubles, activate the pre-heat control.

- 1) If moisture gets into the refrigerant cycle and freezes, it may interfere the start-up of the compressor.
- 2) If liquid refrigerant collects in the compressor, a failure in the compressor may occur.

The pre-heat control turns ON when the compressor temperature is 20°C or below. When the pre-heat control turns ON, the compressor is energized. (About 70 W)

**Pre-heat control setting**

<JK>

ON: To activate the pre-heat control, cut JK wire of the inverter P.C. board.

OFF: To deactivate the pre-heat control, solder JK wire of the inverter P.C. board. (Refer to 11-6.1)

**NOTE:** When the inverter P.C. board is replaced, check the jumper wires, and cut/solder them if necessary.


**MUFZ-KJ25VE****MUFZ-KJ35VE****MUFZ-KJ50VE****11-1. CAUTIONS ON TROUBLESHOOTING****1. Before troubleshooting, check the following**

- 1) Check the power supply voltage.
- 2) Check the indoor/outdoor connecting wire for miswiring.


**2. Take care of the following during servicing**

- 1) Before servicing the air conditioner, be sure to turn OFF the main unit first with the remote controller, and then after confirming the horizontal vane is closed, turn OFF the breaker and/or disconnect the power plug.
- 2) Be sure to turn OFF the power supply before removing the front panel, the cabinet, the top panel, and the electronic control P.C. board.
- 3) When removing the electrical parts, be careful of the residual voltage of smoothing capacitor.
- 4) When removing the electronic control P.C. board, hold the edge of the board with care NOT to apply stress on the components.
- 5) When connecting or disconnecting the connectors, hold the connector housing. DO NOT pull the lead wires.

&lt;Incorrect&gt;

**Lead wiring**

&lt;Correct&gt;

**Connector housing****3. Troubleshooting procedure**

- 1) Check if the OPERATION INDICATOR lamp on the indoor unit is flashing on and off to indicate an abnormality.  
To make sure, check how many times the OPERATION INDICATOR lamp is flashing on and off before starting service work.
- 2) Before servicing, check that the connector and terminal are connected properly.
- 3) When the electronic control P.C. board seems to be defective, check the copper foil pattern for disconnection and the components for bursting and discoloration.
- 4) Refer to 11-2 and 11-3.


## 11-2. FAILURE MODE RECALL FUNCTION

Outline of the function

This air conditioner can memorize the abnormal condition which has occurred once.


Even though LED indication listed on the troubleshooting check table (11-3.) disappears, the memorized failure details can be recalled.

### 1. Flow chart of failure mode recall function for the indoor/outdoor unit

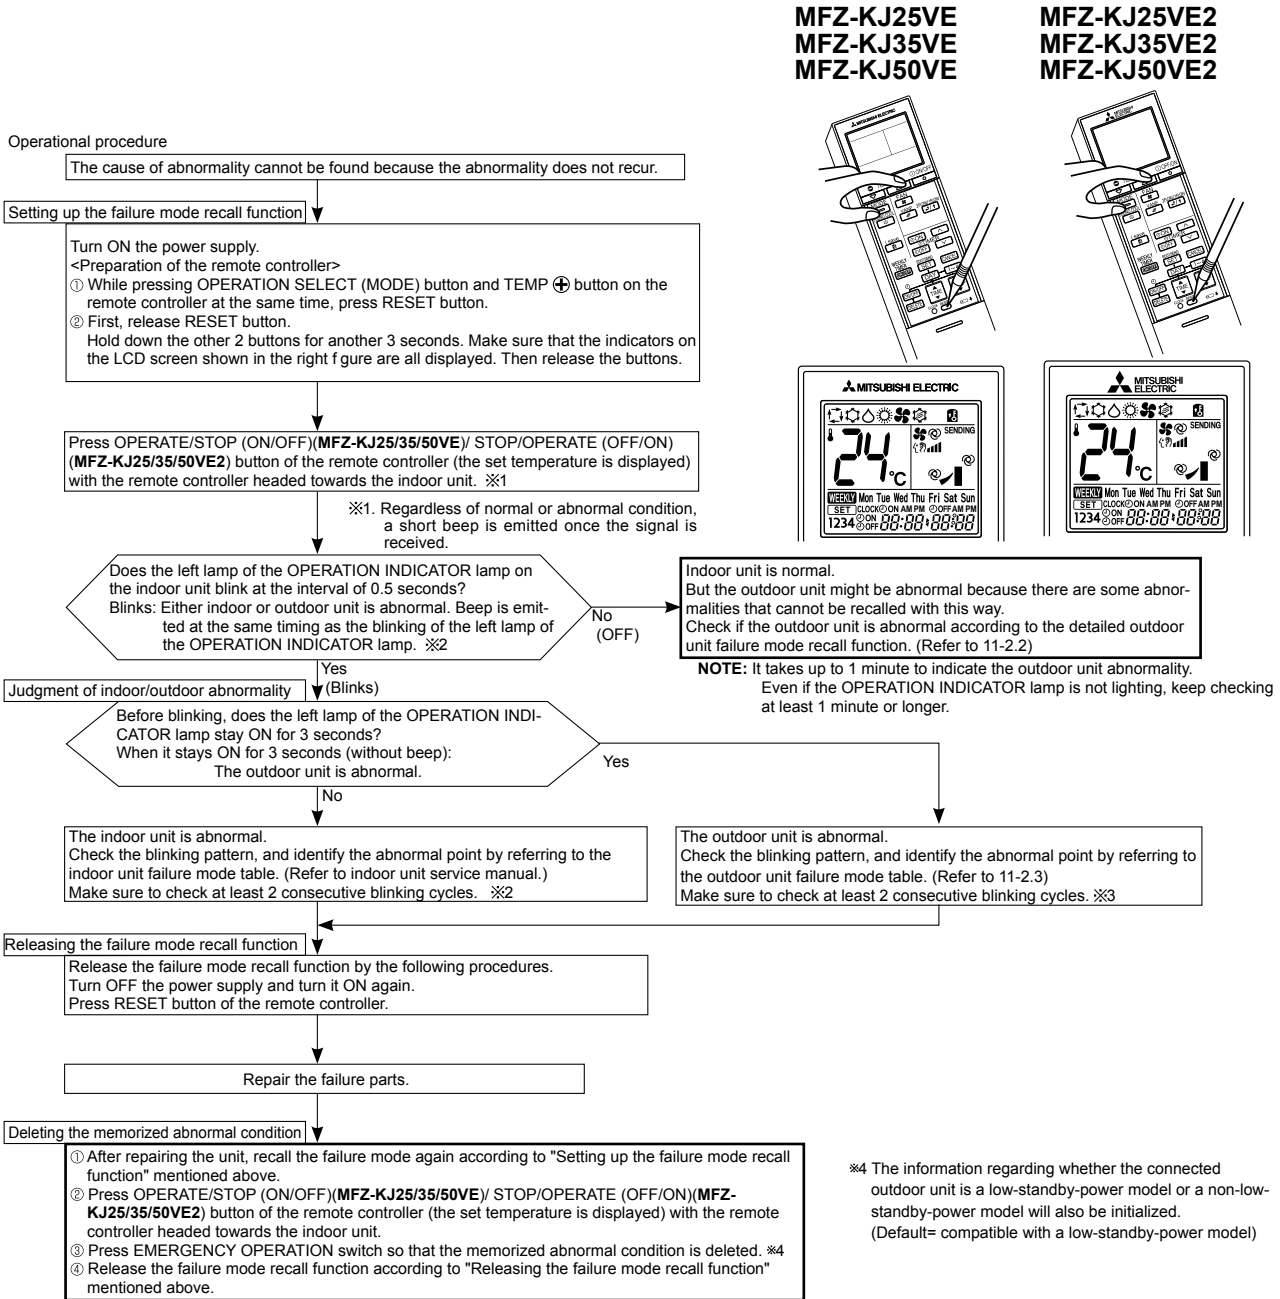


**NOTE:** 1. Make sure to release the failure mode recall function after it is set up, otherwise the unit cannot operate properly.  
2. If the abnormal condition is not deleted from the memory, the last abnormal condition is kept memorized.

※2. Blinking pattern when the indoor unit is abnormal:

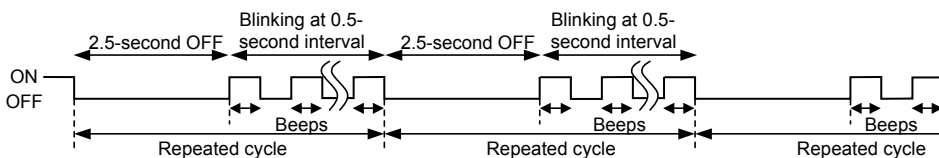


※3. Blinking pattern when the outdoor unit is abnormal:

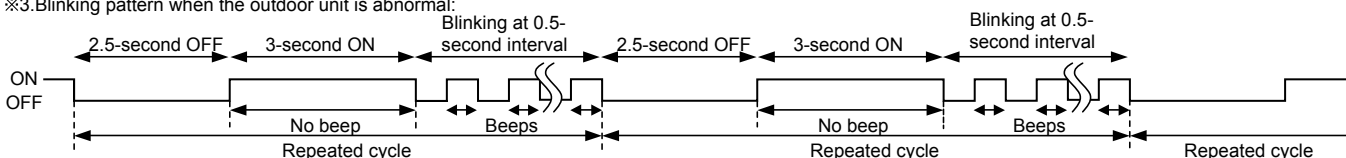


## 2. Flow chart of the detailed outdoor unit failure mode recall function

### Operational procedure

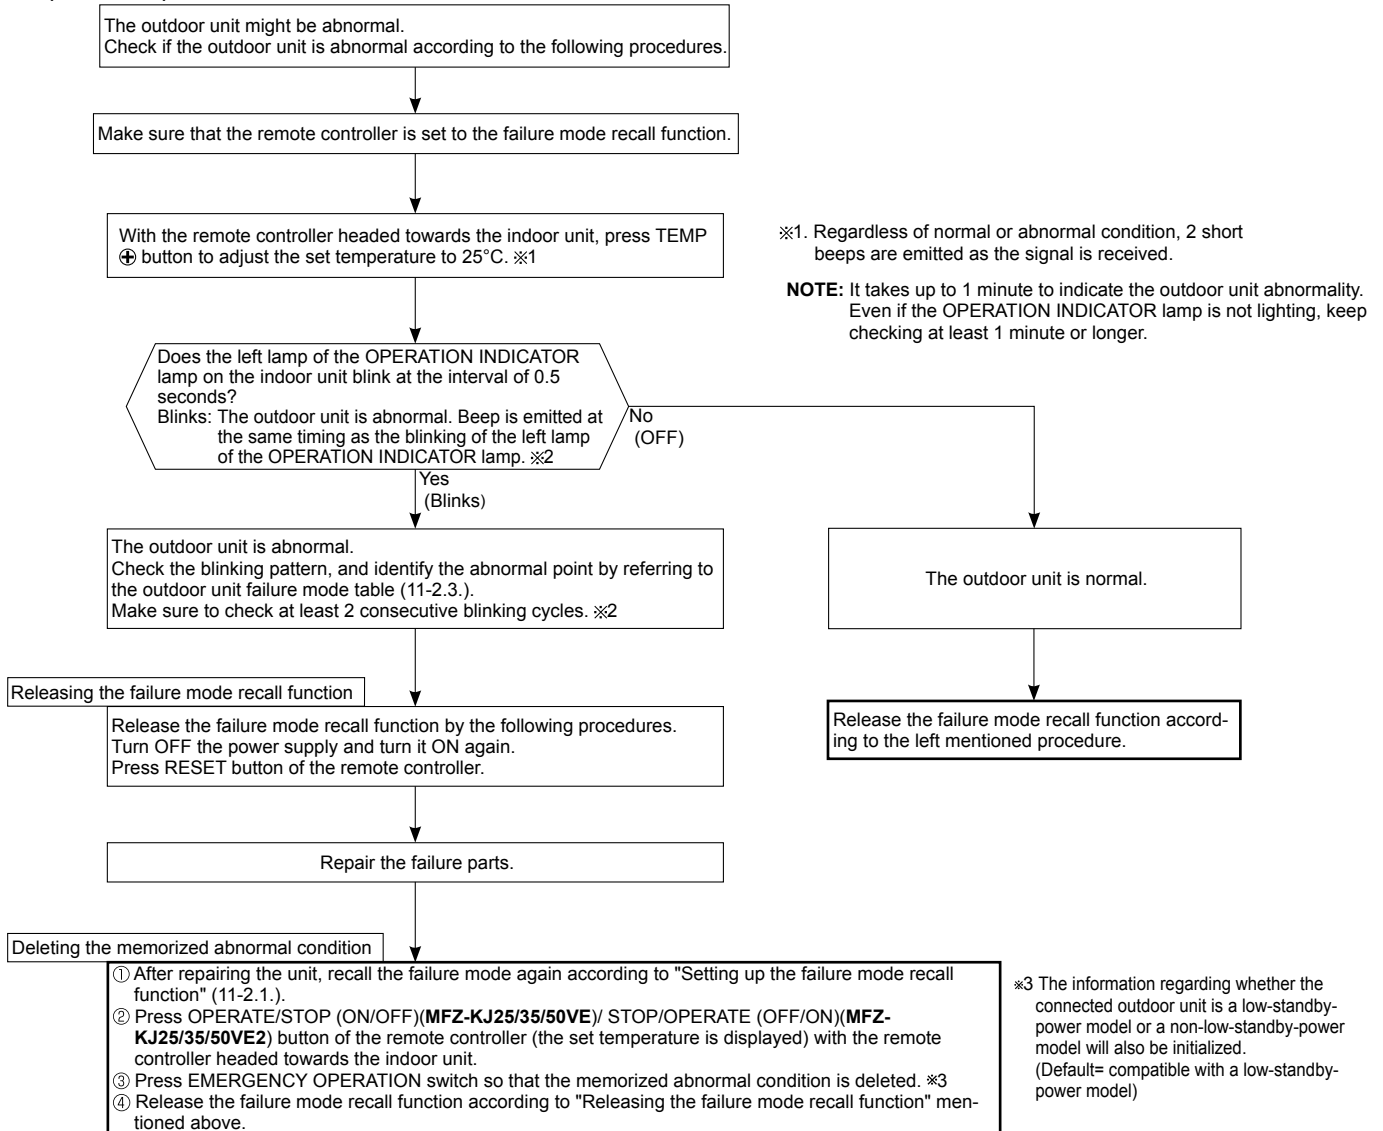

**NOTE:** 1. Make sure to release the failure mode recall function after it is set up, otherwise the unit cannot operate properly.  
2. If the abnormal condition is not deleted from the memory, the last abnormal condition is kept memorized.

※2. Blinking pattern when outdoor unit is abnormal:

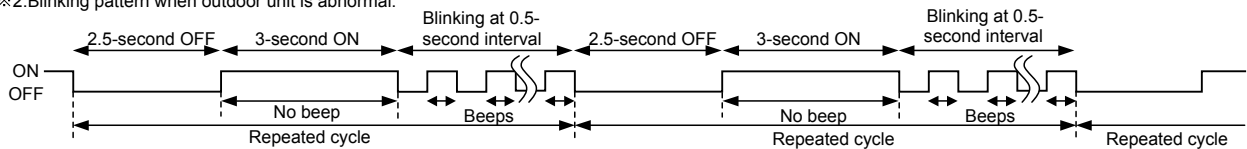

### 3. Outdoor unit failure mode table

Left lamp of the OPERATION INDICATOR lamp (Indoor unit)	Abnormal point (Failure mode/protection)	LED indication (Outdoor P.C. board)	Condition	Remedy	Indoor/outdoor unit failure mode recall function	Outdoor unit failure mode recall function
OFF	None (Normal)	—	—	—	—	—
1-time flash 2.5 seconds OFF	Indoor/outdoor communication, receiving error	—	Any signals from the inverter P.C. board cannot be received normally for 3 minutes.	•Refer to 11-5. ㉔ How to check miswiring and serial signal error.	○	○
	Indoor/outdoor communication, receiving error	—	Although the inverter P.C. board sends signal "0", signal "1" has been received 30 consecutive times.	•Refer to 11-5. ㉔ How to check miswiring and serial signal error.		
2-time flash 2.5 seconds OFF	Outdoor power system	—	Overcurrent protection cut-out operates 3 consecutive times within 1 minute after the compressor gets started.	•Reconnect the connectors. •Refer to 11-5. ㉔ How to check inverter/compressor". •Check the stop valve.	○	○
3-time flash 2.5 seconds OFF	Discharge temperature thermistor	1-time flash every 2.5 seconds	Thermistor shorts or opens during compressor running.	•Refer to 11-5. ㉔ "Check of outdoor thermistors". Defective the outdoor thermistors can be identified by checking the blinking pattern of LED.	○	○
	Defrost thermistor	3-time flash 2.5 seconds OFF				
	Fin temperature thermistor	4-time flash 2.5 seconds OFF				
	P.C. board temperature thermistor	2-time flash 2.5 seconds OFF				
	Ambient temperature thermistor	—				
Outdoor heat exchanger temperature thermistor	—					
4-time flash 2.5 seconds OFF	Overcurrent	11-time flash 2.5 seconds OFF	Large current flows into power module (IC700) (KJ25/35)/ IGBT module (IC700) (KJ50).	•Reconnect the compressor connector. •Refer to 11-5. ㉔ How to check inverter/compressor". •Check the stop valve.	—	○
	Compressor synchronous abnormality (Compressor start-up failure protection)	12-time flash 2.5 seconds OFF	Waveform of compressor current is distorted.	•Reconnect the compressor connector. •Refer to 11-5. ㉔ How to check inverter/compressor".	—	○
5-time flash 2.5 seconds OFF	Discharge temperature	—	Temperature of discharge temperature thermistor exceeds 116°C, compressor stops. Compressor can restart if discharge temperature thermistor reads 100°C or less 3 minutes later.	•Check the refrigerant circuit and the refrigerant amount. •Refer to 11-5. ㉔ Check of LEV".	—	○
6-time flash 2.5 seconds OFF	High pressure	—	Temperature indoor coil thermistor exceeds 70°C in HEAT mode. Temperature defrost thermistor exceeds 70°C in COOL mode.	•Check the refrigerant circuit and the refrigerant amount. •Check the stop valve.	—	○
7-time flash 2.5 seconds OFF	Fin temperature/ P.C. board temperature	7-time flash 2.5 seconds OFF	Temperature of fin temperature thermistor on the inverter P.C. board exceeds 75 ~ 86°C (KJ25/35)/ 75 ~ 80°C (KJ50), or temperature of P.C. board temperature thermistor on the inverter P.C. board exceeds 72 ~ 85°C (KJ25/35)/ 70 ~ 75°C (KJ50).	•Check around the outdoor unit. •Check the outdoor unit air passage. •Refer to 11-5. ㉔ Check of outdoor fan motor".	—	○
8-time flash 2.5 seconds OFF	Outdoor fan motor	—	Outdoor fan has stopped 3 times in a row within 30 seconds after outdoor fan start-up.	•Refer to 11-5. ㉔ Check of outdoor fan motor". Refer to 11-5. ㉔ Check of inverter P.C. board".	—	○
9-time flash 2.5 seconds OFF	Nonvolatile memory data	5-time flash 2.5 seconds OFF	Nonvolatile memory data cannot be read properly.	•Replace the inverter P.C. board.	○	○
	Power module (IC700) (KJ25/35) IGBT module (IC700) (KJ50).	6-time flash 2.5 seconds OFF	The interface short circuit occurs in the output of the power module (IC700) (KJ25/35)/ IGBT module (IC700) (KJ50). The compressor winding shorts circuit.	•Refer to 11-5. ㉔ How to check inverter/compressor".		
10-time flash 2.5 seconds OFF	Discharge temperature	—	Temperature of discharge temperature thermistor has been 50°C or less for 20 minutes.	•Refer to 11-5. ㉔ Check of LEV". •Check the refrigerant circuit and the refrigerant amount.	—	○

**NOTE:** Blinking patterns of this mode differ from the ones of TROUBLESHOOTING CHECK TABLE (11-3.).



Left lamp of the OPERATION INDICATOR lamp (Indoor unit)	Abnormal point (Failure mode/protection)	LED indication (Outdoor P.C. board)	Condition	Remedy	Indoor/outdoor unit failure mode recall function	Outdoor unit failure mode recall function
11-time f ash 2.5 seconds OFF	Bus-bar voltage (DC)	8-time f ash 2.5 seconds OFF	Bus-bar voltage of inverter cannot be detected normally.	•Refer to 11-5.④"How to check inverter/compressor".	—	○
	Each phase current of compressor	9-time f ash 2.5 seconds OFF	Each phase current of compressor cannot be detected normally.			
14-time f ash or more 2.5 seconds OFF	Stop valve (Closed valve)	14-time f ash 2.5 seconds OFF	Closed valve is detected by compressor current.	•Check the stop valve.	○	○
	4-way valve/ Pipe temperature	16-time f ash 2.5 seconds OFF	The 4-way valve does not work properly. The indoor coil thermistor detects an abnormal temperature.	•Check the 4-way valve. •Replace the inverter P.C. board.		
	Outdoor refrigerant system abnormality	17-time f ash 2.5 seconds OFF	A closed valve and air trapped in the refrigerant circuit are detected based on the temperature sensed by the indoor and outdoor thermistors and the current of the compressor.	•Check for a gas leak in a connecting piping etc. •Check the stop valve. •Refer to 11-5. ④ "Check of outdoor refrigerant circuit".	○	○

**NOTE:** Blinking patterns of this mode differ from the ones of TROUBLESHOOTING CHECK TABLE (11-3.).

### 11-3. TROUBLESHOOTING CHECK TABLE

No.	Symptom	LED indication	Abnormal point/ Condition	Condition	Remedy	
1	Outdoor unit does not operate.	1-time f ash every 2.5 seconds	Outdoor power system	Overcurrent protection cut-out operates 3 consecutive times within 1 minute after the compressor gets started.	<ul style="list-style-type: none"> <li>•Reconnect the connector of the compressor.</li> <li>•Refer to 11-5.Ⓐ "How to check inverter/compressor".</li> <li>•Check the stop valve.</li> </ul>	
2			Outdoor thermistors	Discharge temperature thermistor, f n temperature thermistor, defrost thermistor, P.C. board temperature thermistor, outdoor heat exchanger temperature thermistor or ambient temperature thermistor shorts or opens during compressor running.	<ul style="list-style-type: none"> <li>•Refer to 11-5.Ⓢ "Check of outdoor thermistors".</li> </ul>	
3			Outdoor control system	Nonvolatile memory data cannot be read properly. (POWER lamp of the indoor unit lights up or f ashes 7-time.)	<ul style="list-style-type: none"> <li>•Replace the inverter P.C. board.</li> </ul>	
4		6-time f ash every 2.5 seconds OFF	Serial signal	The communication fails between the indoor and outdoor unit for 3 minutes.	<ul style="list-style-type: none"> <li>•Check connection between the inverter P.C. board and the relay P.C. board. (KJ50)</li> <li>•Refer to 11-5.Ⓜ "How to check miswiring and serial signal error."</li> </ul>	
5		11-time f ash every 2.5 seconds OFF	Stop valve/ Closed valve	Closed valve is detected by compressor current.	<ul style="list-style-type: none"> <li>•Check the stop valve.</li> </ul>	
6		14-time f ash every 2.5 seconds OFF	Outdoor unit (Other abnormality)	Outdoor unit is defective.	<ul style="list-style-type: none"> <li>•Refer to 11-2.2. "Flow chart of the detailed outdoor unit failure mode recall function".</li> </ul>	
7		16-time f ash every 2.5 seconds OFF	4-way valve/ Pipe temperature	The 4-way valve does not work properly. The indoor coil thermistor detects an abnormal temperature.	<ul style="list-style-type: none"> <li>•Refer to 11-5.Ⓣ "Check of R.V. coil".</li> <li>•Replace the inverter P.C. board.</li> </ul>	
8		17-time f ash every 2.5 seconds OFF	Outdoor refrigerant system abnormality	A closed valve and air trapped in the refrigerant circuit are detected based on the temperature sensed by the indoor and outdoor thermistors and the current of the compressor.	<ul style="list-style-type: none"> <li>•Check for a gas leak in a connecting piping etc.</li> <li>•Check the stop valve.</li> <li>•Refer to 11-5.Ⓝ "Check of outdoor refrigerant circuit".</li> </ul>	
9	'Outdoor unit stops and restarts 3 minutes later' is repeated.	2-time f ash every 2.5 seconds OFF	Overcurrent protection	Large current f lows into power module (IC700)(KJ25/35)/ IGBT module (IC700) (KJ50).	<ul style="list-style-type: none"> <li>•Reconnect the connector of the compressor.</li> <li>•Refer to 11-5.Ⓐ "How to check inverter/compressor".</li> <li>•Check the stop valve.</li> </ul>	
10		3-time f ash every 2.5 seconds OFF	Discharge temperature overheat protection	Temperature of discharge temperature thermistor exceeds 116°C, compressor stops. Compressor can restart if discharge temperature thermistor reads 100°C or less 3 minutes later.	<ul style="list-style-type: none"> <li>•Check the refrigerant circuit and the refrigerant amount.</li> <li>•Refer to 11-5.Ⓚ "Check of LEV".</li> </ul>	
11		4-time f ash every 2.5 seconds OFF	Fin temperature / P.C. board temperature thermistor overheat protection	Temperature of f n temperature thermistor on the heat sink exceeds 75 ~ 86°C (KJ25/35)/75 ~ 80°C(KJ50) or temperature of P.C. board temperature thermistor on the inverter P.C.board exceeds 72 ~ 85°C(KJ25/35)/70 ~ 75°C(KJ50).	<ul style="list-style-type: none"> <li>•Check around the outdoor unit.</li> <li>•Check the outdoor unit air passage.</li> <li>•Refer to 11-5.Ⓛ "Check of outdoor fan motor".</li> </ul>	
12		5-time f ash every 2.5 seconds OFF	High pressure protection	Indoor coil thermistor exceeds 70°C in HEAT mode. Defrost thermistor exceeds 70°C in COOL mode.	<ul style="list-style-type: none"> <li>•Check the refrigerant circuit and the refrigerant amount.</li> <li>•Check the stop valve.</li> </ul>	
13		8-time f ash every 2.5 seconds OFF	Compressor synchronous abnormality	The waveform of compressor current is distorted.	<ul style="list-style-type: none"> <li>•Reconnect the connector of the compressor.</li> <li>•Refer to 11-5.Ⓐ "How to check inverter/compressor".</li> </ul>	
14		10-time f ash every 2.5 seconds OFF	Outdoor fan motor	Outdoor fan has stopped 3 times in a row within 30 seconds after outdoor fan start-up.	<ul style="list-style-type: none"> <li>•Refer to 11-5.Ⓛ "Check of outdoor fan motor."</li> <li>•Refer to 11-5.Ⓛ "Check of inverter P.C. board."</li> </ul>	
15		12-time f ash every 2.5 seconds OFF	Each phase current of compressor	Each phase current of compressor cannot be detected normally.	<ul style="list-style-type: none"> <li>•Refer to 11-5.Ⓐ "How to check inverter/compressor".</li> </ul>	
16		13-time f ash every 2.5 seconds OFF	Bus-bar voltage (DC)	Bus-bar voltage of inverter cannot be detected normally.	<ul style="list-style-type: none"> <li>•It occurs with following case. Instantaneous power voltage drop. (Short time power failure) (KJ50)</li> <li>•Refer to 11-5.Ⓞ "Check of power supply". (KJ50)</li> <li>•Refer to 11-5.Ⓐ "How to check inverter/compressor".</li> </ul>	
17	Outdoor unit operates.	1-time f ash every 2.5 seconds OFF	Frequency drop by current protection	KJ25/35	When the input current exceeds approximately 10A (KJ25)/10.5A (KJ35), compressor frequency lowers.	The unit is normal, but check the following. •Check if the indoor f lters are clogged. •Check if the refrigerant is short. •Check if the indoor/outdoor unit air circulation is short cycled.
KJ50				Current from power outlet is nearing breaker capacity.		
18		3-time f ash every 2.5 seconds OFF	Frequency drop by high pressure protection	Temperature of indoor coil thermistor exceeds 55°C in HEAT mode, compressor frequency lowers.		
			Frequency drop by defrosting in COOL mode	Indoor coil thermistor reads 8°C or less in COOL mode, compressor frequency lowers.		
19	4-time f ash every 2.5 seconds OFF	Frequency drop by discharge temperature protection	Temperature of discharge temperature thermistor exceeds 111°C, compressor frequency lowers.	<ul style="list-style-type: none"> <li>•Check the refrigerant circuit and the refrigerant amount.</li> <li>•Refer to 11-5.Ⓚ "Check of LEV".</li> <li>•Refer to 11-5.Ⓢ "Check of outdoor thermistors".</li> </ul>		
20	5-time f ash every 2.5 seconds OFF	Outside temperature thermistor protection	When the outside temperature thermistor shorts or opens, protective operation without that thermistor is performed.	<ul style="list-style-type: none"> <li>•Refer to 11-5.Ⓢ "Check of outdoor thermistors."</li> </ul>		

NOTE: 1. The location of LED is illustrated at the right f gure. Refer to 11-6.1.  
2. LED is lighted during normal operation.

The f ashing frequency shows the number of times the LED blinks after every 2.5-second OFF.  
(Example) When the f ashing frequency is "2".







No.	Symptom	LED indication	Abnormal point/ Condition	Condition	Remedy
21	Outdoor unit operates.	7-time flash 2.5 seconds OFF	Low discharge temperature protection	Temperature of discharge temperature thermistor has been 50°C or less for 20 minutes.	<ul style="list-style-type: none"> <li>Refer to 11-5. Ⓢ "Check of LEV".</li> <li>Check the refrigerant circuit and the refrigerant amount.</li> </ul>
22		8-time flash 2.5 seconds OFF	<b>MUFZ-KJ25/35</b> PAM protection PAM: Pulse Amplitude Modulation	The overcurrent flows into PFC (Power factor correction : IC820) or the bus-bar voltage reaches 394 V or more, PAM stops and restarts.	This is not malfunction. PAM protection will be activated in the following cases: 1 Instantaneous power voltage drop. (Short time power failure) 2 When the power supply voltage is high.
			<b>MUFZ-KJ50</b> Zero cross detecting circuit	Zero cross signal cannot be detected.	<ul style="list-style-type: none"> <li>It occurs with following cases.</li> <li>1 Instantaneous power voltage drop. (Short time power failure)</li> <li>2 Distortion of primary voltage</li> </ul> <ul style="list-style-type: none"> <li>Refer to 11-5. Ⓣ "Check of power supply".</li> </ul>
23	9-time flash 2.5 seconds OFF	Inverter check mode	The connector of compressor is disconnected, inverter check mode starts.	<ul style="list-style-type: none"> <li>Check if the connector of the compressor is correctly connected. Refer to 11-5. ⓐ "How to check inverter/compressor".</li> </ul>	

**NOTE:** 1. The location of LED is illustrated at the right figure. Refer to 11-6.1.  
 2. LED is lighted during normal operation.


The flashing frequency shows the number of times the LED blinks after every 2.5-second OFF.  
 (Example) When the flashing frequency is "2".

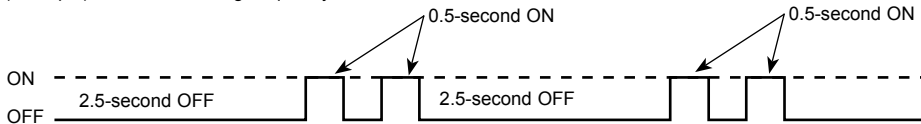

Inverter P.C. board  
**MUFZ-KJ25/35VE**



**MUFZ-KJ50VE**



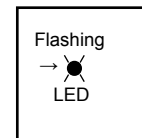


#### 11-4. TROUBLE CRITERION OF MAIN PARTS

**MUFZ-KJ25VE**


**MUFZ-KJ35VE**

**MUFZ-KJ50VE**

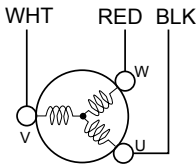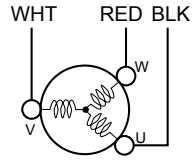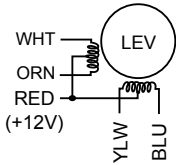Part name	Check method and criterion	Figure											
Defrost thermistor (RT61) Fin temperature thermistor (RT64) Ambient temperature thermistor (RT65) Outdoor heat exchanger temperature thermistor (RT68)	Measure the resistance with a tester.  Refer to 11-6. "Test point diagram and voltage", 1. "Inverter P.C. board", for the chart of thermistor.												
Discharge temperature thermistor (RT62)	Measure the resistance with a tester. Before measurement, hold the thermistor with your hands to warm it up.  Refer to 11-6. "Test point diagram and voltage", 1. "Inverter P.C. board", for the chart of thermistor.												
Compressor	Measure the resistance between terminals using a tester. (Temperature: -10 ~ 40°C) <table border="1" style="margin-left: 20px;"> <thead> <tr> <th></th> <th colspan="2">Normal (Ω)</th> </tr> <tr> <th></th> <th>MUFZ-KJ25/35VE</th> <th>MUFZ-KJ50VE</th> </tr> </thead> <tbody> <tr> <td>U-V</td> <td rowspan="3">1.66 ~ 2.26</td> <td rowspan="3">0.87 ~ 1.18</td> </tr> <tr> <td>U-W</td> </tr> <tr> <td>V-W</td> </tr> </tbody> </table>		Normal (Ω)			MUFZ-KJ25/35VE	MUFZ-KJ50VE	U-V	1.66 ~ 2.26	0.87 ~ 1.18	U-W	V-W	
	Normal (Ω)												
	MUFZ-KJ25/35VE	MUFZ-KJ50VE											
U-V	1.66 ~ 2.26	0.87 ~ 1.18											
U-W													
V-W													
Outdoor fan motor	Measure the resistance between lead wires using a tester. (Temperature: -10 ~ 40°C) <table border="1" style="margin-left: 20px;"> <thead> <tr> <th>Color of lead wire</th> <th colspan="2">Normal (Ω)</th> </tr> <tr> <th></th> <th>MUFZ-KJ25/35VE</th> <th>MUFZ-KJ50VE</th> </tr> </thead> <tbody> <tr> <td>RED – BLK</td> <td rowspan="3">12 ~ 16</td> <td rowspan="3">12 ~ 17</td> </tr> <tr> <td>BLK – WHT</td> </tr> <tr> <td>WHT – RED</td> </tr> </tbody> </table>	Color of lead wire	Normal (Ω)			MUFZ-KJ25/35VE	MUFZ-KJ50VE	RED – BLK	12 ~ 16	12 ~ 17	BLK – WHT	WHT – RED	
Color of lead wire	Normal (Ω)												
	MUFZ-KJ25/35VE	MUFZ-KJ50VE											
RED – BLK	12 ~ 16	12 ~ 17											
BLK – WHT													
WHT – RED													
R. V. coil (21S4)	Measure the resistance using a tester. (Temperature: -10 ~ 40°C) <table border="1" style="margin-left: 20px;"> <thead> <tr> <th colspan="2">Normal (kΩ)</th> </tr> <tr> <th>MUFZ-KJ25/35VE</th> <th>MUFZ-KJ50VE</th> </tr> </thead> <tbody> <tr> <td>1.41 ~ 2.00</td> <td>1.19 ~ 1.78</td> </tr> </tbody> </table>	Normal (kΩ)		MUFZ-KJ25/35VE	MUFZ-KJ50VE	1.41 ~ 2.00	1.19 ~ 1.78						
Normal (kΩ)													
MUFZ-KJ25/35VE	MUFZ-KJ50VE												
1.41 ~ 2.00	1.19 ~ 1.78												
Expansion valve coil (LEV)	Measure the resistance using a tester. (Temperature: -10 ~ 40°C) <table border="1" style="margin-left: 20px;"> <thead> <tr> <th>Color of lead wire</th> <th>Normal (Ω)</th> </tr> <tr> <th colspan="2">MUFZ-KJ25/35/50VE</th> </tr> </thead> <tbody> <tr> <td>RED – ORN</td> <td rowspan="4">37 ~ 54</td> </tr> <tr> <td>RED – WHT</td> </tr> <tr> <td>RED – BLU</td> </tr> <tr> <td>RED – YLW</td> </tr> </tbody> </table>	Color of lead wire	Normal (Ω)	MUFZ-KJ25/35/50VE		RED – ORN	37 ~ 54	RED – WHT	RED – BLU	RED – YLW			
Color of lead wire	Normal (Ω)												
MUFZ-KJ25/35/50VE													
RED – ORN	37 ~ 54												
RED – WHT													
RED – BLU													
RED – YLW													

## 11-5. TROUBLESHOOTING FLOW

### A How to check inverter/compressor

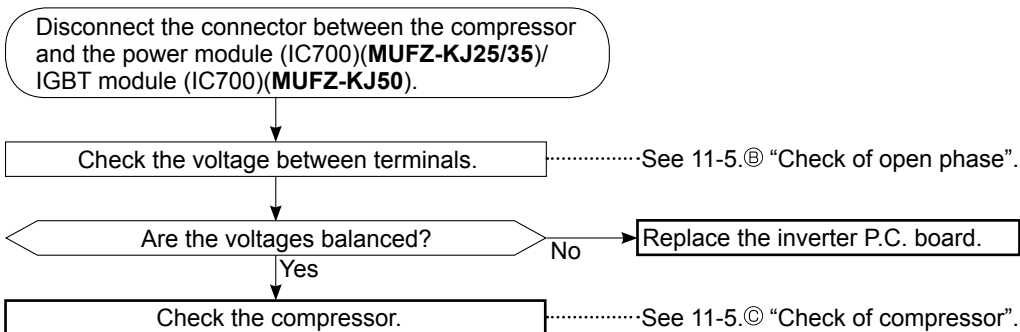

### B Check of open phase

- With the connector between the compressor and the power module (IC700)(MUFZ-KJ25/35)/ IGBT module (IC700)(MUFZ-KJ50) disconnected, activate the inverter and check if the inverter is normal by measuring the **voltage balance** between the terminals.

Output voltage is 50 - 130 V. (The voltage may differ according to the tester.)

<< Operation method >>


Start cooling or heating operation by pressing EMERGENCY OPERATION switch on the indoor unit. (TEST RUN OPERATION: Refer to 8-3.)

<< Measurement point >>

- At 3 points ※ Measure AC voltage between the lead wires at 3 points.
- BLK (U)-WHT (V)
- BLK (U)-RED (W)
- WHT(V)-RED (W)

- NOTE:**
- Output voltage varies according to the power supply voltage.
  - Measure the voltage by analog type tester.
  - During this check, LED of the inverter P.C. board flashes 9 times. (Refer to 11-6.1.)

### C Check of compressor

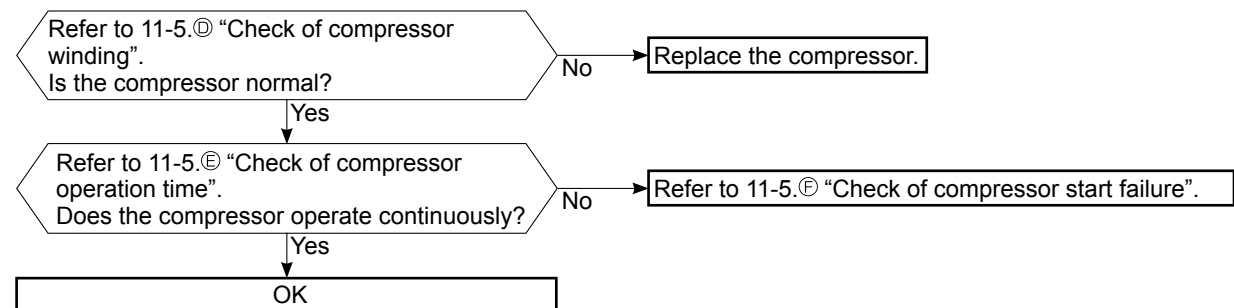

### D Check of compressor winding

- Disconnect the connector between the compressor and the power module (IC700)(MUFZ-KJ25/35)/ IGBT module (IC700)(MUFZ-KJ50), and measure the resistance between the compressor terminals.

<<Measurement point>>

At 3 points

BLK-WHT

BLK-RED

WHT-RED

※ Measure the resistance between the lead wires at 3 points.

<<Judgement>>

Refer to 11-4.

0 [Ω] .....Abnormal [short]

Infinite [Ω] .....Abnormal [open]

**NOTE:** Be sure to zero the ohmmeter before measurement.

### E Check of compressor operation time

- Connect the compressor and activate the inverter. Then measure the time until the inverter stops due to overcurrent.


<<Operation method>>

Start heating or cooling operation by pressing EMERGENCY OPERATION switch on the indoor unit. (TEST RUN OPERATION: Refer to 8-3.)

<<Measurement>>

Measure the time from the start of compressor to the stop of compressor due to overcurrent.

<<Judgement>>

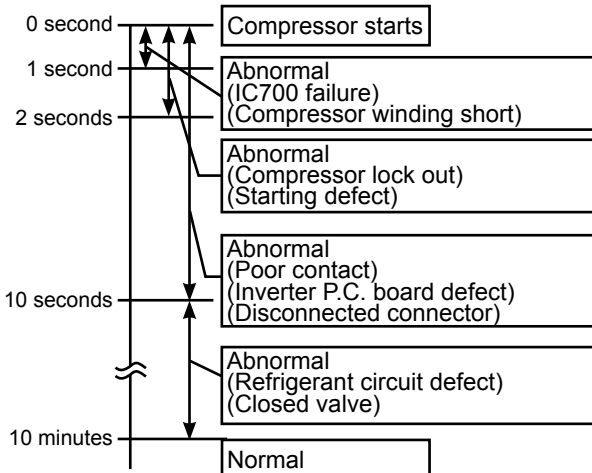

### F Check of compressor start failure

Confirm that ①~④ is normal.



•Electrical circuit check

①. Contact of the compressor connector

②. Output voltage of inverter P.C. board and balance of them (See 11-5.⑥)

③. Direct current voltage between DB61(+) and (-)(MUFZ-KJ25/35)/ JP715(+) and JP30(-)(MUFZ-KJ50) on the inverter P.C. board

④. Voltage between outdoor terminal block S1-S2

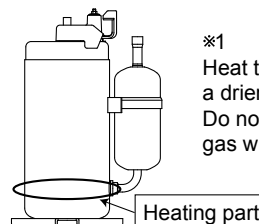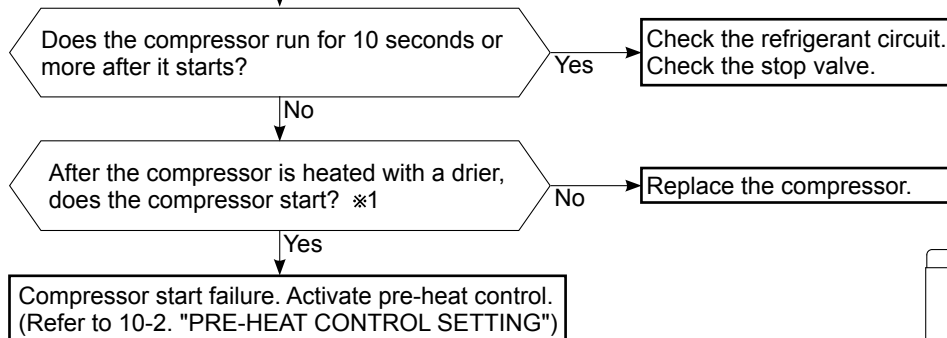

※1 Heat the compressor with a drier for about 20 minutes. Do not recover refrigerant gas while heating.

### ③ Check of outdoor thermistors

Disconnect the connector of thermistor in the Inverter P.C. board (see below table), and measure the resistance of thermistor.

Is the resistance of thermistor normal?  
(Refer to 11-6.1.)

No

Replace the thermistor except RT64.  
When RT64 is abnormal, replace the inverter P.C. board.

Yes

Reconnect the connector of thermistor.  
Turn ON the power supply and press EMERGENCY OPERATION switch.

Does the unit operate for 10 minutes or more  
without showing thermistor abnormality?

No

Replace the inverter P.C. board.

Yes

OK (Cause is poor contact.)

#### MUFZ-KJ25/35

Thermistor	Symbol	Connector, Pin No.	Board
Defrost	RT61	Between CN641 pin1 and pin2	Inverter P.C. board
Discharge temperature	RT62	Between CN641 pin3 and pin4	
Fin temperature	RT64	Between CN642 pin1 and pin2	
Ambient temperature	RT65	Between CN643 pin1 and pin2	
Outdoor heat exchanger temperature	RT68	Between CN644 pin1 and pin3	

#### MUFZ-KJ50


Thermistor	Symbol	Connector, Pin No.	Board
Defrost	RT61	Between CN671 pin1 and pin2	Inverter P.C. board
Discharge temperature	RT62	Between CN671 pin3 and pin4	
Fin temperature	RT64	Between CN673 pin1 and pin2	
Ambient temperature	RT65	Between CN672 pin1 and pin2	
Outdoor heat exchanger temperature	RT68	Between CN671 pin5 and pin6	

## H Check of R.V. coil


### MUFZ-KJ25/35

- ※ First of all, measure the resistance of R.V. coil to check if the coil is defective. Refer to 11-4.
- ※ In case CN721 is disconnected or R.V. coil is open, voltage is generated between the terminal pins of the connector although no signal is being transmitted to R.V. coil.  
Check if CN721 is connected.

#### Unit operates COOL mode even if it is set to HEAT mode.

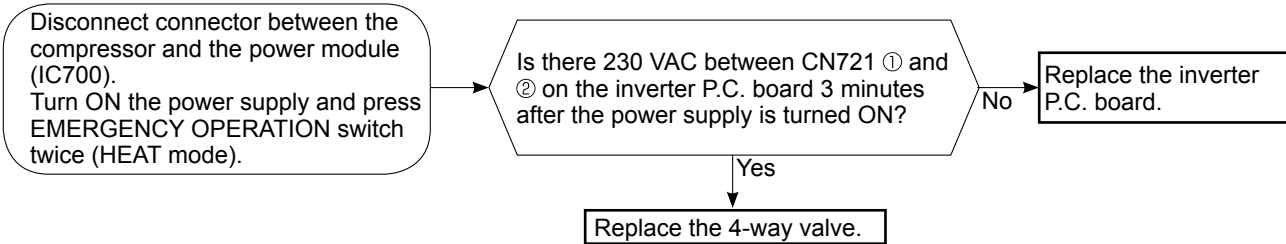


#### Unit operates HEAT mode even if it is set to COOL mode.

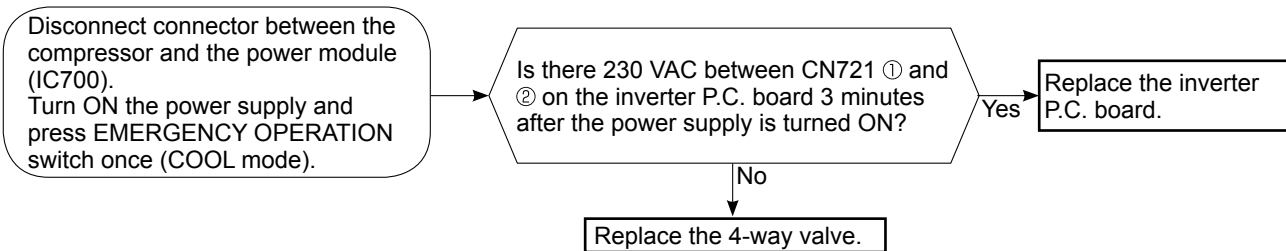


### MUFZ-KJ50

- ※ First of all, measure the resistance of R.V. coil to check if the coil is defective. Refer to 11-4.
- ※ In case CN602 is disconnected or R.V. coil is open, voltage is generated between the terminal pins of the connector although no signal is being transmitted to R.V. coil.  
Check if CN602 is connected.

#### Unit operates COOL mode even if it is set to HEAT mode.

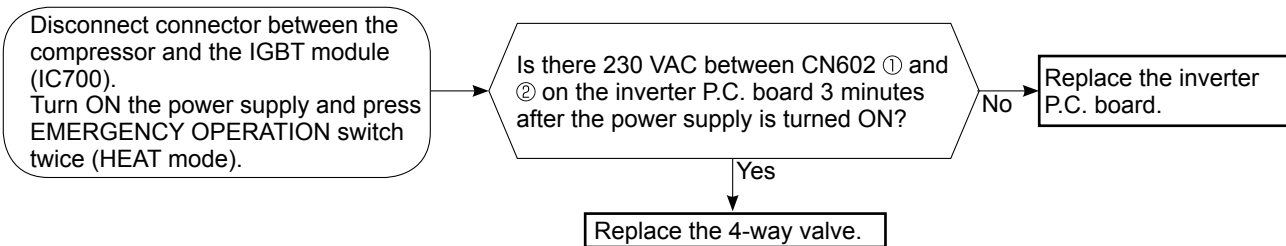

#### Unit operates HEAT mode even if it is set to COOL mode.

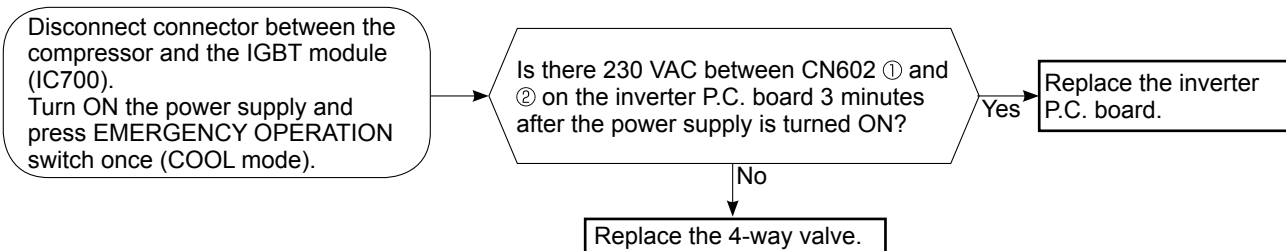

### ① Check of outdoor fan motor

Disconnect the connectors CN931 and CN932 from the inverter P.C. board.  
Check the connection between the connector CN931 and CN932.

Is the resistance between each terminal of outdoor fan motor normal?  
(Refer to 11-4.)

No

(Fixed to either 5 or 0 VDC)

Replace the outdoor fan motor.

Yes

Disconnect CN932 from the inverter P.C. board, and turn on the power supply.

Rotate the outdoor fan motor manually and measure the voltage of CN931.  
Between 1(+) and 5(-)  
Between 2(+) and 5(-)  
Between 3(+) and 5(-)

Does the voltage between each terminal become 5 and 0 VDC repeatedly?

Yes

Does the outdoor fan motor rotate smoothly?

Yes

Replace the inverter P.C. board.

No

Replace the outdoor fan motor.

## Ⓜ Check of power supply

Disconnect the connector between the compressor and the power module (IC700) (MUFZ-KJ25/35)/IGBT module (IC700) (MUFZ-KJ50).  
Turn ON power supply and press EMERGENCY OPERATION switch.

Does POWER lamp on the indoor unit light up?

No

Rectify indoor/outdoor connecting wire.

Yes

Is there voltage 230 VAC between the indoor terminal block S1 and S2?

No

Replace the indoor electronic control P.C. board.

Yes

Is there bus-bar voltage 260 - 370 VDC between DB61 (+) and DB61 (-) (MUFZ-KJ25/35)/325 - 370 VDC between JP715 (+) and JP30 (-) (MUFZ-KJ50) on the inverter P.C. board? (Refer to 11-6.1.)

Yes

Does LED on the inverter P.C. board light up or flash? (Refer to 11-6.1.)

No


Replace the inverter P.C. board.

Yes


If lights up, OK.  
If flashes, refer to 11-3.

No

Check the electric parts in main circuit.

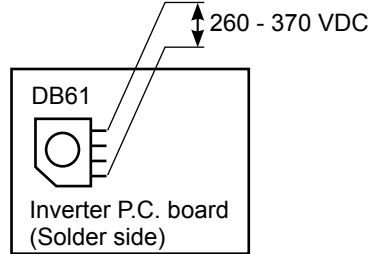

**MUFZ-KJ25/35**

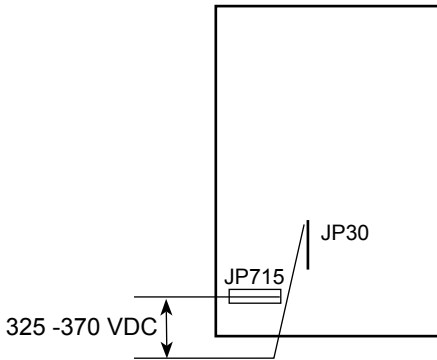

**MUFZ-KJ50**









**K Check of LEV (Expansion valve)**

Turn ON the power supply.  
<Preparation of the remote controller>  
① While pressing both OPERATION SELECT (MODE) button and TEMP + button on the remote controller at the same time, press RESET button.  
② First, release RESET button.  
Hold down the other 2 buttons for another 3 seconds. Make sure that the indicators on the LCD screen shown in the right figure are all displayed. Then release the buttons.

**MFZ-KJ25VE  
MFZ-KJ35VE  
MFZ-KJ50VE**

**MFZ-KJ25VE2  
MFZ-KJ35VE2  
MFZ-KJ50VE2**

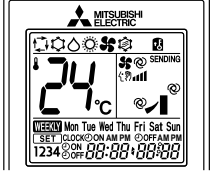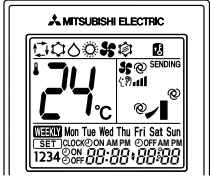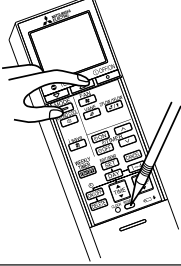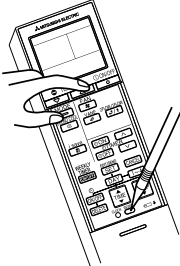

Press OPERATE/STOP (ON/OFF)(MFZ-KJ25/35/50VE)/ STOP/OPERATE (OFF/ON)(MFZ-KJ25/35/50VE2) button of the remote controller (the set temperature is displayed) with the remote controller headed towards the indoor unit. ※1

Expansion valve operates in full-opening direction.

Do you hear the expansion valve "click, click....."?  
Do you feel the expansion valve vibrates on touching it? Yes → OK

No

Is LEV coil properly fixed to the expansion valve? No → Properly fix the LEV coil to the expansion valve.

Yes

Does the resistance of LEV coil have the characteristics? (Refer to 11-4.) Yes →

No

Replace the LEV coil.

Measure each voltage between connector pins of CN724 on the inverter P.C. board.  
1. Pin③(-) — Pin①(+)  
2. Pin④(-) — Pin①(+)  
3. Pin⑤(-) — Pin①(+)  
4. Pin⑥(-) — Pin①(+)  
Is there about 3 - 5 VAC between each?  
**NOTE:** Measure the voltage by an analog tester.

No → Replace the inverter P.C. board.


Yes

Replace the expansion valve.

※1. Regardless of normal or abnormal condition, a short beep is emitted once the signal is received.


**NOTE:** After check of LEV, do the undermentioned operations.  
1. Turn OFF the power supply and turn it ON again.  
2. Press RESET button on the remote controller.

## Ⓛ Check of inverter P.C. board

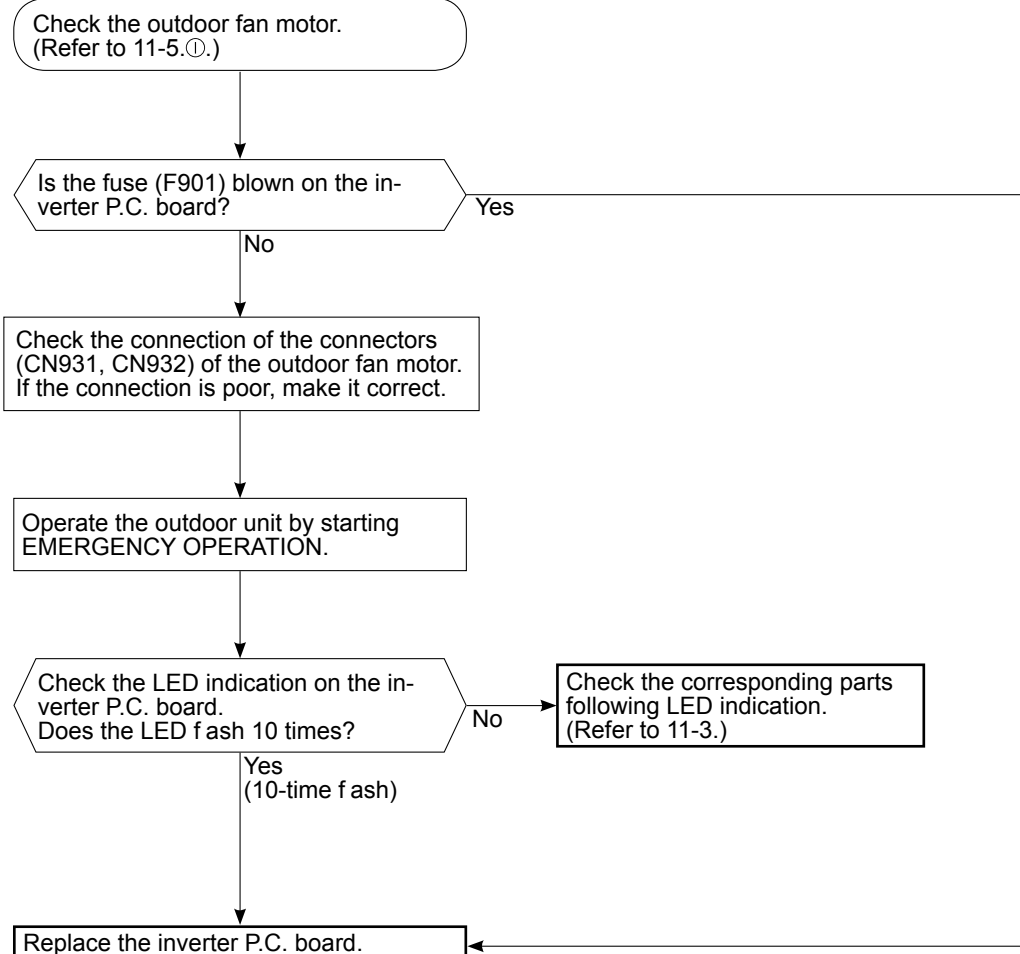

## M How to check miswiring and serial signal error


### MUFZ-KJ25/35

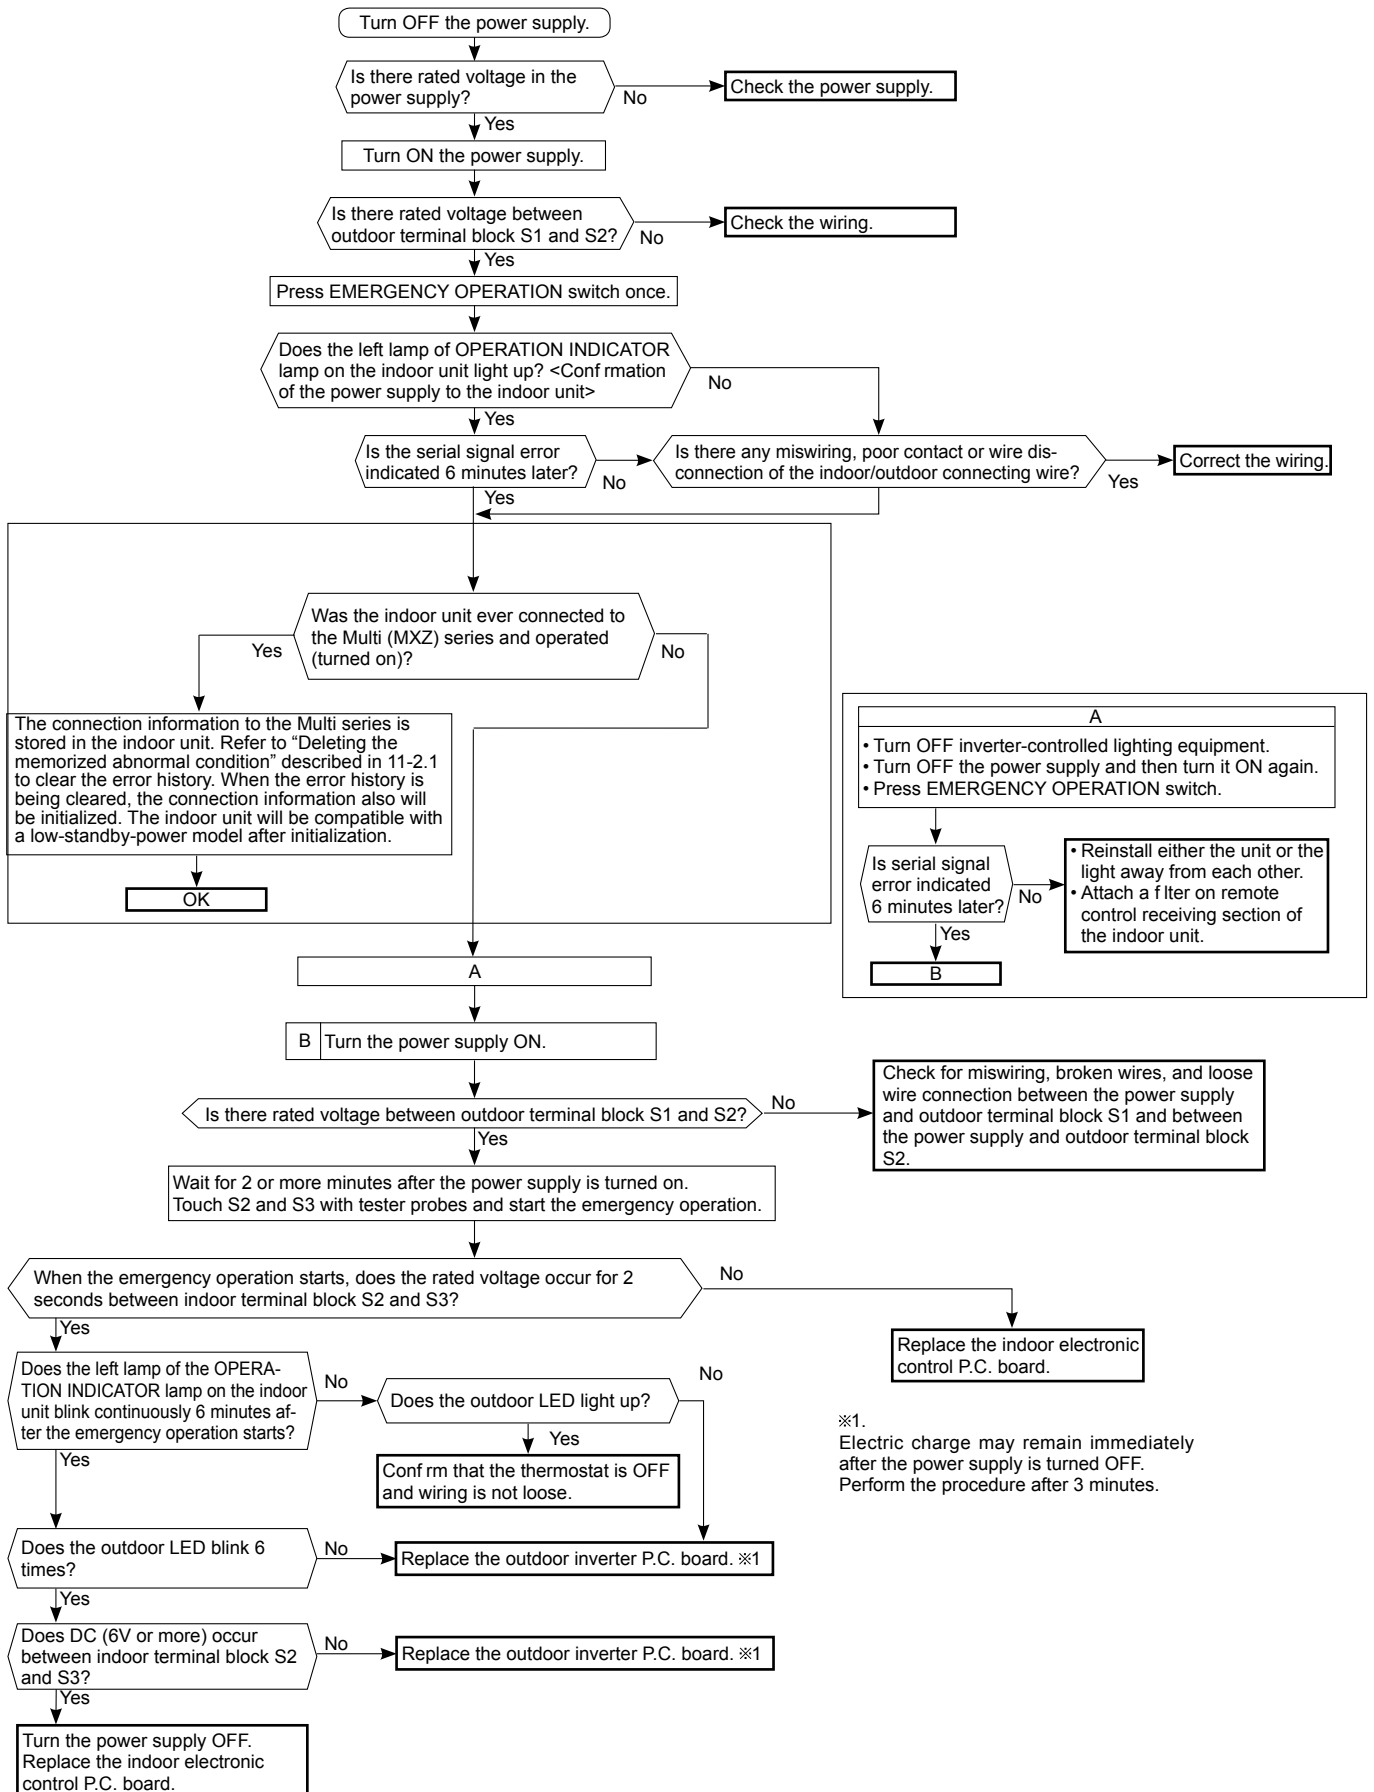

※1.  
Electric charge may remain immediately after the power supply is turned OFF. Perform the procedure after 3 minutes.

**MUFZ-KJ50**


**NOTE:** Refer to the indoor unit service manual.

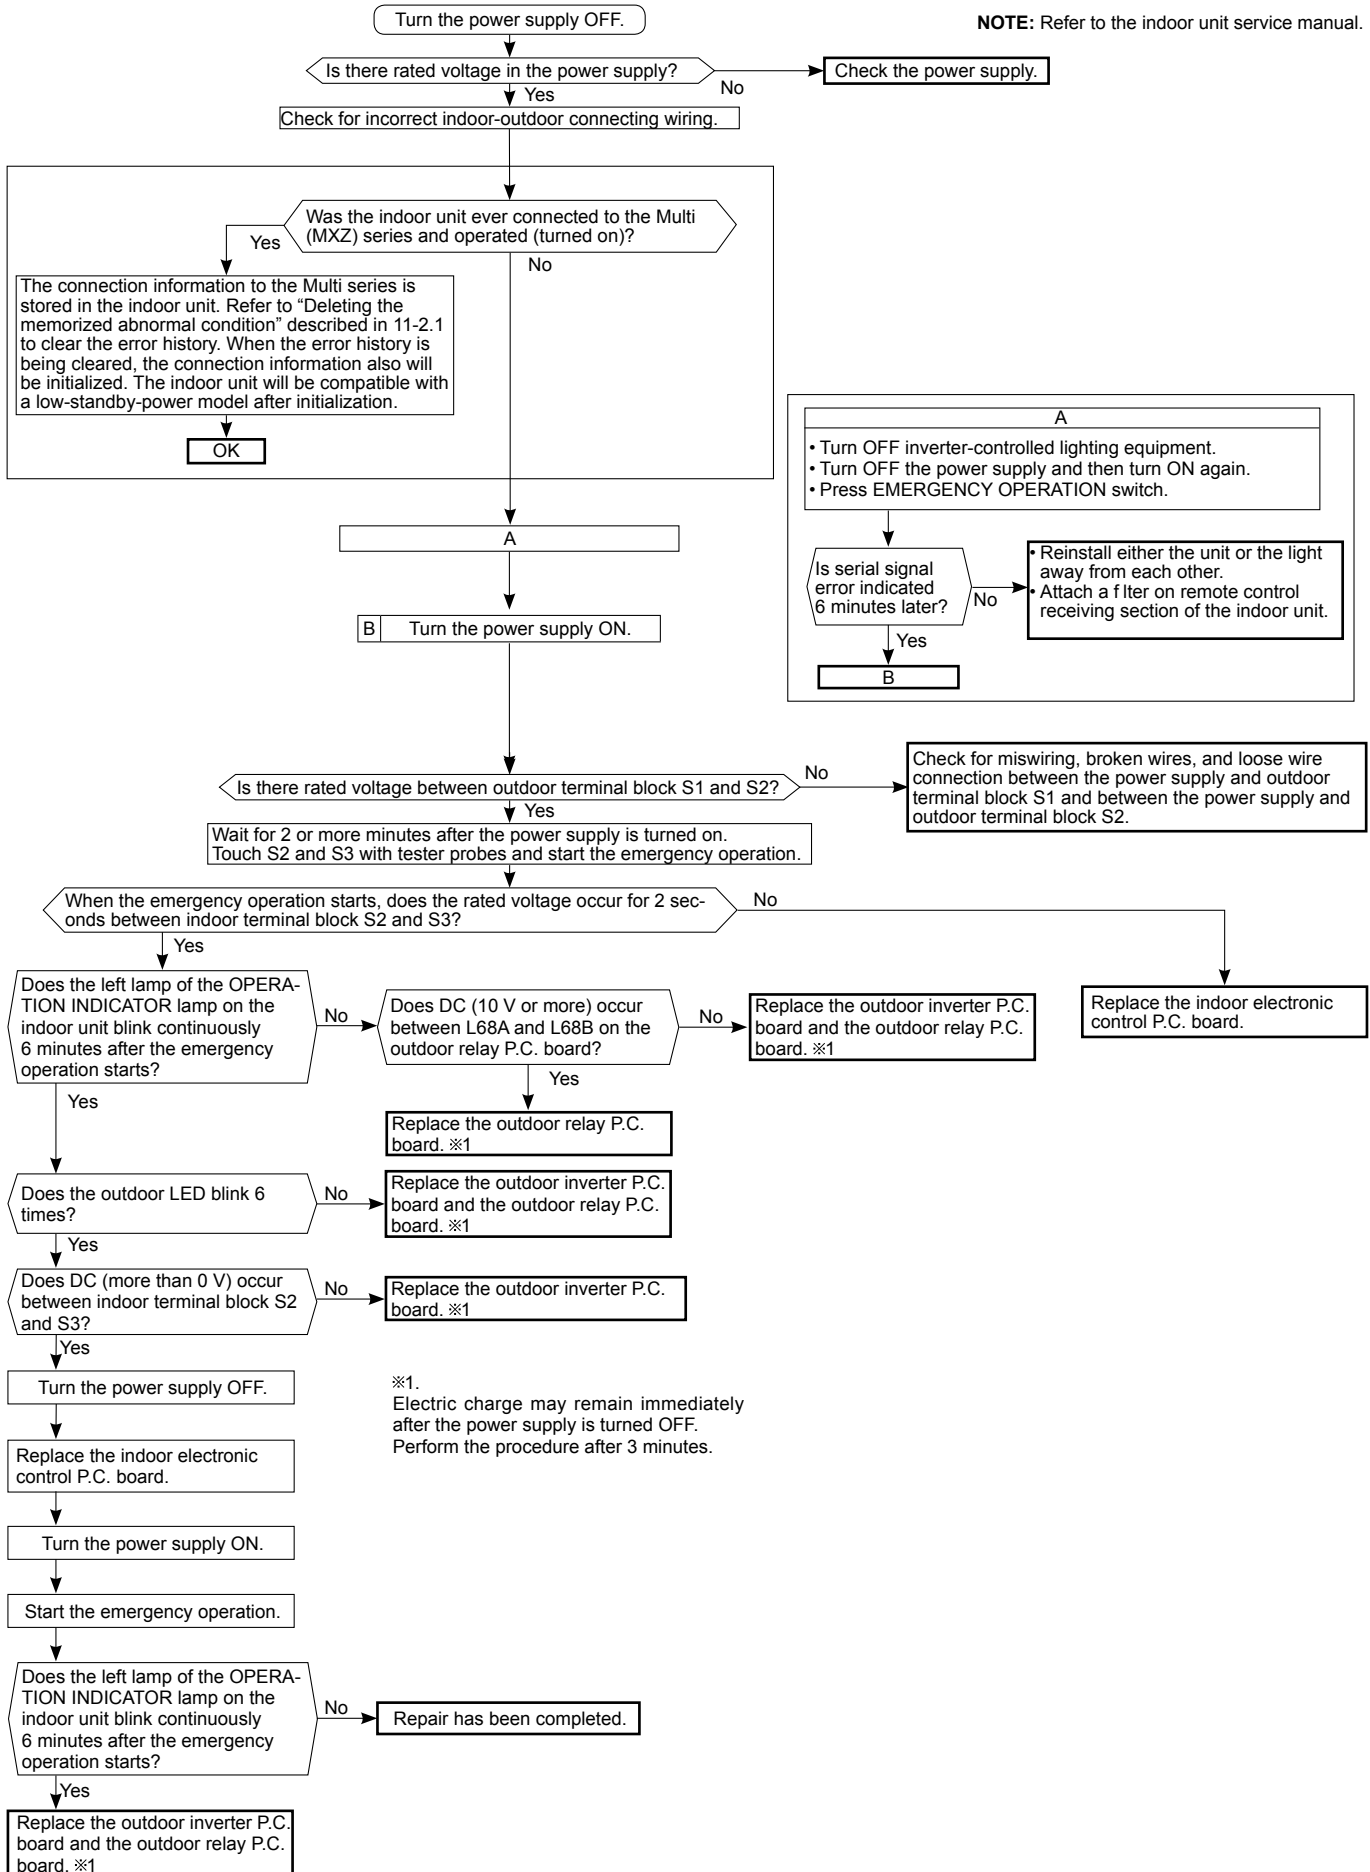

※1.  
Electric charge may remain immediately after the power supply is turned OFF. Perform the procedure after 3 minutes.




**N Check of outdoor refrigerant circuit**

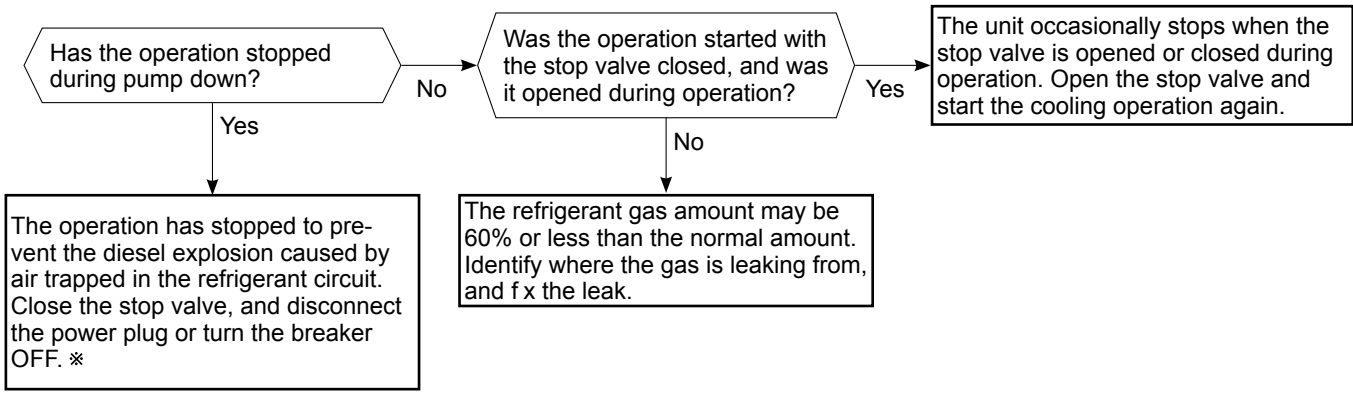

**\* CAUTION : Do not start the operation again to prevent hazards.**

## ⊙ Electromagnetic noise enters into TV sets or radios

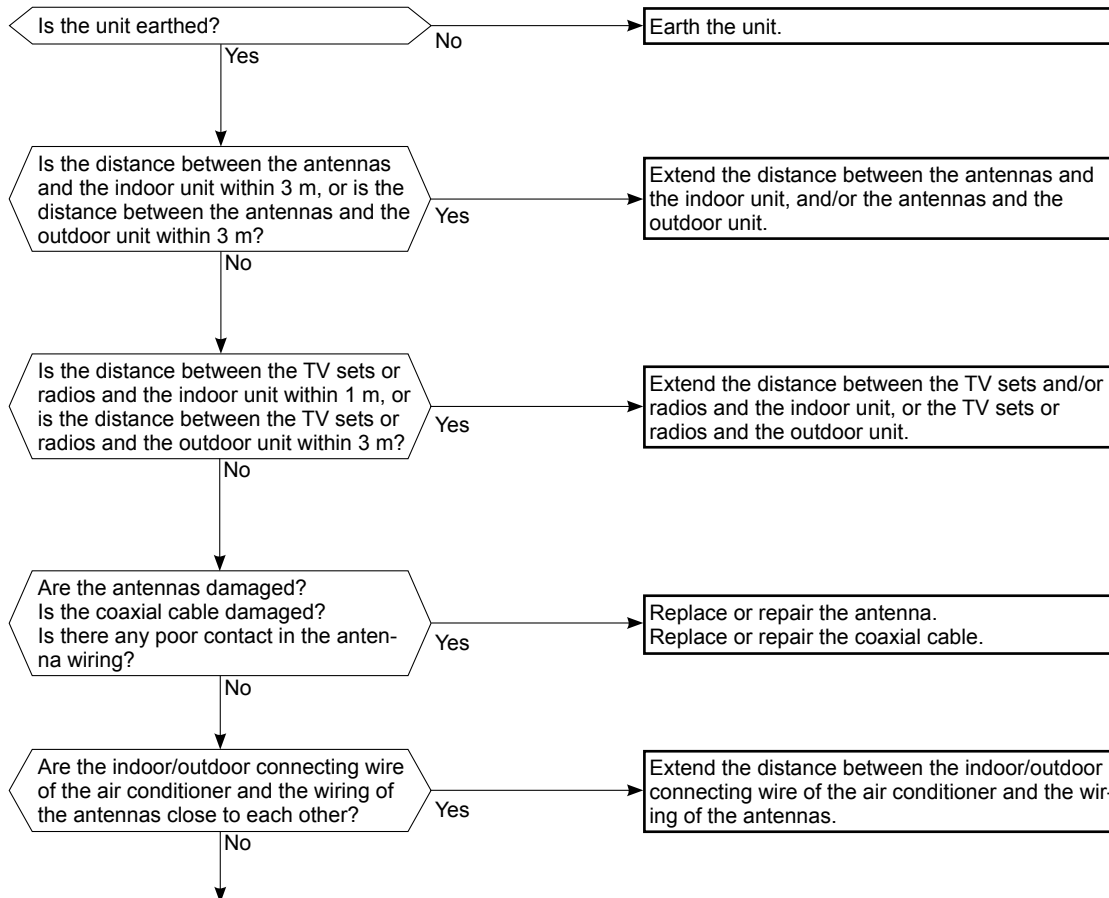

Even if all of the above conditions are fulfilled, the electromagnetic noise may enter, depending on the electric field strength or the installation condition (combination of specific conditions such as antennas or wiring).

Check the following before asking for service.





1. Devices affected by the electromagnetic noise  
TV sets, radios (FM/AM broadcast, shortwave)
2. Channel, frequency, broadcast station affected by the electromagnetic noise
3. Channel, frequency, broadcast station unaffected by the electromagnetic noise
4. Layout of:  
indoor/outdoor unit of the air conditioner, indoor/outdoor wiring, earth wire, antennas, wiring from antennas, receiver
5. Electric field intensity of the broadcast station affected by the electromagnetic noise
6. Presence or absence of amplifier such as booster
7. Operation condition of air conditioner when the electromagnetic noise enters in
  - 1) Turn OFF the power supply once, and then turn ON the power supply. In this situation, check for the electromagnetic noise.
  - 2) Within 3 minutes after turning ON the power supply, press OPERATE/STOP (ON/OFF)(MFZ-KJ25/35/50VE)/ STOP/ OPERATE (OFF/ON)(MFZ-KJ25/35/50VE2) button on the remote controller for power ON, and check for the electromagnetic noise.
  - 3) After a short time (3 minutes later after turning ON), the outdoor unit starts running. During operation, check for the electromagnetic noise.
  - 4) Press OPERATE/STOP (ON/OFF)(MFZ-KJ25/35/50VE)/ STOP/OPERATE (OFF/ON)(MFZ-KJ25/35/50VE2) button on the remote controller for power OFF, when the outdoor unit stops but the indoor/outdoor communication still runs on. In this situation, check for the electromagnetic noise.

# 11-6. TEST POINT DIAGRAM AND VOLTAGE


## 1. Inverter P.C. board

MUFZ-KJ25VE




MUFZ-KJ35VE

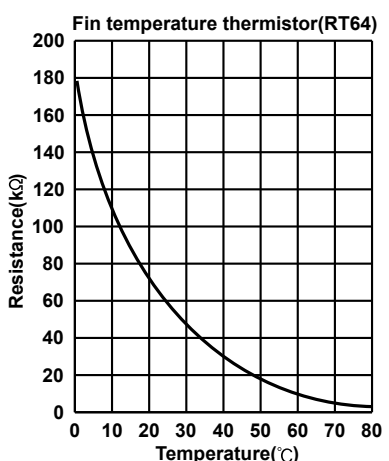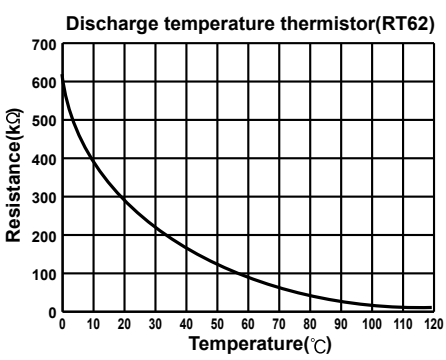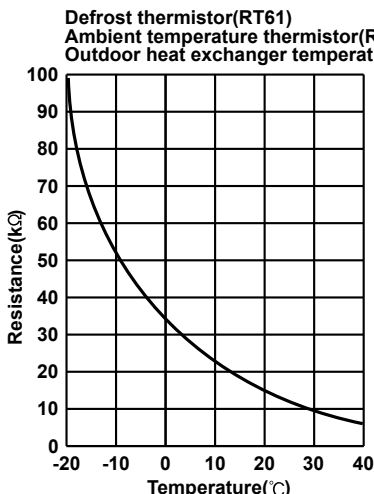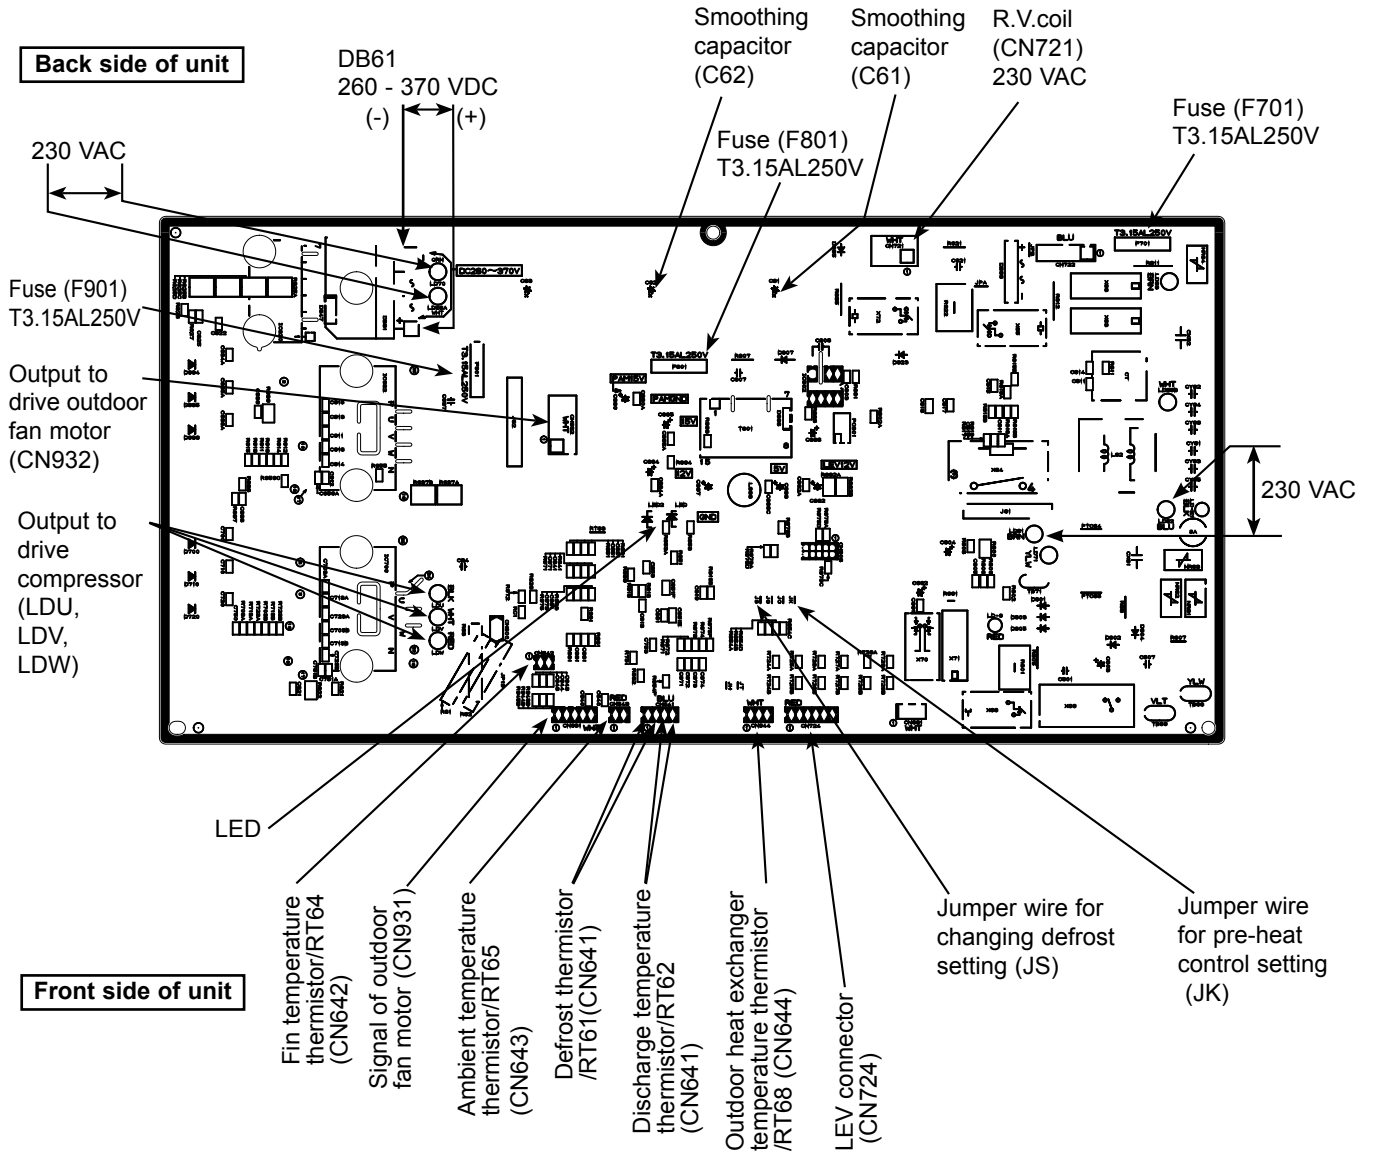

# MUFZ-KJ50VE

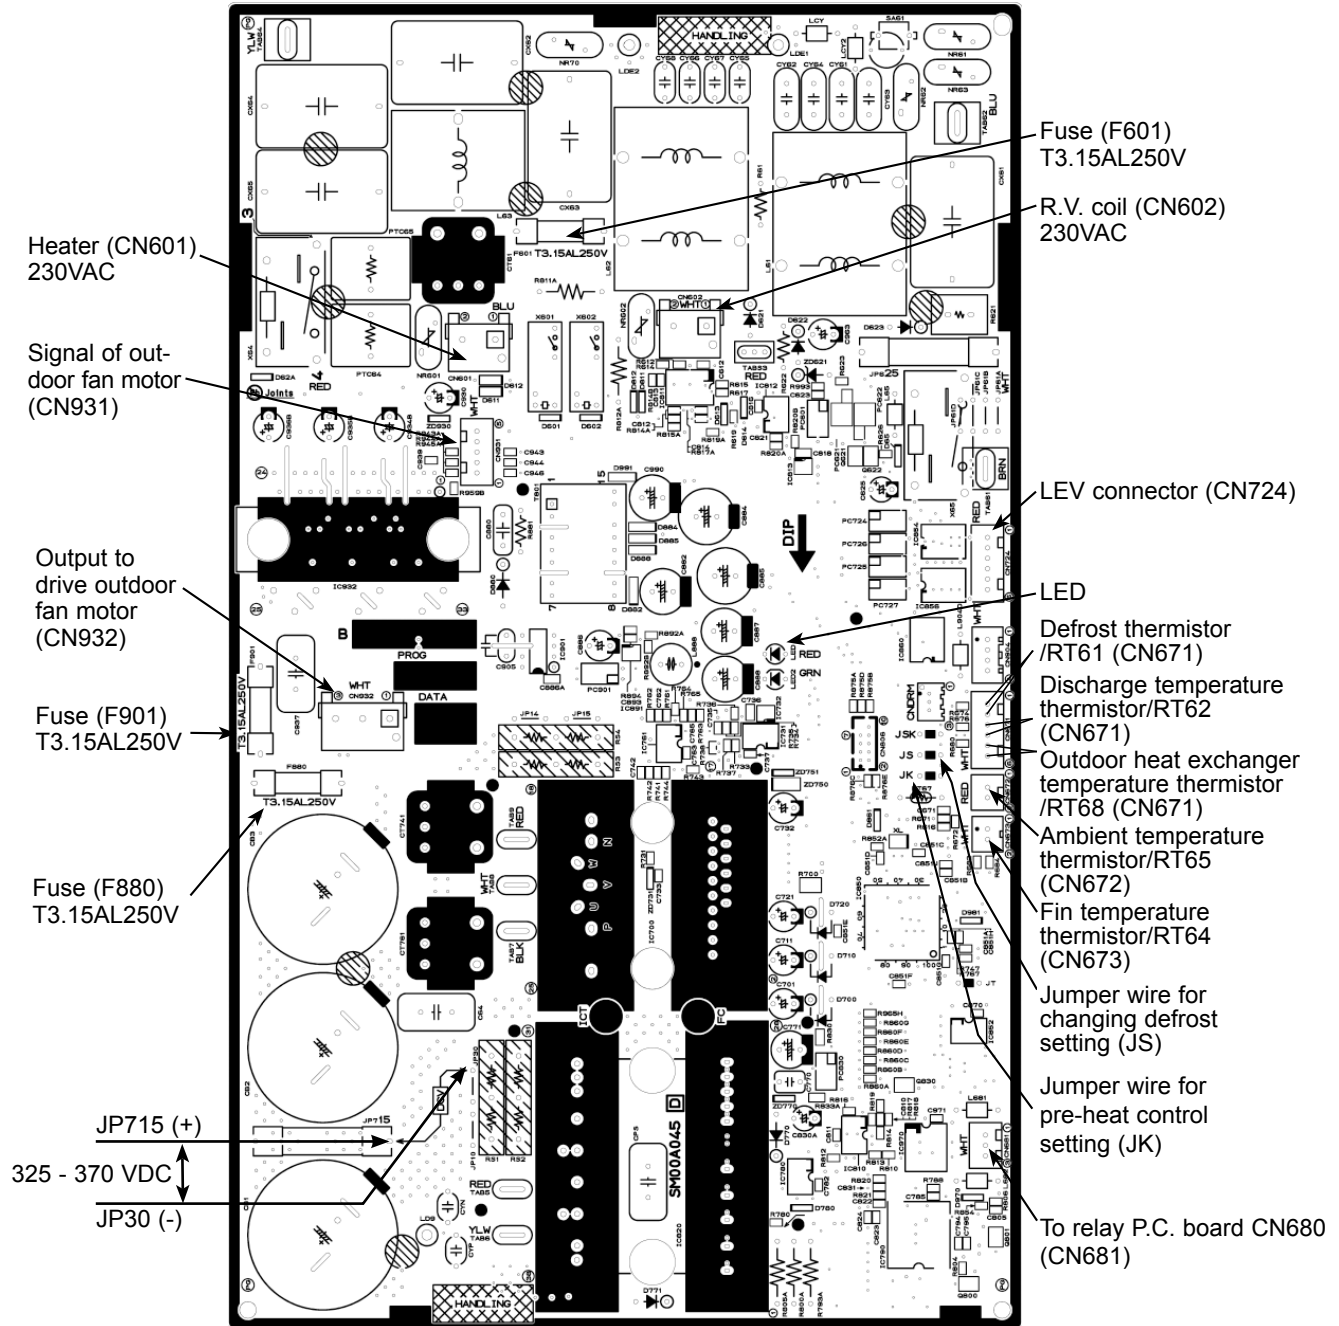


Defrost thermistor(RT61)  
Ambient temperature thermistor(RT65)  
Outdoor heat exchanger temperature thermistor(RT68)

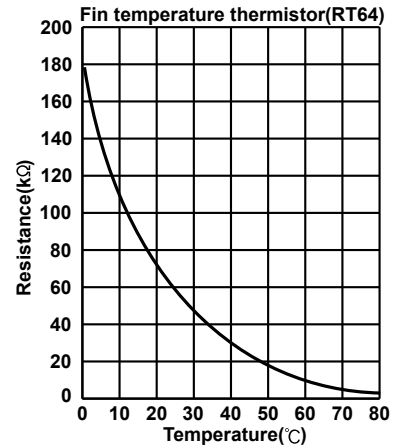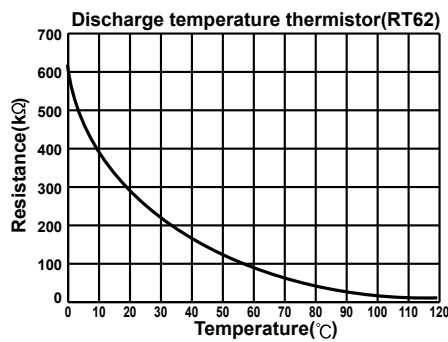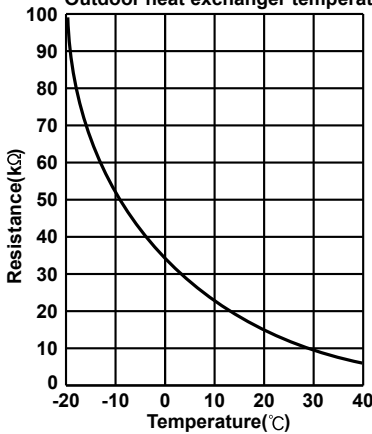



2. Relay P.C. board  
**MUFZ-KJ50VE**

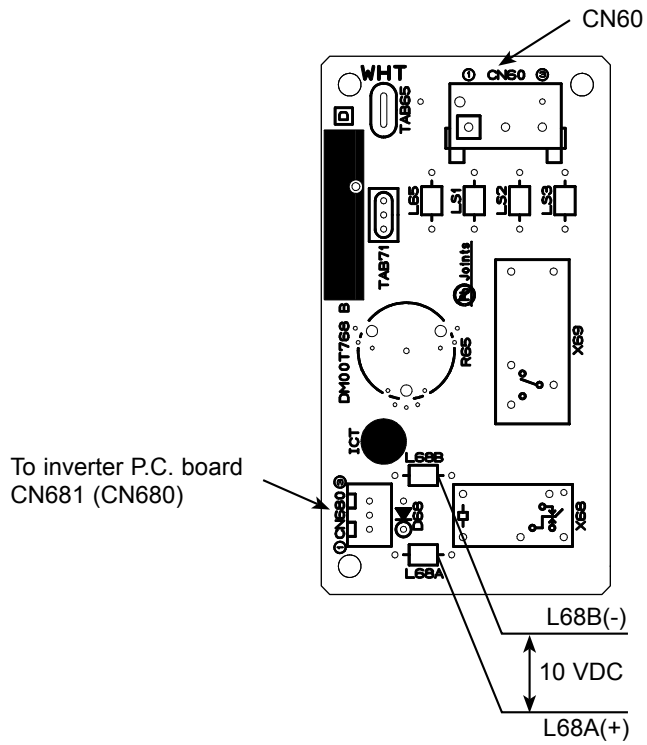

<"Terminal with locking mechanism" Detaching points>


The terminal which has the locking mechanism can be detached as shown below.

There are 2 types (refer to (1) and (2)) of the terminal with locking mechanism.


The terminal without locking mechanism can be detached by pulling it out.

Check the shape of the terminal before detaching.

(1) Slide the sleeve and check if there is a locking lever or not.

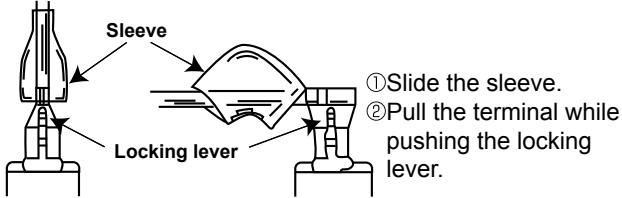

(2) The terminal with this connector has the locking mechanism.

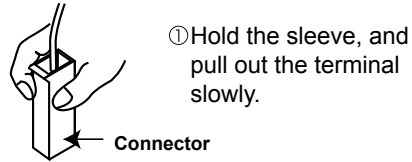

**12-1. MUFZ-KJ25VE  
MUFZ-KJ35VE**

**NOTE:** Turn OFF the power supply before disassembly.

OPERATING PROCEDURE	PHOTOS
<p><b>1. Removing the cabinet</b></p> <p>(1) Remove the screw fixing the service panel.                      (2) Pull down the service panel and remove it.                      (3) Disconnect the power supply and indoor/outdoor connecting wire.                      (4) Remove the screws fixing the top panel.                      (5) Remove the top panel.                      (6) Remove the screws fixing the cabinet.                      (7) Remove the cabinet.                      (8) Remove the screws fixing the back panel.                      (9) Remove the back panel.</p>	<p><b>Photo 1</b></p> <p>Screws of the top panel Screws of the top panel Back panel Screws of the back panel Screws of the cabinet Service panel</p> <p><b>Photo 2</b></p> <p>Screw of the cabinet Screws of the terminal block support and the back panel Screw of the service panel Direction to remove Screws of the cabinet Hooks</p>

## OPERATING PROCEDURE

### 2. Removing the inverter assembly, inverter P.C. board

- (1) Remove the cabinet and panels. (Refer to 1.)
- (2) Disconnect the lead wire to the reactor and the following connectors:  
<Inverter P.C. board>  
CN721 (R.V. coil)  
CN931, CN932 (Fan motor)  
CN641 (Defrost thermistor and discharge temperature thermistor)  
CN643 (Ambient temperature thermistor)  
CN644 (Outdoor heat exchanger temperature thermistor)  
CN724 (LEV)
- (3) Remove the compressor connector (CN61).
- (4) Remove the screws fixing the heat sink support and the separator.
- (5) Remove the fixing screws of the terminal block support and the back panel.
- (6) Remove the inverter assembly.
- (7) Remove the screw of the earth wire and screw of the terminal block support.
- (8) Remove the heat sink support from the P.C. board support.
- (9) Remove the screw of the inverter P.C. board and remove the inverter P.C. board from the P.C. board support.

### 3. Removing R.V. coil

- (1) Remove the cabinet and panels. (Refer to 1.)
- (2) Disconnect the following connectors:  
<Inverter P.C. board>  
CN721 (R.V. coil)
- (3) Remove the R.V. coil.


### 4. Removing the discharge temperature thermistor, defrost thermistor, outdoor heat exchanger temperature thermistor and ambient temperature thermistor

- (1) Remove the cabinet and panels. (Refer to 1.)
- (2) Disconnect the lead wire to the reactor and the following connectors:  
<Inverter P.C. board>  
CN641 (Defrost thermistor and discharge temperature thermistor)  
CN643 (Ambient temperature thermistor)  
CN644 (Outdoor heat exchanger temperature thermistor)
- (3) Pull out the discharge temperature thermistor from its holder.
- (4) Pull out the defrost thermistor from its holder. (Photo 6)
- (5) Pull out the outdoor heat exchanger temperature thermistor from its holder. (Photo 6)
- (6) Pull out the ambient temperature thermistor from its holder.


## PHOTOS

**Photo 3**

Screws of the heat sink support and the separator      Screws of the terminal block support and the back panel

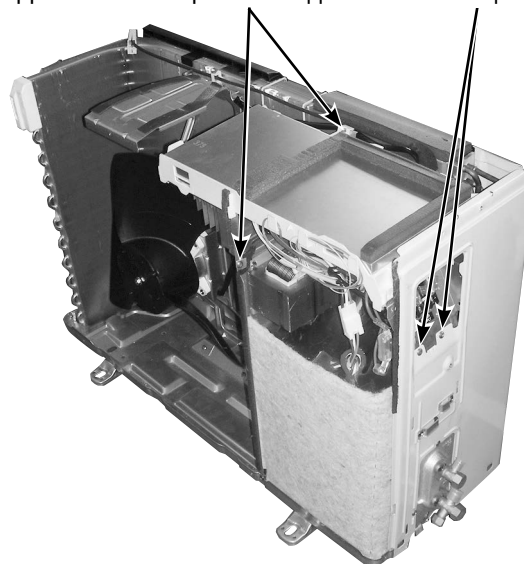

**Photo 4 (Inverter assembly)**

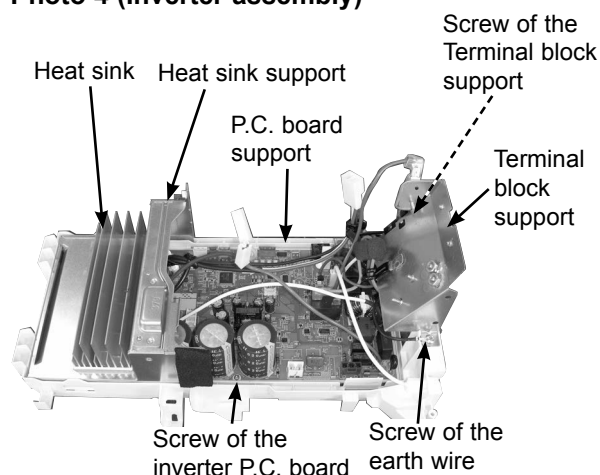

**Photo 5**

Screw of the R.V. coil



Discharge temperature thermistor

## OPERATING PROCEDURE


### 5. Removing outdoor fan motor

- (1) Remove the cabinet and panels. (Refer to 1.)
- (2) Disconnect the following connectors:  
<Inverter P.C. board>  
CN931, CN932 (Fan motor)
- (3) Remove the propeller fan nut.
- (4) Remove the propeller fan.
- (5) Remove the screws fixing the fan motor.
- (6) Remove the fan motor.

### 6. Removing the compressor and 4-way valve


- (1) Remove the cabinet and panels. (Refer to 1.)
- (2) Remove the inverter assembly. (Refer to 2.)
- (3) Recover gas from the refrigerant circuit.  
**NOTE:** Recover gas from the pipes until the pressure gauge shows 0 kg/cm<sup>2</sup> (0 MPa).
- (4) Detach the brazed part of the suction and the discharge pipe connected with compressor.
- (5) Remove the nuts of compressor legs.
- (6) Remove the compressor.
- (7) Detach the brazed part of pipes connected with 4-way valve.

#### Photo 9

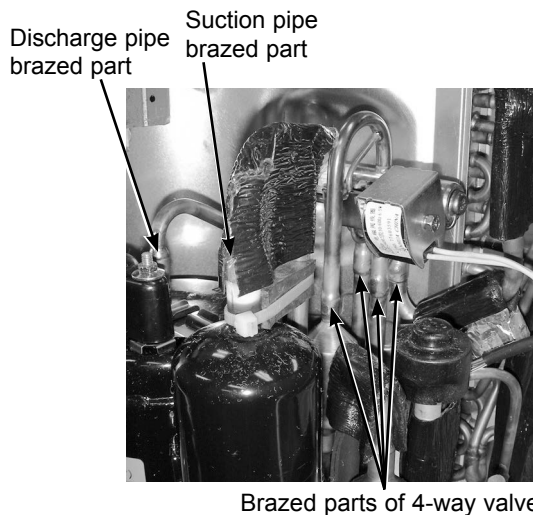


## PHOTOS


#### Photo 6

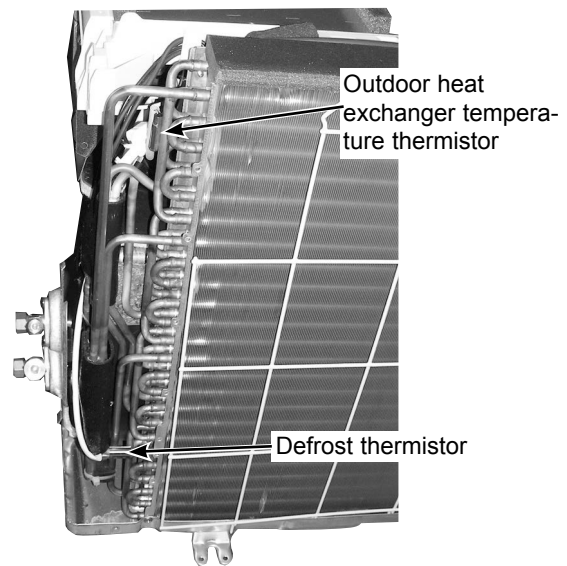

#### Photo 7


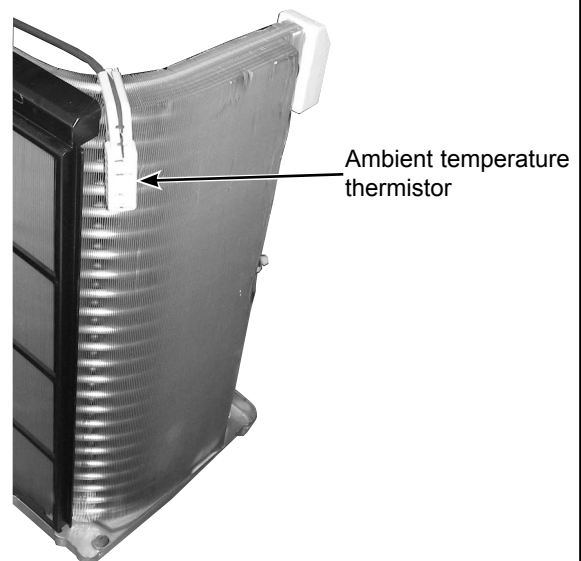


#### Photo 8

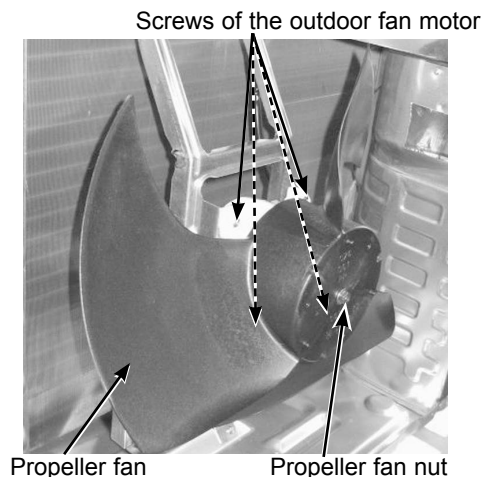

## 12-2. MUFZ-KJ50VE

**NOTE:** Turn OFF the power supply before disassembly.

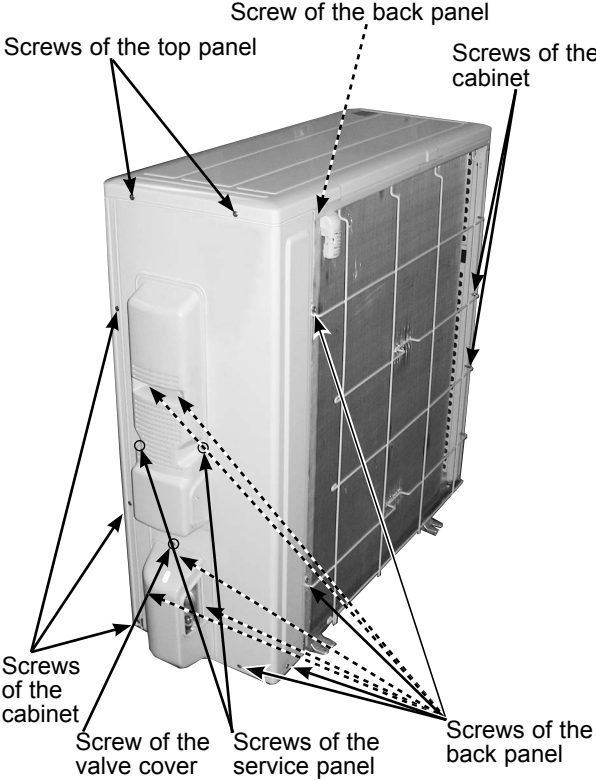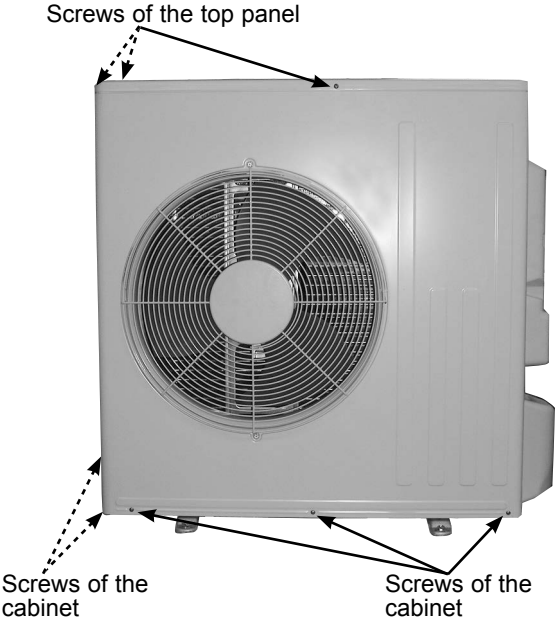OPERATING PROCEDURE	PHOTOS
<p><b>1. Removing the cabinet</b></p> <ol style="list-style-type: none"><li>(1) Remove the screws of the service panel.</li><li>(2) Remove the screws of the top panel.</li><li>(3) Remove the screw of the valve cover.</li><li>(4) Remove the service panel.</li><li>(5) Remove the top panel.</li><li>(6) Remove the valve cover.</li><li>(7) Disconnect the power supply and indoor/outdoor connecting wire.</li><li>(8) Remove the screws of the cabinet.</li><li>(9) Remove the cabinet.</li><li>(10) Remove the screws of the back panel.</li><li>(11) Remove the back panel.</li></ol> <p><b>Photo 2</b></p>  <p>Screw of the back panel</p> <p>Screws of the top panel</p> <p>Screws of the cabinet</p> <p>Screws of the cabinet</p> <p>Screws of the cabinet</p> <p>Screws of the cabinet</p> <p>Screw of the valve cover</p> <p>Screws of the service panel</p> <p>Screws of the back panel</p>	<p><b>Photo 1</b></p>  <p>Screws of the top panel</p> <p>Screws of the cabinet</p> <p>Screws of the cabinet</p>

## OPERATING PROCEDURE

### 2. Removing the inverter assembly, inverter P.C. board and relay P.C. board

- (1) Remove the cabinet and panels. (Refer to 1.)
- (2) Disconnect the lead wire to the reactor and the following connectors:
  - <Inverter P.C. board>
  - CN602 (R.V. coil)
  - CN931, CN932 (Fan motor)
  - CN671 (Defrost thermistor, discharge temperature thermistor and outdoor heat exchanger temperature thermistor)
  - CN672 (Ambient temperature thermistor)
  - CN724 (LEV)
- (3) Remove the compressor connector.
- (4) Remove the screws fixing the relay panel.
- (5) Remove the relay panel.
- (6) Remove the earth wires and the lead wires of the inverter P.C. board.
- (7) Remove the screws of the P.B. support.
- (8) Remove the inverter P.C. board from the relay panel.
- (9) Disconnect the following connectors:
  - <Relay P.C. board>
  - CN60 (Terminal block)
  - CN680 (Inverter P.C. board)
  - TAB65 (Inverter P.C. board)
  - TB71
- (10) Remove the screws fixing the P.B. holder.
- (11) Remove the relay P.C. board from the P.B. holder.

### 3. Removing R.V. coil

- (1) Remove the cabinet and panels. (Refer to 1.)
- (2) Disconnect the following connector:
  - <Inverter P.C. board>
  - CN602 (R.V. coil)
- (3) Remove the R.V. coil.

## PHOTOS

Photo 3

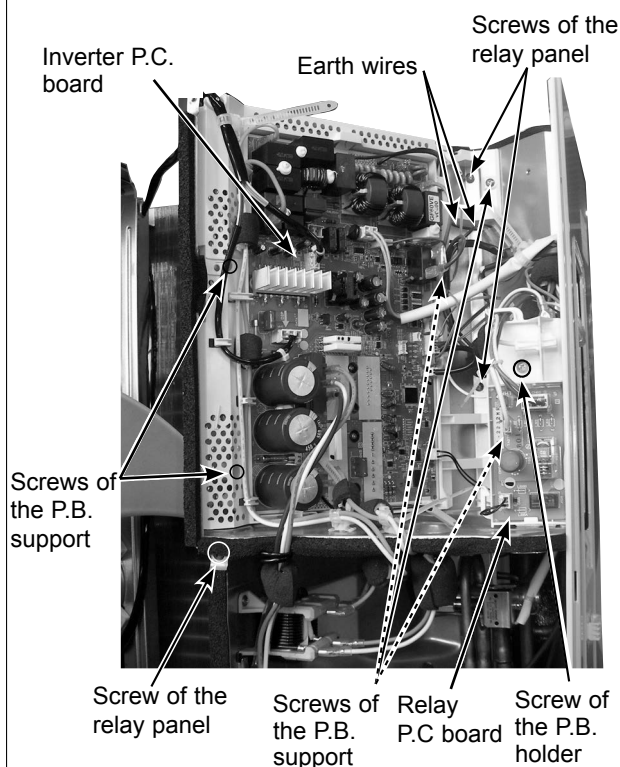


Photo 4



## OPERATING PROCEDURE

### 4. Removing the discharge temperature thermistor, defrost thermistor, outdoor heat exchanger temperature thermistor and ambient temperature thermistor

- (1) Remove the cabinet and panels. (Refer to 1.)
- (2) Disconnect the lead wire to the reactor and the following connectors:
  - <Inverter P.C. board>
  - CN671 (Defrost thermistor, discharge temperature thermistor and outdoor heat exchanger temperature thermistor)
  - CN672 (Ambient temperature thermistor)
- (3) Pull out the discharge temperature thermistor from its holder. (Photo 7)
- (4) Pull out the defrost thermistor from its holder.
- (5) Pull out the outdoor heat exchanger temperature thermistor from its holder.
- (6) Pull out the ambient temperature thermistor from its holder.

### 5. Removing outdoor fan motor

- (1) Remove the top panel, cabinet and service panel. (Refer to 1.)
- (2) Disconnect the following connectors:
  - <Inverter P.C. board>
  - CN931 and CN932 (Fan motor)
- (3) Remove the propeller fan.
- (4) Remove the screws fixing the fan motor.
- (5) Remove the fan motor.

### 6. Removing the compressor and 4-way valve

- (1) Remove the top panel, cabinet and service panel. (Refer to 1.)
- (2) Remove the back panel. (Refer to 1.)
- (3) Remove the inverter assembly. (Refer to 2.)
- (4) Recover gas from the refrigerant circuit.
 

**NOTE:** Recover gas from the pipes until the pressure gauge shows 0 kg/cm<sup>2</sup> (0 MPa).
- (5) Detach the brazed part of the suction and the discharge pipe connected with compressor.
- (6) Remove the compressor nuts.
- (7) Remove the compressor.
- (8) Detach the brazed parts of 4-way valve and pipe. (Photo 4)

## PHOTOS

Photo 5

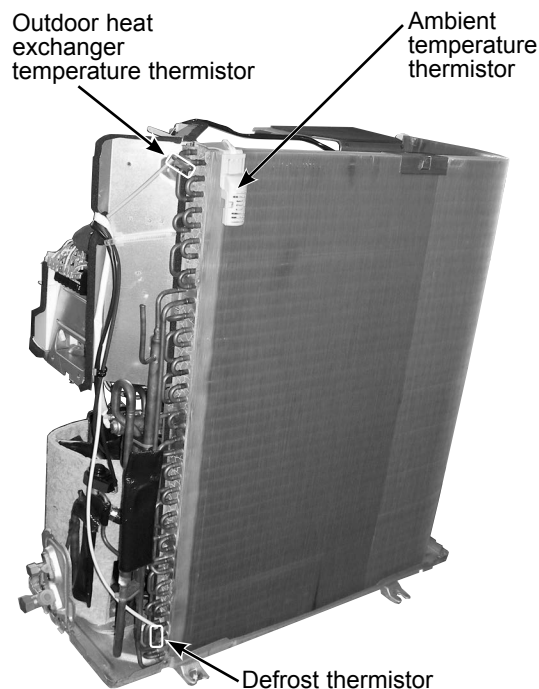


Photo 6


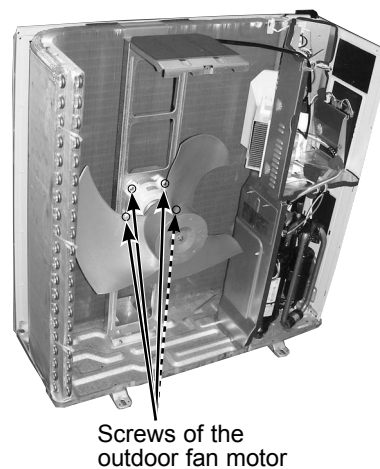


Photo 7

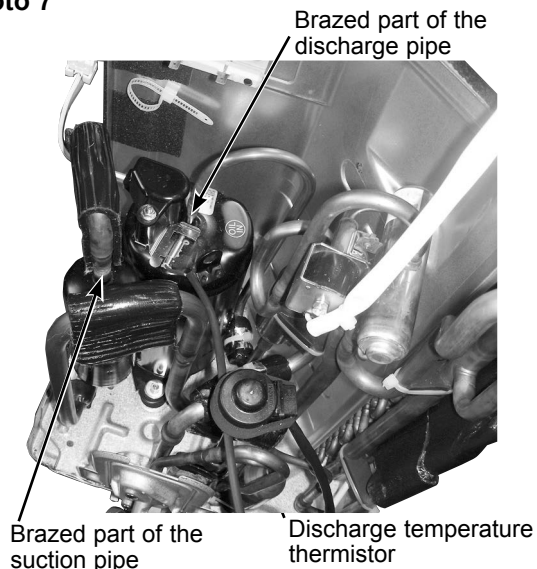

# **MITSUBISHI ELECTRIC CORPORATION**

HEAD OFFICE: TOKYO BLDG., 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN

**© Copyright 2013 MITSUBISHI ELECTRIC CORPORATION**  
**Distributed in Jan. 2016. No. OBH667 REVISED EDITION-D**  
**Distributed in Aug. 2014. No. OBH667 REVISED EDITION-C**  
**Distributed in Jan. 2014. No. OBH667 REVISED EDITION-B**  
**Distributed in Oct. 2013. No. OBH667 REVISED EDITION-A**  
**Distributed in Jun. 2013. No. OBH667**  
**Made in Japan**

New publication, effective Jan. 2016  
Specifications are subject to change without notice.